

Immobiliser Function List			
Software Version: 26.32			
Automaker	Model	System	Function
BESTURN	Old besturn(CAN)	Immobiliser	1. Number of keys 2. Add a key 3. All keys lost
BESTURN	B50	Immobiliser	1. ECU identification 2. Fault codes 3. Erase DTC 4. Live data 5. Erase keys 6. Program keys
BESTURN	B70	Immobiliser	1. ECU identification 2. Fault codes 3. Erase DTC 4. Live data 5. Erase keys 6. Program keys
BESTURN	X80	Immobiliser	1. ECU identification 2. Fault codes 3. Erase DTC 4. Live data 5. Erase keys 6. Program keys
BESTURN	B90	Immobiliser	1. ECU identification 2. Fault codes 3. Erase DTC 4. Live data 5. Erase keys 6. Program keys
BESTURN	Oley	Immobiliser	1. ECU identification 2. Fault codes
BESTURN	B30	Immobiliser	1.All Key Lost
BESTURN	B70	Smart key system	1.Key Programe 2.PEPS Programe

BESTURN	B90	Smart key system	1.Key Programe 2.PEPS Programe
BESTURN	X80	Smart key system	1.Key Programe 2.PEPS Programe
BESTURN	New B70	Remote system	1.Program remote
BESTURN	X80	Remote system	1.Program remote
BESTURN	X80	Remote system	1.Program remote
BESTURN	Oley	Remote system	1.Program remote
BESTURN	X80F	Immobiliser	1.Key Programe
BESTURN	X80F	Smart key system	1.Key Programe
BESTURN	X40F	Immobiliser	1.Key Programe

XTOOL