

Immobiliser Function List

Software Version: 26.12

Automaker	Model	System	Function
MAXUS	A80	immobiliser	1.Add keys 2.Erase keys 3.Add remeto 4.Erase remote
MAXUS	EV80	immobiliser	1.Add keys 2.Erase keys 3.Add remeto 4.Erase remote
MAXUS	V80	immobiliser	1.Add keys 2.Erase keys 3.Add remeto 4.Erase remote
MAXUS	G10	BCM system	1.Live data 2.Program new system 3.Replace BCM 4.Replace engine ECU 5.Add keys 6.Erase keys 7.Add remote 8.Erase remote
MAXUS	G10	Smart key system	1.Live data 2.Program new system 3.Program PEPS 4.Program EMS 5.Reset EMS 6.Add keys 7.Erase key