

Deactivate TRANS mode Function List

Software Version: **16.03**

Automaker	Type1	Type2	Type3
BMW	1 system	E81/E82/E87/E88	
BMW	1 system	F20/F21	
BMW	2 system	F22/F23	
BMW	2 system	F45/F46	
BMW	2 system	F87	
BMW	3 system	E46	
BMW	3 system	E90/E91/E92/E93	
BMW	3 system	F30/F31/F34/F35	
BMW	3 system	F80	
BMW	4 system	F32/F33/F36	
BMW	4 system	F82/F83	
BMW	5 system	E39	
BMW	5 system	E60/E61	
BMW	5 system	F07	
BMW	5 system	F10/F11/F18	
BMW	5 system	F90	
BMW	5 system	G30/G31	
BMW	5 system	G38	
BMW	6 system	E63/E64	
BMW	6 system	F06/F12/F13	
BMW	6 system	G32	
BMW	7 system	E38	
BMW	7 system	E65/E66/E68	
BMW	7 system	F01/F02/F03/F04	
BMW	7 system	G11/G12	
BMW	1 system	I01/I02	
BMW	X system	X1	E84
BMW	X system	X1	F48/F49
BMW	X system	X2	F39
BMW	X system	X3	E83

BMW	X system	X3	F25
BMW	X system	X3	G01
BMW	X system	X4	F26
BMW	X system	X5	E53
BMW	X system	X5	E70
BMW	X system	X5	F15/F85
BMW	X system	X6	E71
BMW	X system	X6	E72
BMW	X system	X6	F16/F86
BMW	Z series	Z4	E85/E86
BMW	Z series	Z4	E89
BMW	Z series	Z8	E52
BMW	MINI	R50/R52/R53	
BMW	MINI	R55/R56/R57	
BMW	MINI	R58/R59	
BMW	MINI	R60	
BMW	MINI	F56	
VW / Audi / Seat / Skoda	19- Data bus diagnostic interface		
Ford			
Buick			
Nissan			
Domestic model	Zhongtai Automobile	Zhongtai T300	
Domestic model	Zhongtai Automobile	Zhongtai T300(Airtec body system)	
Domestic model	Zhongtai Automobile	Zhongtai T600	
Domestic model	Zhongtai Automobile	Zhongtai Z700	
Domestic model	Zhongtai Automobile	Zhongtai Z500	
Domestic model	Zhongtai Automobile	Zhongtai Z500EV	
Domestic model	Zhongtai Automobile	Zhongtai Damai X5	
Domestic model	Zhongtai Automobile	Zhongtai Damai X7	
Domestic model	Kaiyi Automobile	Kaiyi S31/S32	
Domestic model	Kaiyi Automobile	Kaiyi S32EV	
Domestic model	Kaiyi Automobile	Kaiyi C3/C3R	
Domestic model	Kaiyi Automobile	Kaiyi V3(MC22)	
Domestic model	Kaiyi Automobile	Kaiyi X3(XC51)	
Domestic model	Kaiyi Automobile	Kaiyi E3	