



Shenzhen Xtooltech Co., Ltd

VAUXHALL Function List V9.71

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

- * This feature is new.
- ✓ This feature is supported.
- This feature is not supported.
- ✘ This feature is partially supported.

Year	Model	Control Unit Groups	System Name	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
2018	Adam		Body Control Module	✓	✓	✓	✓	✓	0046 0332 0334 0372 0045 0047 0048 0455
2018	Adam		Chassis Control Module	✓	✓	✓	✓	✓	0271 0365 0016 0419
2018	Adam		Electronic Brake Control Module	✓	✓	✓	✓	✓	0082 0269 0460
2018	Adam		Engine Control Module	✓	✓	✓	✓	✓	0210 0092 0019 0315 0093 0320 0131 0084 0091 0016 0306 0048
2018	Adam		Fuel Injector Control Module	✓	✓	✓	✓	✓	0306
2018	Adam		HVAC Control Module	✓	✓	✓	✓	✓	0211 0307 0040
2018	Adam		Inflatable Restraint Sensing and Diagnostic Module	✓	✓	✓	✓	✓	0086 0347
2018	Adam		Instrument Cluster	✓	✓	✓	✓	✓	0040
2018	Adam		Parking Assist Control Module	✓	✓	✓	✓	✓	0040
2018	Adam		Power Steering Control Module	✓	✓	✓	✓		0090
2018	Adam		Radio	✓	✓	✓	✓	✓	
2018	Adam		Telematics Communication Interface Control	✓	✓	✓	✓	✓	0212 0215 0216 0232
2018	Adam		Trailer Lighting Control Module	✓	✓	✓	✓	✓	0040
2018	Adam		Transmission Control Module	✓	✓	✓	✓	✓	0314 0330 0427
2018	Ampera-e		Battery Energy Control Module	✓			✓		

2018	Ampera-e		Body Control Module	√	√	√	√	√	0046 0332 0334 0335 0336 0337 0338 0339 0340 0341 0342 0370 0372 0045 0376 0378 0403 0413 0047 0048
2018	Ampera-e		Brake Booster Control Module	√	√	√	√		
2018	Ampera-e		Chassis Control Module	√	√	√	√	√	0220 0254
2018	Ampera-e		Electric A/C Compressor Control Module	√					
2018	Ampera-e		Electronic Brake Control Module	√	√	√	√	√	0083 0460
2018	Ampera-e		Engine Control Module	√	√	√	√	√	0039
2018	Ampera-e		Frontview Camera Module	√	√	√	√	√	0368 0108
2018	Ampera-e		HVAC Control Module	√	√	√	√	√	0211 0307
2018	Ampera-e		Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0039
2018	Ampera-e		Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0240 0255 0301 0302 0303 0304 0305 0444
2018	Ampera-e		Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0311 0347 0086
2018	Ampera-e		Instrument Cluster	√	√	√	√	√	0040
2018	Ampera-e		Keyless Entry Control Module	√	√	√	√	√	
2018	Ampera-e		Left Side-Object Sensor Module	√	√	√		√	
2018	Ampera-e		Parking Assist Control Module	√	√	√	√	√	0040
2018	Ampera-e		Pedestrian Alert Sound Control Module	√	√	√	√	√	
2018	Ampera-e		Power Line Communication Module	√			√		
2018	Ampera-e		Power Steering Control Module	√	√	√	√		0090
2018	Ampera-e		Radio	√	√	√	√	√	
2018	Ampera-e		Serial Data Gateway Module	√	√	√			
2018	Ampera-e		Steering Column Lock Control Module	√	√	√	√		0040
2018	Ampera-e		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2018	Ampera-e		Trailer Lighting Control Module	√	√	√	√	√	0040
2018	Ampera-e		Transmission Range Control Module	√	√	√	√	√	0219 0220 0254
2018	Ampera-e		Video Processing Control Module	√	√	√	√	√	0292 0367 0401 0437 0468

2018	Astra-J		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2018	Astra-J		Chassis Control Module	√	√	√	√	√	0271 0365 0016
2018	Astra-J		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2018	Astra-J		Electronic Brake Control Module	√	√	√	√	√	0083 0086 0394
2018	Astra-J		Engine Control Module	√	√	√	√	√	0210 0092 0019 0315 0093 0320 0131 0084 0091
2018	Astra-J		Front Seat Heating Control Module	√	√	√	√	√	
2018	Astra-J		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2018	Astra-J		Fuel Injector Control Module	√			√	√	
2018	Astra-J		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2018	Astra-J		Headlamp Control Module	√	√	√	√	√	0366
2018	Astra-J		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2018	Astra-J		Instrument Cluster	√	√	√	√	√	0040
2018	Astra-J		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2018	Astra-J		Parking Assist Control Module	√	√	√	√	√	0040
2018	Astra-J		Parking Brake Control Module	√	√	√	√	√	0109 0454
2018	Astra-J		Power Steering Control Module	√	√	√	√		0089 0088 0090
2018	Astra-J		Radio	√	√	√	√	√	0326
2018	Astra-J		Steering Wheel Angle Sensor Module	√	√	√			0083 0082
2018	Astra-J		Suspension Control Module	√	√	√	√	√	
2018	Astra-J		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2018	Astra-J		Trailer Lighting Control Module	√	√	√	√	√	0040
2018	Astra-J		Transmission Control Module	√	√	√	√	√	0422
2018	Astra-K		Active Safety Control Module	√	√	√	√	√	
2018	Astra-K		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2018	Astra-K		Electronic Brake Control Module	√	√	√	√	√	0083 0460

2018	Astra-K		Engine Control Module	√	√	√	√	√	0210 0092 0019 0263 0315 0093 0084 0091 0016
2018	Astra-K		Frontview Camera Module	√	√	√	√		0368 0108 0382
2018	Astra-K		Fuel Injector Control Module	√	√	√	√	√	0306
2018	Astra-K		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2018	Astra-K		HVAC Controls	√	√	√			
2018	Astra-K		Headlamp Control Module	√	√	√	√	√	0237 0238 0366
2018	Astra-K		Human Machine Interface Control Module	√	√	√	√	√	0326
2018	Astra-K		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2018	Astra-K		Instrument Cluster	√	√	√	√	√	0040
2018	Astra-K		Keyless Entry Control Module	√	√	√	√	√	
2018	Astra-K		Liftgate Control Module	√	√	√	√	√	0323 0343
2018	Astra-K		Long Range Radar Sensor Module	√	√	√	√		0440
2018	Astra-K		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2018	Astra-K		Parking Assist Control Module	√	√	√	√	√	0040 0450
2018	Astra-K		Power Steering Control Module	√	√	√	√		0090
2018	Astra-K		Power Supply Transformer	√	√	√	√		
2018	Astra-K		Radio	√	√	√	√	√	
2018	Astra-K		Radio Controls	√	√	√			
2018	Astra-K		Seat Memory Control Module	√	√	√	√	√	
2018	Astra-K		Serial Data Gateway Module	√	√	√			
2018	Astra-K		Steering Column Lock Control Module	√	√	√	√		
2018	Astra-K		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2018	Astra-K		Trailer Lighting Control Module	√	√	√	√	√	0040
2018	Astra-K		Transmission Control Module	√	√	√	√	√	0422
2018	Cascada		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2018	Cascada		Chassis Control Module	√	√	√	√	√	0271 0365 0016
2018	Cascada		Digital Radio Receiver Control Module	√	√	√	√	√	0040

2018	Cascada		Electronic Brake Control Module	√	√	√	√	√	0083 0086 0394
2018	Cascada		Engine Control Module	√	√	√	√	√	0210 0092 0019 0315 0093 0320 0131 0084 0091
2018	Cascada		Folding Top Control Module	√	√	√	√	√	0207 0208 0040
2018	Cascada		Front Seat Heating Control Module	√	√	√	√	√	
2018	Cascada		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2018	Cascada		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2018	Cascada		Headlamp Control Module	√	√	√	√	√	0366
2018	Cascada		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2018	Cascada		Instrument Cluster	√	√	√	√	√	0040
2018	Cascada		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2018	Cascada		Parking Assist Control Module	√	√	√	√	√	0040
2018	Cascada		Parking Brake Control Module	√	√	√	√	√	0109 0454
2018	Cascada		Power Steering Control Module	√	√	√	√		0089 0088 0090
2018	Cascada		Radio	√	√	√	√	√	0326
2018	Cascada		Steering Wheel Angle Sensor Module	√	√	√			0083 0082
2018	Cascada		Suspension Control Module	√	√	√	√	√	
2018	Cascada		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2018	Cascada		Transmission Control Module	√	√	√	√	√	0422
2018	Combo-D		Auxiliary Heater Control Module	√	√	√	√	√	0278
2018	Combo-D		Body Control Module	√	√	√	√	√	0242 0389 0418
2018	Combo-D		Electronic Brake Control Module	√	√	√	√	√	0083 0394 0459
2018	Combo-D		Engine Control Module	√	√	√	√	√	0221 0230 0234 0122 0316 0131 0325 0084 0411
2018	Combo-D		HVAC Control Module	√	√	√	√	√	0211
2018	Combo-D		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2018	Combo-D		Instrument Cluster	√	√	√	√	√	0218
2018	Combo-D		Multimedia Player Interface Module	√	√	√	√	√	
2018	Combo-D		Parking Assist Control Module	√	√	√	√	√	0344

2018	Combo-D		Tire Pressure Indicator Module	√	√	√	√		0333
2018	Combo-D		Transmission Control Module	√	√	√	√	√	0314 0427
2018	Corsa-E		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0047
2018	Corsa-E		Chassis Control Module	√	√	√	√	√	0271 0365 0016
2018	Corsa-E		Electronic Brake Control Module	√	√	√	√	√	0082 0269 0460
2018	Corsa-E		Engine Control Module	√	√	√	√	√	0210 0092 0019 0315 0093 0320 0131 0084 0091
2018	Corsa-E		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2018	Corsa-E		Fuel Injector Control Module	√	√	√	√	√	0306
2018	Corsa-E		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2018	Corsa-E		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2018	Corsa-E		Instrument Cluster	√	√	√	√	√	0040
2018	Corsa-E		Parking Assist Control Module	√	√	√	√	√	0040
2018	Corsa-E		Power Steering Control Module	√	√	√	√		0090
2018	Corsa-E		Radio	√	√	√	√	√	
2018	Corsa-E		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2018	Corsa-E		Trailer Lighting Control Module	√	√	√	√	√	0040
2018	Corsa-E		Transmission Control Module	√	√	√	√	√	0314 0330 0427
2018	Crossland X		Battery Sensor Module	√	√	√	√		
2018	Crossland X		Body Control Module	√	√	√	√	√	0355 0371 0405
2018	Crossland X		Driver Door Switch Panel Control Module	√	√	√	√	√	
2018	Crossland X		Electronic Brake Control Module	√	√	√	√	√	0083 0395 0435 0438 0109 0456 0461 0466 0469
2018	Crossland X		Engine Control Module	√	√	√	√	√	0122 0260 0262 0101 0312 0316 0330 0346 0353 0364 0383 0103
2018	Crossland X		Frontview Camera Module	√	√	√	√	√	0368 0397 0401

2018	Crossland X		Fuel Injector Control Module	√	√	√			
2018	Crossland X		Fuel-Borne Catalyst Pump	√	√	√	√	√	0283 0384
2018	Crossland X		HVAC Control Module	√	√	√	√	√	
2018	Crossland X		HVAC Controls	√	√	√	√	√	
2018	Crossland X		Head-Up Display Module	√	√	√	√	√	
2018	Crossland X		Headlamp Control Module	√	√	√	√	√	0366
2018	Crossland X		Inflatable Restraint Sensing and Diagnostic	√	√	√	√		
2018	Crossland X		Info Display Module	√	√	√	√	√	
2018	Crossland X		Infotainment Faceplate Control Module	√	√	√			
2018	Crossland X		Instrument Cluster	√	√	√	√	√	
2018	Crossland X		Left Front Seat Heating Control Module	√	√	√	√	√	
2018	Crossland X		Left Steering Wheel Controls Switch	√	√	√	√	√	
2018	Crossland X		Media Disc Player	√	√	√	√	√	
2018	Crossland X		Parking Assist Control Module	√	√	√	√	√	
2018	Crossland X		Passenger Seat Belt Indicator	√			√	√	
2018	Crossland X		Power Sounder Content Theft Deterrent Alarm Module	√	√	√	√	√	
2018	Crossland X		Power Steering Control Module	√	√	√	√	√	
2018	Crossland X		Power Supply Transformer	√	√	√			
2018	Crossland X		Radio	√	√	√	√	√	
2018	Crossland X		Rain/Ambient Light Sensor Module	√	√	√	√		
2018	Crossland X		Right Front Seat Heating Control Module	√	√	√	√	√	
2018	Crossland X		Steering Column Control Module	√	√	√	√	√	
2018	Crossland X		Steering Column Lock Control Module	√	√	√	√		
2018	Crossland X		Telematics Communication Interface Control Module	√	√	√	√		
2018	Crossland X		Traction Control Switch	√			√	√	
2018	Crossland X		Trailer Lighting Control Module	√	√	√	√	√	
2018	Crossland X		Transmission Control Module	√	√	√	√	√	0223 0122
2018	Crossland X		Ultrasonic Intrusion Sensor	√	√	√			
2018	Grandland X		Audio Amplifier	√	√	√		√	
2018	Grandland X		Auxiliary Body Control Module	√	√	√	√	√	

2018	Grandland X		Battery Sensor Module	√	√	√	√		
2018	Grandland X		Battery Voltage Switching Control Module	√	√	√	√		
2018	Grandland X		Body Control Module	√	√	√	√	√	0355 0371 0405
2018	Grandland X		Driver Door Switch Panel Control Module	√	√	√	√	√	
2018	Grandland X		Driver Seat Control Module	√	√	√	√	√	
2018	Grandland X		Electronic Brake Control Module	√	√	√	√	√	0083 0395 0435 0438 0109 0456 0461 0466 0469
2018	Grandland X		Engine Control Module	√	√	√	√	√	0260 0262 0101 0312 0316 0330 0346 0353 0364 0103 0412 0417
2018	Grandland X		Frontview Camera - Windshield	√	√	√	√	√	0368 0397 0401
2018	Grandland X		Fuel-Borne Catalyst Pump	√	√	√	√	√	0283
2018	Grandland X		HVAC Control Module	√	√	√	√	√	
2018	Grandland X		HVAC Controls	√	√	√	√	√	
2018	Grandland X		Hands-Free Liftgate Sensor Control Module	√	√	√			
2018	Grandland X		Headlamp Control Module	√	√	√	√	√	0366
2018	Grandland X		Inflatable Restraint Sensing and Diagnostic	√	√	√	√		
2018	Grandland X		Info Display Module	√	√	√	√	√	
2018	Grandland X		Infotainment Faceplate Control Module	√	√	√			
2018	Grandland X		Instrument Cluster	√	√	√	√	√	
2018	Grandland X		Left Front Seat Heating Control Module	√	√	√	√	√	
2018	Grandland X		Left Steering Wheel Controls Switch	√	√	√	√	√	
2018	Grandland X		Left Windshield Wiper Motor Module	√	√	√	√	√	
2018	Grandland X		Liftgate Control Module	√	√	√	√	√	0322
2018	Grandland X		Long Range Radar Sensor Module	√	√	√	√	√	0321 0440 0445
2018	Grandland X		Media Disc Player	√	√	√	√	√	
2018	Grandland X		Parking Assist Control Module	√	√	√	√	√	
2018	Grandland X		Passenger Seat Belt Indicator	√			√	√	
2018	Grandland X		Power Sounder Content Theft Deterrent Alarm Module	√	√	√	√	√	

2018	Grandland X		Power Steering Control Module	√	√	√	√	√	
2018	Grandland X		Power Supply Transformer	√	√	√			
2018	Grandland X		Radio	√	√	√	√	√	
2018	Grandland X		Rain/Ambient Light Sensor Module	√	√	√	√		
2018	Grandland X		Right Front Seat Heating Control Module	√	√	√	√	√	
2018	Grandland X		Seat Lumbar Support Control Module - Driver	√	√	√	√	√	
2018	Grandland X		Steering Column Control Module	√	√	√	√	√	
2018	Grandland X		Steering Column Lock Control Module	√	√	√	√		
2018	Grandland X		Telematics Communication Interface Control Module	√	√	√	√		
2018	Grandland X		Traction Control Switch	√			√	√	
2018	Grandland X		Trailer Lighting Control Module	√	√	√	√	√	
2018	Grandland X		Transmission Control Module	√	√	√	√	√	0223 0122
2018	Grandland X		Ultrasonic Intrusion Sensor	√	√	√			
2018	Grandland X		Video Processing Control Module	√	√	√	√	√	0292 0367
2018	Insignia-B		Active Safety Control Module	√	√	√	√	√	
2018	Insignia-B		Audio Amplifier	√	√	√	√		
2018	Insignia-B		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2018	Insignia-B		Electronic Brake Control Module	√	√	√	√	√	0083 0460
2018	Insignia-B		Engine Control Module	√	√	√	√	√	0106 0121 0104 0129 0092 0133 0249 0135 0251 0252 0122 0019 0132 0136 0137 0306 0085 0309 0313 0131 0084 0040 0380 0388
2018	Insignia-B		Frontview Camera Module	√	√	√	√	√	0368 0108
2018	Insignia-B		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2018	Insignia-B		HVAC Controls	√	√	√			
2018	Insignia-B		Headlamp Control Module	√	√	√	√	√	0237 0238 0366

2018	Insignia-B		Human Machine Interface Control Module	√	√	√	√	√	0326
2018	Insignia-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311 0347 0086
2018	Insignia-B		Instrument Cluster	√	√	√	√	√	0040
2018	Insignia-B		Keyless Entry Control Module	√	√	√	√	√	
2018	Insignia-B		Left Side-Object Sensor Module	√	√	√		√	
2018	Insignia-B		Liftgate Control Module	√	√	√	√	√	0323 0343
2018	Insignia-B		Long Range Radar Sensor Module	√	√	√	√		0440
2018	Insignia-B		Parking Assist Control Module	√	√	√	√	√	0040
2018	Insignia-B		Power Steering Control Module	√	√	√	√		0090
2018	Insignia-B		Power Supply Transformer	√	√	√	√		
2018	Insignia-B		Radio	√	√	√	√	√	
2018	Insignia-B		Radio Controls	√	√	√			
2018	Insignia-B		Rear Differential Clutch Control Module	√	√	√	√	√	0206 0291
2018	Insignia-B		Seat Memory Control Module - Driver	√	√	√	√	√	
2018	Insignia-B		Seat Memory Control Module - Passenger	√	√	√	√	√	
2018	Insignia-B		Serial Data Gateway Module	√	√	√			
2018	Insignia-B		Steering Column Lock Control Module	√	√	√	√		
2018	Insignia-B		Suspension Control Module	√	√	√	√	√	
2018	Insignia-B		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2018	Insignia-B		Trailer Lighting Control Module	√	√	√	√	√	0040
2018	Insignia-B		Transmission Control Module	√	√	√	√	√	0051 0223
2018	Insignia-B		Video Processing Control Module	√	√	√	√	√	0292 0367 0401 0437 0468
2018	Karl / Viva		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2018	Karl / Viva		Electronic Brake Control Module	√	√	√	√	√	0083 0460
2018	Karl / Viva		Engine Control Module	√	√	√	√	√	0210 0092 0019 0263 0315 0093 0084 0091 0016
2018	Karl / Viva		Frontview Camera Module	√	√	√	√		0368 0108 0382

2018	Karl / Viva		Fuel Injector Control Module	√	√	√	√	√	0306
2018	Karl / Viva		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2018	Karl / Viva		HVAC Controls	√	√	√			
2018	Karl / Viva		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2018	Karl / Viva		Instrument Cluster	√	√	√	√	√	0040
2018	Karl / Viva		Parking Assist Control Module	√	√	√	√	√	0040 0450
2018	Karl / Viva		Power Steering Control Module	√	√	√	√		0090
2018	Karl / Viva		Radio	√	√	√	√	√	0396
2018	Karl / Viva		Serial Data Gateway Module	√	√	√			
2018	Karl / Viva		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2018	Karl / Viva		Transmission Control Module	√	√	√	√	√	0314 0330 0427
2018	Mokka		Amplifier	√	√	√	√		
2018	Mokka		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2018	Mokka		Electronic Brake Control Module	√	√	√	√	√	0083
2018	Mokka		Engine Control Module	√	√	√	√	√	0210 0092 0019 0315 0093 0320 0131 0084 0091
2018	Mokka		Front Seat Heating Control Module	√	√	√	√	√	
2018	Mokka		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2018	Mokka		Fuel Injector Control Module	√			√	√	
2018	Mokka		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2018	Mokka		Headlamp Control Module	√	√	√	√	√	0366
2018	Mokka		Human Machine Interface Control Module	√	√	√	√	√	0326
2018	Mokka		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0327 0347 0086
2018	Mokka		Instrument Cluster	√	√	√	√	√	0040
2018	Mokka		Keyless Entry Control Module	√	√	√	√	√	
2018	Mokka		Parking Assist Control Module	√	√	√	√	√	0040
2018	Mokka		Power Steering Control Module	√	√	√	√		0377
2018	Mokka		Power Supply Transformer	√	√	√	√		

2018	Mokka		Radio	√	√	√	√	√	
2018	Mokka		Radio Controls	√	√	√			
2018	Mokka		Rear Differential Clutch Control Module	√	√	√	√	√	0039 0038
2018	Mokka		Serial Data Gateway Module	√	√	√			
2018	Mokka		Steering Column Lock Control Module	√	√	√	√		
2018	Mokka		Steering Wheel Angle Sensor Module	√	√	√			0083 0082
2018	Mokka		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2018	Mokka		Trailer Lighting Control Module	√	√	√	√	√	0040
2018	Mokka		Transmission Control Module	√	√	√	√	√	0422
2018	Movano-B		Auxiliary Body Control Module	√	√	√	√	√	0354
2018	Movano-B		Body Control Module	√	√	√	√	√	
2018	Movano-B		Electronic Brake Control Module	√	√	√	√	√	0083 0082 0286 0086 0289 0290 0407 0447 0461
2018	Movano-B		Engine Control Module	√	√	√	√	√	0081 0098 0104 0099 0276 0284 0285 0085 0318 0325 0345 0049 0349 0352 0354 0380 0381 0385 0201 0102 0048
2018	Movano-B		Frontview Camera Module	√	√	√	√		0368
2018	Movano-B		HVAC Control Module	√	√	√	√	√	
2018	Movano-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2018	Movano-B		Info Display Module	√	√	√	√	√	0293 0423
2018	Movano-B		Instrument Cluster	√	√	√	√	√	
2018	Movano-B		Multifunction Accessory Control Module	√	√	√	√		
2018	Movano-B		Parking Assist Control Module	√	√	√	√		0233 0277 0287
2018	Movano-B		Power Steering Control Module	√	√	√	√		
2018	Movano-B		Radio	√	√	√	√	√	0122 0326 0414
2018	Movano-B		Reductant Control Module	√	√	√	√	√	0135 0294 0297 0298 0299

2018	Movano-B		Serial Data Gateway Module	√	√	√	√	√	0040 0423
2018	Movano-B		Telematics Communication Interface Control Module	√	√	√	√	√	0214 0423
2018	Movano-B		Tire Pressure Indicator Module	√	√	√	√		0402 0434 0436 0465 0467
2018	Movano-B		Transmission Control Module	√	√	√	√	√	0222 0295 0314
2018	Vivaro-B		Auxiliary Body Control Module	√	√	√	√	√	0239 0354
2018	Vivaro-B		Body Control Module	√	√	√	√	√	0402 0434 0436 0465 0467
2018	Vivaro-B		Electronic Brake Control Module	√	√	√	√	√	0083 0082 0286 0289 0290 0407 0447 0461 0460
2018	Vivaro-B		Engine Control Module	√	√	√	√	√	0081 0098 0104 0271 0273 0274 0276 0284 0285 0085 0318 0319 0325 0049 0349 0352 0354 0380 0381 0385 0391 0102 0422 0048
2018	Vivaro-B		HVAC Control Module	√	√	√	√	√	
2018	Vivaro-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√		
2018	Vivaro-B		Info Display Module	√	√	√	√	√	0293 0423
2018	Vivaro-B		Instrument Cluster	√	√	√	√	√	
2018	Vivaro-B		Keyless Entry Control Module	√	√	√	√	√	
2018	Vivaro-B		Multifunction Accessory Control Module	√	√	√	√		
2018	Vivaro-B		Parking Assist Control Module	√	√	√	√	√	0277 0287 0423
2018	Vivaro-B		Parking Heater Control Module	√	√	√	√	√	0451 0452
2018	Vivaro-B		Power Steering Control Module	√	√	√	√		
2018	Vivaro-B		Radio	√	√	√	√	√	0420 0423 0428
2018	Vivaro-B		Reductant Control Module	√	√	√	√	√	0135 0294 0297 0298 0299
2018	Vivaro-B		Serial Data Gateway Module	√	√	√	√	√	

2018	Vivaro-B		Telematics Communication Interface Control Module	√	√	√	√	√	0214 0423
2018	Zafira-C		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2018	Zafira-C		Chassis Control Module	√	√	√	√	√	0271 0365 0016
2018	Zafira-C		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2018	Zafira-C		Distance Sensing Cruise Control Mode	√	√	√	√		0231
2018	Zafira-C		Electronic Brake Control Module	√	√	√	√	√	0083 0086 0394
2018	Zafira-C		Engine Control Module	√	√	√	√	√	0129 0019 0101 0085 0096 0093 0084 0380 0128
2018	Zafira-C		Front Seat Heating Control Module	√	√	√	√	√	
2018	Zafira-C		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2018	Zafira-C		Fuel Injector Control Module	√			√	√	
2018	Zafira-C		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2018	Zafira-C		Headlamp Control Module	√	√	√	√	√	0366
2018	Zafira-C		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2018	Zafira-C		Instrument Cluster	√	√	√	√	√	0040
2018	Zafira-C		Parking Assist Control Module	√	√	√	√	√	0040
2018	Zafira-C		Parking Brake Control Module	√	√	√	√	√	0109 0454
2018	Zafira-C		Power Steering Control Module	√	√	√	√		0089 0088 0090
2018	Zafira-C		Radio	√	√	√	√	√	
2018	Zafira-C		Steering Wheel Angle Sensor Module	√	√	√			0083 0082
2018	Zafira-C		Suspension Control Module	√	√	√	√	√	
2018	Zafira-C		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2018	Zafira-C		Trailer Lighting Control Module	√	√	√	√	√	0040
2018	Zafira-C		Transmission Control Module	√	√	√	√	√	0223 0122
2017	Adam		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0047
2017	Adam		Chassis Control Module	√	√	√	√	√	0271 0365 0016

2017	Adam		Electronic Brake Control Module	√	√	√	√	√	0082 0269 0460
2017	Adam		Engine Control Module	√	√	√	√	√	0210 0092 0019 0315 0093 0320 0131 0084 0091
2017	Adam		Fuel Injector Control Module	√	√	√	√	√	0306
2017	Adam		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2017	Adam		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2017	Adam		Instrument Cluster	√	√	√	√	√	0040
2017	Adam		Parking Assist Control Module	√	√	√	√	√	0040
2017	Adam		Power Steering Control Module	√	√	√	√		0090
2017	Adam		Radio	√	√	√	√	√	
2017	Adam		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Adam		Trailer Interface Control Module	√	√	√	√	√	0040
2017	Adam		Transmission Control Module	√	√	√	√	√	0314 0330 0427
2017	Ampera-e		Battery Energy Control Module	√			√		
2017	Ampera-e		Body Control Module	√	√	√	√	√	0046 0332 0334 0335 0336 0337 0338 0339 0340 0341 0342 0370 0372 0045 0376 0378 0403 0413 0047 0048 0440
2017	Ampera-e		Brake Booster Control Module	√	√	√	√		
2017	Ampera-e		Chassis Control Module	√	√	√	√	√	0220 0254
2017	Ampera-e		Electric A/C Compressor Control Module	√					
2017	Ampera-e		Electronic Brake Control Module	√	√	√	√	√	0083 0460
2017	Ampera-e		Engine Control Module	√	√	√	√	√	0039
2017	Ampera-e		Frontview Camera Module	√	√	√	√	√	0368 0108
2017	Ampera-e		HVAC Control Module	√	√	√	√	√	0211 0307
2017	Ampera-e		Hybrid/EV Powertrain Control Module 1	√	√	√	√	√	0039
2017	Ampera-e		Hybrid/EV Powertrain Control Module 2	√	√	√	√	√	0240 0255 0301 0302 0303 0304

2017	Ampera-e		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311 0347 0086
2017	Ampera-e		Instrument Cluster	√	√	√	√	√	0040
2017	Ampera-e		Keyless Entry Control Module	√	√	√	√	√	
2017	Ampera-e		Left Side-Object Sensor Module	√	√	√		√	
2017	Ampera-e		Parking Assist Control Module	√	√	√	√	√	0040
2017	Ampera-e		Pedestrian Alert Sound Control Module	√	√	√	√	√	
2017	Ampera-e		Power Line Communication Module	√			√		
2017	Ampera-e		Power Steering Control Module	√	√	√	√		0090
2017	Ampera-e		Radio	√	√	√	√	√	
2017	Ampera-e		Serial Data Gateway Module	√	√	√			
2017	Ampera-e		Steering Column Lock Control Module	√	√	√	√		0040
2017	Ampera-e		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Ampera-e		Trailer Lighting Control Module	√	√	√	√	√	0040
2017	Ampera-e		Transmission Range Control Module	√			√		
2017	Ampera-e		Video Processing Control Module	√	√	√	√	√	0292 0367 0401 0437 0468
2017	Antara		Auxiliary Body Control Module	√	√	√	√	√	0236
2017	Antara		Body Control Module	√	√	√	√	√	0047 0442 0048
2017	Antara		Electronic Brake Control Module	√	√	√	√	√	0083
2017	Antara		Engine Control Module	√	√	√	√	√	0106 0121 0104 0129 0092 0133 0247 0248 0249 0135 0122 0019 0132 0136 0137 0085 0309 0313 0131 0084 0049 0357 0359 0361 0363 0380 0400
2017	Antara		HVAC Control Module	√	√	√		√	
2017	Antara		Headlamp Control Module	√	√	√	√	√	0243 0366
2017	Antara		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347 0442

2017	Antara		Info Display Module	√	√	√	√	√	0040 0243 0344 0398 0408 0420
2017	Antara		Instrument Cluster	√	√	√	√	√	
2017	Antara		Mobile Telephone Control Module	√	√	√		√	0243 0420 0040
2017	Antara		Parking Assist Control Module	√	√	√	√	√	0108
2017	Antara		Parking Brake Control Module	√	√	√	√	√	0109
2017	Antara		Power Steering Control Module	√	√	√	√		0089 0088 0090
2017	Antara		Radio	√	√	√	√	√	0243 0344 0409 0420 0040 0428
2017	Antara		Rear Differential Clutch Control Module	√	√	√	√	√	0328
2017	Antara		Remote Control Door Lock Receiver	√	√	√	√	√	0282 0332 0334 0335 0336 0337 0338 0374 0403
2017	Antara		Theft Deterrent Module	√	√	√	√		
2017	Antara		Transmission Control Module	√	√	√	√	√	0223 0122
2017	Astra-J		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2017	Astra-J		Chassis Control Module	√	√	√	√	√	0271 0365 0016
2017	Astra-J		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2017	Astra-J		Electronic Brake Control Module	√	√	√	√	√	0083 0086 0394
2017	Astra-J		Engine Control Module	√	√	√	√	√	0210 0092 0019 0315 0093 0320 0131 0084 0091
2017	Astra-J		Front Seat Heating Control Module	√	√	√	√	√	
2017	Astra-J		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2017	Astra-J		Fuel Injector Control Module	√			√	√	
2017	Astra-J		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2017	Astra-J		Headlamp Control Module	√	√	√	√	√	0366
2017	Astra-J		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2017	Astra-J		Instrument Cluster	√	√	√	√	√	0040
2017	Astra-J		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086

2017	Astra-J		Parking Assist Control Module	√	√	√	√	√	0040
2017	Astra-J		Parking Brake Control Module	√	√	√	√	√	0109 0454
2017	Astra-J		Power Steering Control Module	√	√	√	√		0089 0088 0090
2017	Astra-J		Radio	√	√	√	√	√	0326
2017	Astra-J		Steering Wheel Angle Sensor Module	√	√	√			0083 0082
2017	Astra-J		Suspension Control Module	√	√	√	√	√	
2017	Astra-J		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Astra-J		Trailer Interface Control Module	√	√	√	√	√	0040
2017	Astra-J		Transmission Control Module	√	√	√	√	√	0422
2017	Astra-K		Active Safety Control Module	√	√	√	√	√	
2017	Astra-K		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2017	Astra-K		Electronic Brake Control Module	√	√	√	√	√	0083 0460
2017	Astra-K		Engine Control Module	√	√	√	√	√	0210 0092 0019 0263 0315 0093 0084 0091 0016
2017	Astra-K		Frontview Camera Module	√	√	√	√		0368 0108 0382
2017	Astra-K		Fuel Injector Control Module	√	√	√	√	√	0306
2017	Astra-K		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2017	Astra-K		HVAC Controls	√	√	√	√	√	0326
2017	Astra-K		Headlamp Control Module	√	√	√	√	√	0237 0238 0366
2017	Astra-K		Human Machine Interface Control Module	√	√	√	√	√	0326
2017	Astra-K		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2017	Astra-K		Instrument Cluster	√	√	√	√	√	0040
2017	Astra-K		Keyless Entry Control Module	√	√	√	√	√	
2017	Astra-K		Liftgate Control Module	√	√	√	√	√	0323 0343
2017	Astra-K		Long Range Radar Sensor Module	√	√	√	√		0440
2017	Astra-K		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2017	Astra-K		Parking Assist Control Module	√	√	√	√	√	0040 0450
2017	Astra-K		Power Steering Control Module	√	√	√	√		0090

2017	Astra-K		Power Supply Transformer	√	√	√	√		
2017	Astra-K		Radio	√	√	√		√	
2017	Astra-K		Radio Controls	√	√	√	√	√	0326
2017	Astra-K		Seat Memory Control Module	√	√	√	√	√	
2017	Astra-K		Serial Data Gateway Module	√	√	√			
2017	Astra-K		Steering Column Lock Control Module	√	√	√	√		
2017	Astra-K		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Astra-K		Trailer Interface Control Module	√	√	√	√	√	0040
2017	Astra-K		Transmission Control Module	√	√	√	√	√	0314 0330 0427
2017	Cascada		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2017	Cascada		Chassis Control Module	√	√	√	√	√	0271 0365 0016
2017	Cascada		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2017	Cascada		Electronic Brake Control Module	√	√	√	√	√	0083 0086 0394
2017	Cascada		Engine Control Module	√	√	√	√	√	0210 0092 0019 0315 0093 0320 0131 0084 0091
2017	Cascada		Folding Top Control Module	√	√	√	√	√	0207 0208 0040
2017	Cascada		Front Seat Heating Control Module	√	√	√	√	√	
2017	Cascada		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2017	Cascada		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2017	Cascada		Headlamp Control Module	√	√	√	√	√	0366
2017	Cascada		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2017	Cascada		Instrument Cluster	√	√	√	√	√	0040
2017	Cascada		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2017	Cascada		Parking Assist Control Module	√	√	√	√	√	0040
2017	Cascada		Parking Brake Control Module	√	√	√	√	√	0109 0454
2017	Cascada		Power Steering Control Module	√	√	√	√		0089 0088 0090
2017	Cascada		Radio	√	√	√	√	√	0326
2017	Cascada		Steering Wheel Angle Sensor Module	√	√	√			0083 0082

2017	Cascada		Suspension Control Module	√	√	√	√	√	
2017	Cascada		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Cascada		Transmission Control Module	√	√	√	√	√	0422
2017	Combo-D		Auxiliary Heater Control Module	√	√	√	√	√	0278
2017	Combo-D		Body Control Module	√	√	√	√	√	0242 0389 0418
2017	Combo-D		Electronic Brake Control Module	√	√	√	√	√	0083 0394 0459
2017	Combo-D		Engine Control Module	√	√	√	√	√	0221 0230 0234 0122 0316 0131 0325 0084 0411
2017	Combo-D		HVAC Control Module	√	√	√	√	√	0211
2017	Combo-D		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2017	Combo-D		Instrument Cluster	√	√	√	√	√	0218
2017	Combo-D		Multimedia Player Interface Module	√	√	√	√	√	
2017	Combo-D		Parking Assist Control Module	√	√	√	√		0344
2017	Combo-D		Tire Pressure Indicator Module	√	√	√	√		0333
2017	Combo-D		Transmission Control Module	√	√	√	√	√	0314 0427
2017	Corsa-E		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0047
2017	Corsa-E		Chassis Control Module	√	√	√	√	√	0271 0365 0016
2017	Corsa-E		Electronic Brake Control Module	√	√	√	√	√	0082 0269 0460
2017	Corsa-E		Engine Control Module	√	√	√	√	√	0210 0092 0019 0315 0093 0320 0131 0084 0091
2017	Corsa-E		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2017	Corsa-E		Fuel Injector Control Module	√	√	√	√	√	0306
2017	Corsa-E		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2017	Corsa-E		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2017	Corsa-E		Instrument Cluster	√	√	√	√	√	0040
2017	Corsa-E		Parking Assist Control Module	√	√	√	√	√	0040
2017	Corsa-E		Power Steering Control Module	√	√	√	√		0090
2017	Corsa-E		Radio	√	√	√	√	√	

2017	Corsa-E		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Corsa-E		Trailer Interface Control Module	√	√	√	√	√	0040
2017	Corsa-E		Transmission Control Module	√	√	√	√	√	0314 0330 0427
2017	Crossland X		Battery Sensor Module	√	√	√	√		
2017	Crossland X		Body Control Module	√	√	√	√	√	0355 0371 0405
2017	Crossland X		Driver Door Switch Panel Control Module	√	√	√	√	√	
2017	Crossland X		Electronic Brake Control Module	√	√	√	√	√	0083 0395 0435 0438 0109 0456 0461 0466 0469
2017	Crossland X		Engine Control Module	√	√	√	√	√	0122 0260 0262 0101 0312 0316 0330 0346 0353 0364 0383 0103
2017	Crossland X		Frontview Camera Module	√	√	√	√	√	0368 0397 0401
2017	Crossland X		Fuel-Borne Catalyst Pump	√	√	√	√	√	0283 0384
2017	Crossland X		HVAC Control Module	√	√	√	√	√	
2017	Crossland X		HVAC Controls	√	√	√	√	√	
2017	Crossland X		Head-Up Display Module	√	√	√	√	√	
2017	Crossland X		Headlamp Control Module	√	√	√	√	√	0366
2017	Crossland X		Inflatable Restraint Sensing and Diagnostic	√	√	√	√		
2017	Crossland X		Info Display Module	√	√	√	√	√	
2017	Crossland X		Infotainment Faceplate Control Module	√	√	√			
2017	Crossland X		Instrument Cluster	√	√	√	√	√	
2017	Crossland X		Left Front Seat Heating Control Module	√	√	√	√	√	
2017	Crossland X		Left Steering Wheel Controls Switch	√	√	√	√	√	
2017	Crossland X		Media Disc Player	√	√	√	√	√	
2017	Crossland X		Parking Assist Control Module	√	√	√	√	√	
2017	Crossland X		Passenger Seat Belt Indicator	√			√	√	
2017	Crossland X		Power Sounder Content Theft Deterrent Alarm Module	√	√	√	√	√	
2017	Crossland X		Power Steering Control Module	√	√	√	√	√	

2017	Crossland X		Power Supply Transformer	√	√	√			
2017	Crossland X		Radio	√	√	√	√	√	
2017	Crossland X		Rain/Ambient Light Sensor Module	√	√	√	√		
2017	Crossland X		Right Front Seat Heating Control Module	√	√	√	√	√	
2017	Crossland X		Steering Column Control Module	√	√	√	√	√	
2017	Crossland X		Steering Column Lock Control Module	√	√	√	√		
2017	Crossland X		Telematics Communication Interface Control Module	√	√	√	√		
2017	Crossland X		Traction Control Switch	√			√	√	
2017	Crossland X		Trailer Lighting Control Module	√	√	√	√	√	
2017	Crossland X		Transmission Control Module	√	√	√	√	√	0223 0122
2017	Crossland X		Ultrasonic Intrusion Sensor	√	√	√			
2017	Insignia		Amplifier	√	√	√	√		
2017	Insignia		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2017	Insignia		Chassis Control Module	√	√	√	√	√	0271 0365 0016
2017	Insignia		Distance Sensing Cruise Control Mode	√	√	√	√		0231
2017	Insignia		Electronic Brake Control Module	√	√	√	√	√	0083 0086 0394
2017	Insignia		Engine Control Module	√	√	√	√	√	0018 0019 0084 0016 0306
2017	Insignia		Front Seat Heating/Venting/Cooling/Memory Control Module	√	√	√	√	√	
2017	Insignia		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2017	Insignia		Fuel Injector Control Module	√			√	√	
2017	Insignia		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2017	Insignia		HVAC Controls	√	√	√	√	√	0326
2017	Insignia		Headlamp Control Module	√	√	√	√	√	0366
2017	Insignia		Human Machine Interface Control Module	√	√	√	√	√	0326
2017	Insignia		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2017	Insignia		Instrument Cluster	√	√	√	√	√	0040
2017	Insignia		Keyless Entry Control Module	√	√	√	√	√	

2017	Insignia		Left Side Object Detection Control Module	√	√	√		√	
2017	Insignia		Liftgate Control Module	√	√	√	√	√	0323 0343
2017	Insignia		Parking Assist Control Module	√	√	√	√	√	0040
2017	Insignia		Parking Brake Control Module	√	√	√	√	√	0109 0454
2017	Insignia		Power Steering Control Module	√	√	√	√		0090
2017	Insignia		Radio	√	√	√	√	√	0213 0396
2017	Insignia		Radio Controls	√	√	√	√	√	0326
2017	Insignia		Rear Differential Clutch Control Module	√	√	√	√	√	
2017	Insignia		Steering Column Lock Control Module	√	√	√	√		0040
2017	Insignia		Steering Wheel Angle Sensor Module	√	√	√			0083 0082
2017	Insignia		Suspension Control Module	√	√	√	√	√	
2017	Insignia		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Insignia		Trailer Interface Control Module	√	√	√	√	√	0040
2017	Insignia		Transmission Control Module	√	√	√	√	√	0051
2017	Karl / Viva		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2017	Karl / Viva		Electronic Brake Control Module	√	√	√	√	√	0083 0460
2017	Karl / Viva		Engine Control Module	√	√	√	√	√	0210 0092 0019 0263 0315 0093 0084 0091 0016
2017	Karl / Viva		Frontview Camera Module	√	√	√	√		0368 0108 0382
2017	Karl / Viva		Fuel Injector Control Module	√	√	√	√	√	0306
2017	Karl / Viva		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2017	Karl / Viva		HVAC Controls	√	√	√	√	√	0326
2017	Karl / Viva		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2017	Karl / Viva		Instrument Cluster	√	√	√	√	√	0040
2017	Karl / Viva		Parking Assist Control Module	√	√	√	√	√	0040 0450
2017	Karl / Viva		Power Steering Control Module	√	√	√	√		0090
2017	Karl / Viva		Radio	√	√	√	√	√	
2017	Karl / Viva		Serial Data Gateway Module	√	√	√			

2017	Karl / Viva		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Karl / Viva		Transmission Control Module	√	√	√	√	√	0314 0330 0427
2017	Meriva-B		Body Control Module	√	√	√	√	√	0217 0046 0332 0334 0372 0045 0376 0378 0047
2017	Meriva-B		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2017	Meriva-B		Electronic Brake Control Module	√	√	√	√	√	0082 0269 0460
2017	Meriva-B		Engine Control Module	√	√	√	√	√	0106 0121 0104 0129 0092 0133 0247 0248 0249 0135 0251 0252 0122 0019 0132 0136 0137 0306 0085 0313 0131 0084 0049 0380
2017	Meriva-B		Front Seat Heating Control Module	√	√	√	√	√	
2017	Meriva-B		Fuel Injector Control Module	√			√	√	
2017	Meriva-B		HVAC Control Module	√	√	√	√	√	0211 0040
2017	Meriva-B		Headlamp Control Module	√	√	√	√	√	0366
2017	Meriva-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2017	Meriva-B		Instrument Cluster	√	√	√	√	√	0040
2017	Meriva-B		Mobile Telephone Control Module	√	√	√	√	√	0040
2017	Meriva-B		Parking Assist Control Module	√	√	√	√	√	0040
2017	Meriva-B		Parking Brake Control Module	√	√	√	√	√	0109 0454
2017	Meriva-B		Power Steering Control Module	√	√	√	√	√	
2017	Meriva-B		Radio	√	√	√		√	
2017	Meriva-B		Steering Wheel Angle Sensor Module	√	√	√			0083 0082
2017	Meriva-B		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Meriva-B		Trailer Interface Control Module	√	√	√	√	√	0040
2017	Meriva-B		Transmission Control Module	√	√	√	√	√	0223 0122
2017	Mokka		Amplifier	√	√	√	√		

2017	Mokka		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2017	Mokka		Electronic Brake Control Module	√	√	√	√	√	0083
2017	Mokka		Engine Control Module	√	√	√	√	√	0210 0092 0019 0315 0093 0320 0131 0084 0091
2017	Mokka		Front Seat Heating Control Module	√	√	√	√	√	
2017	Mokka		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2017	Mokka		Fuel Injector Control Module	√			√	√	
2017	Mokka		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2017	Mokka		Headlamp Control Module	√	√	√	√	√	0366
2017	Mokka		Human Machine Interface Control Module	√	√	√	√	√	0326
2017	Mokka		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0327 0347 0086
2017	Mokka		Instrument Cluster	√	√	√	√	√	0040
2017	Mokka		Keyless Entry Control Module	√	√	√	√	√	
2017	Mokka		Parking Assist Control Module	√	√	√	√	√	0040
2017	Mokka		Power Steering Control Module	√	√	√	√		0377
2017	Mokka		Power Supply Transformer	√	√	√	√		
2017	Mokka		Radio	√	√	√	√	√	
2017	Mokka		Radio Controls	√	√	√	√	√	
2017	Mokka		Rear Differential Clutch Control Module	√	√	√	√	√	0039 0038
2017	Mokka		Serial Data Gateway Module	√	√	√			
2017	Mokka		Steering Column Lock Control Module	√	√	√	√		
2017	Mokka		Steering Wheel Angle Sensor Module	√	√	√			0083 0082
2017	Mokka		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Mokka		Trailer Interface Control Module	√	√	√	√	√	0040
2017	Mokka		Transmission Control Module	√	√	√	√	√	0422
2017	Movano-B		Auxiliary Body Control Module	√	√	√	√	√	0354
2017	Movano-B		Body Control Module	√	√	√	√	√	

2017	Movano-B		Electronic Brake Control Module	√	√	√	√	√	0083 0082 0286 0086 0289 0290 0407 0447 0461
2017	Movano-B		Engine Control Module	√	√	√	√	√	0106 0098 0104 0099 0276 0284 0285 0313 0318 0084 0349 0354 0356 0358 0360 0362 0385 0391
2017	Movano-B		Frontview Camera Module	√	√	√	√		0368
2017	Movano-B		HVAC Control Module	√	√	√	√	√	
2017	Movano-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2017	Movano-B		Info Display Module	√	√	√	√	√	0293 0423
2017	Movano-B		Instrument Cluster	√	√	√	√	√	
2017	Movano-B		Multifunction Accessory Control Module	√	√	√	√		
2017	Movano-B		Parking Assist Control Module	√	√	√	√		0233 0277 0287
2017	Movano-B		Power Steering Control Module	√	√	√	√		
2017	Movano-B		Radio	√	√	√	√	√	0122 0326 0414
2017	Movano-B		Reductant Control Module	√	√	√	√	√	0135 0294 0297 0298 0299
2017	Movano-B		Serial Data Gateway Module	√	√	√	√	√	0040 0423
2017	Movano-B		Telematics Communication Interface Control Module	√	√	√	√	√	0214 0423
2017	Movano-B		Tire Pressure Indicator Module	√	√	√	√		0402 0434 0436 0465 0467
2017	Movano-B		Transmission Control Module	√	√	√	√	√	0222 0295 0314
2017	Vivaro-B		Auxiliary Body Control Module	√	√	√	√	√	0239 0354
2017	Vivaro-B		Body Control Module	√	√	√	√	√	0402 0434 0436 0465 0467
2017	Vivaro-B		Electronic Brake Control Module	√	√	√	√	√	0083 0082 0286 0289 0290 0407 0447 0461 0460

2017	Vivaro-B		Engine Control Module	√	√	√	√	√	0081 0098 0104 0271 0273 0274 0276 0284 0285 0085 0318 0319 0325 0049 0349 0352 0354 0380 0381 0385 0391 0103 0432 0048
2017	Vivaro-B		HVAC Control Module	√	√	√	√	√	
2017	Vivaro-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√		
2017	Vivaro-B		Info Display Module	√	√	√	√	√	0293 0423
2017	Vivaro-B		Instrument Cluster	√	√	√	√	√	
2017	Vivaro-B		Keyless Entry Control Module	√	√	√	√	√	
2017	Vivaro-B		Multifunction Accessory Control Module	√	√	√	√		
2017	Vivaro-B		Parking Assist Control Module	√	√	√	√	√	0277 0287 0423
2017	Vivaro-B		Parking Heater Control Module	√	√	√	√	√	0451 0452
2017	Vivaro-B		Power Steering Control Module	√	√	√	√		
2017	Vivaro-B		Radio	√	√	√	√	√	0420 0423 0428
2017	Vivaro-B		Reductant Control Module	√	√	√	√	√	0135 0294 0297 0298 0299
2017	Vivaro-B		Serial Data Gateway Module	√	√	√	√	√	
2017	Vivaro-B		Telematics Communication Interface Control Module	√	√	√	√	√	0214 0423
2017	Zafira-C		Body Control Module	√	√	√	√	√	0046 0332 0334 0372 0045 0376 0378 0047 0048
2017	Zafira-C		Chassis Control Module	√	√	√	√	√	0271 0365 0016
2017	Zafira-C		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2017	Zafira-C		Distance Sensing Cruise Control Mode	√	√	√	√		0231
2017	Zafira-C		Electronic Brake Control Module	√	√	√	√	√	0083 0086 0394
2017	Zafira-C		Engine Control Module	√	√	√	√	√	0129 0019 0101 0085 0096 0093 0084 0380 0128

2017	Zafira-C		Front Seat Heating Control Module	√	√	√	√	√	
2017	Zafira-C		Frontview Camera Module	√	√	√	√	√	0235 0368 0108
2017	Zafira-C		Fuel Injector Control Module	√			√	√	
2017	Zafira-C		HVAC Control Module	√	√	√	√	√	0211 0307 0040
2017	Zafira-C		Headlamp Control Module	√	√	√	√	√	0366
2017	Zafira-C		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0086 0347
2017	Zafira-C		Instrument Cluster	√	√	√	√	√	0040
2017	Zafira-C		Parking Assist Control Module	√	√	√	√	√	0040
2017	Zafira-C		Parking Brake Control Module	√	√	√	√	√	0109 0454
2017	Zafira-C		Power Steering Control Module	√	√	√	√		0089 0088 0090
2017	Zafira-C		Radio	√	√	√	√	√	
2017	Zafira-C		Steering Wheel Angle Sensor Module	√	√	√			0083 0082
2017	Zafira-C		Suspension Control Module	√	√	√	√	√	
2017	Zafira-C		Telematics Communication Interface Control Module	√	√	√	√	√	0212 0215 0216 0232 0439
2017	Zafira-C		Trailer Interface Control Module	√	√	√	√	√	0040
2017	Zafira-C		Transmission Control Module	√	√	√	√	√	0223 0122
2016	Adam		Fuel Injector Control Module	√	√	√	√	√	0306
2016	Adam		HVAC Control Module	√	√	√	√	√	0211 0040
2016	Adam		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092
2016	Adam		Body Control Module	√	√	√	√	√	0047 0048 0045 0372 0046 0334
2016	Adam		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2016	Adam		Parking Assist Control Module	√	√	√	√	√	0040
2016	Adam		Instrument Cluster	√	√	√	√	√	0040
2016	Adam		Trailer Interface Control Module	√	√	√	√	√	0040
2016	Adam		Electronic Brake Control Module	√	√	√	√	√	0082 0460 0269
2016	Adam		Power Steering Control Module	√	√	√	√		0090
2016	Adam		Radio	√	√	√	√	√	

2016	Adam		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Adam		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2016	Adam		Transmission Control Module	√	√	√	√	√	0314 0427 0330
2016	Antara		Parking Brake Control Module	√	√	√	√	√	0109
2016	Antara		Parking Assist Control Module	√	√	√	√	√	
2016	Antara		HVAC Control Module	√	√	√		√	
2016	Antara		Headlamp Control Module	√	√	√	√	√	0366
2016	Antara		Instrument Cluster	√	√	√	√	√	
2016	Antara		Engine Control Module	√	√	√	√	√	0313
2016	Antara		Mobile Telephone Control Module	√	√	√		√	0040 0243 0423
2016	Antara		Body Control Module	√	√	√	√	√	0048 0442
2016	Antara		Remote Control Door Lock Receiver	√	√	√	√	√	0374 0413 0335 0336 0337 0338 0332 0334 0403
2016	Antara		Theft Deterrent Module	√	√	√	√		
2016	Antara		Auxiliary Body Control Module	√	√	√	√	√	0236
2016	Antara		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347 0442
2016	Antara		Info Display Module	√	√	√	√	√	0423 0398
2016	Antara		Radio	√	√	√	√	√	0428 0040 0420
2016	Astra-J		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2016	Astra-J		Frontview Camera Module	√	√	√	√	√	0108
2016	Astra-J		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2016	Astra-J		HVAC Control Module	√	√	√	√	√	0211 0040
2016	Astra-J		Fuel Injector Control Module	√			√	√	
2016	Astra-J		Headlamp Control Module	√	√	√	√	√	0366
2016	Astra-J		Engine Control Module	√	√	√	√	√	0049 0129 0251 0252 0122 0019 0132 0092 0085
2016	Astra-J		Parking Assist Control Module	√	√	√	√	√	0040
2016	Astra-J		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2016	Astra-J		Front Seat Heating Control Module	√	√	√	√	√	

2016	Astra-J		Power Steering Control Module	√	√	√	√		0090
2016	Astra-J		Parking Brake Control Module	√	√	√	√	√	0109
2016	Astra-J		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2016	Astra-J		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2016	Astra-J		Instrument Cluster	√	√	√	√	√	0040
2016	Astra-J		Trailer Interface Control Module	√	√	√	√	√	0040
2016	Astra-J		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Astra-J		Radio	√	√	√		√	
2016	Astra-J		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2016	Astra-J		Suspension Control Module	√	√	√	√	√	
2016	Astra-J		Transmission Control Module	√	√	√	√	√	0422
2016	Astra-K		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2016	Astra-K		Radio	√	√	√	√	√	0396 0213
2016	Astra-K		Power Steering Control Module	√	√	√	√		0090
2016	Astra-K		Electronic Brake Control Module	√	√	√	√	√	0083 0460 0522
2016	Astra-K		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2016	Astra-K		Seat Memory Control Module	√	√	√	√	√	
2016	Astra-K		Parking Assist Control Module	√	√	√	√	√	
2016	Astra-K		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306
2016	Astra-K		Instrument Cluster	√	√	√	√	√	0040
2016	Astra-K		Trailer Interface Control Module	√	√	√	√	√	0040
2016	Astra-K		HVAC Controls	√	√	√	√	√	
2016	Astra-K		Radio Controls	√	√	√	√	√	0326
2016	Astra-K		Transmission Control Module	√	√	√	√	√	0314 0427 0330
2016	Astra-K		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Astra-K		Human Machine Interface Control Module	√	√	√	√	√	0326
2016	Astra-K		Frontview Camera Module	√	√	√	√		0108 0368

2016	Astra-K		HVAC Control Module	√	√	√	√	√	0211 0040 0307
2016	Astra-K		Headlamp Control Module	√	√	√	√	√	0366
2016	Astra-K		Keyless Entry Control Module	√	√	√	√	√	
2016	Astra-K		Liftgate Control Module	√	√	√	√	√	0323
2016	Astra-K		Steering Column Lock Control Module	√	√	√	√		
2016	Cascada		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2016	Cascada		Frontview Camera Module	√	√	√	√	√	0108
2016	Cascada		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2016	Cascada		HVAC Control Module	√	√	√	√	√	0211 0040
2016	Cascada		Headlamp Control Module	√	√	√	√	√	0366
2016	Cascada		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092
2016	Cascada		Parking Assist Control Module	√	√	√	√	√	0040
2016	Cascada		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2016	Cascada		Front Seat Heating Control Module	√	√	√	√	√	
2016	Cascada		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2016	Cascada		Power Steering Control Module	√	√	√	√		0090
2016	Cascada		Parking Brake Control Module	√	√	√	√	√	0109
2016	Cascada		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2016	Cascada		Folding Top Control Module	√	√	√	√	√	0040 0207 0208
2016	Cascada		Instrument Cluster	√	√	√	√	√	0040
2016	Cascada		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Cascada		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2016	Cascada		Radio	√	√	√		√	
2016	Cascada		Suspension Control Module	√	√	√	√	√	
2016	Cascada		Transmission Control Module	√	√	√	√	√	0422
2016	Combo-D		Engine Control Module	√	√	√	√	√	0530 0531 0049 0019 0584 0085
2016	Combo-D		Electronic Brake Control Module	√	√	√	√	√	0459 0394 0083

2016	Combo-D		Multimedia Player Interface Module	√	√	√	√	√	
2016	Combo-D		Tire Pressure Indicator Module	√	√	√	√		
2016	Combo-D		HVAC Control Module	√	√	√	√	√	0211
2016	Combo-D		Body Control Module	√	√	√	√	√	0242 0418 0389
2016	Combo-D		Auxiliary Heater Control Module	√	√	√	√	√	0278
2016	Combo-D		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2016	Combo-D		Parking Assist Control Module	√	√	√	√		0344
2016	Combo-D		Instrument Cluster	√	√	√	√	√	0218
2016	Combo-D		Transmission Control Module	√	√	√	√	√	0314 0427
2016	Corsa-E		Frontview Camera Module	√	√	√	√	√	0108
2016	Corsa-E		Fuel Injector Control Module	√	√	√	√	√	0306
2016	Corsa-E		HVAC Control Module	√	√	√	√	√	0211 0040
2016	Corsa-E		Engine Control Module	√	√	√	√	√	0049 0306
2016	Corsa-E		Body Control Module	√	√	√	√	√	0047 0048 0048 0045 0372 0046
2016	Corsa-E		Parking Assist Control Module	√	√	√	√	√	0040
2016	Corsa-E		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2016	Corsa-E		Electronic Brake Control Module	√	√	√	√	√	0082 0460 0269
2016	Corsa-E		Power Steering Control Module	√	√	√	√		0090
2016	Corsa-E		Radio	√	√	√		√	
2016	Corsa-E		Instrument Cluster	√	√	√	√	√	0040
2016	Corsa-E		Trailer Interface Control Module	√	√	√	√	√	0040
2016	Corsa-E		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Corsa-E		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2016	Corsa-E		Transmission Control Module	√	√	√	√	√	0314 0427 0330
2016	Insignia		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2016	Insignia		Keyless Entry Control Module	√	√	√	√	√	
2016	Insignia		Steering Column Lock Control Module	√	√	√	√		
2016	Insignia		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	

2016	Insignia		Front Seat Heating/Venting/Cooling/Memory Control Module	√	√	√	√	√	
2016	Insignia		Distance Sensing Cruise Control Module	√	√	√	√		0231
2016	Insignia		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2016	Insignia		Left Side Object Detection Control Module	√	√	√		√	
2016	Insignia		Frontview Camera Module	√	√	√	√	√	0108
2016	Insignia		Engine Control Module	√	√	√	√	√	0048 0084 0385 0018 0541 0019 0388 0016 0306
2016	Insignia		Parking Assist Control Module	√	√	√	√	√	0040
2016	Insignia		Human Machine Interface Control Module	√	√	√	√	√	0326
2016	Insignia		Liftgate Control Module	√	√	√	√	√	0323
2016	Insignia		Instrument Cluster	√	√	√	√	√	0040
2016	Insignia		Radio Controls	√	√	√	√	√	0326
2016	Insignia		HVAC Controls	√	√	√	√	√	
2016	Insignia		Trailer Interface Control Module	√	√	√	√	√	0040
2016	Insignia		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2016	Insignia		Parking Brake Control Module	√	√	√	√	√	0109
2016	Insignia		Power Steering Control Module	√	√	√	√	√	
2016	Insignia		Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Insignia		Suspension Control Module	√	√	√	√	√	
2016	Insignia		Radio	√	√	√	√	√	0396 0213
2016	Insignia		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Insignia		Amplifier	√	√	√	√		
2016	Insignia		Fuel Injector Control Module	√			√	√	
2016	Insignia		HVAC Control Module	√	√	√	√	√	0211 0040
2016	Insignia		Headlamp Control Module	√	√	√	√	√	0366
2016	Insignia		Transmission Control Module	√	√	√	√	√	0051
2016	Karl/Viva		Radio	√	√	√	√	√	0396
2016	Karl/Viva		Electronic Brake Control Module	√	√	√	√	√	0083
2016	Karl/Viva		Power Steering Control Module	√	√	√	√	√	0090

2016	Karl/Viva		Parking Assist Control Module	√	√	√	√	√	
2016	Karl/Viva		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2016	Karl/Viva		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306
2016	Karl/Viva		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2016	Karl/Viva		Instrument Cluster	√	√	√	√	√	0040
2016	Karl/Viva		HVAC Control Module	√	√	√	√	√	0211 0040 0307
2016	Karl/Viva		Frontview Camera Module	√	√	√	√		0108 0368
2016	Karl/Viva		Transmission Control Module	√	√	√	√	√	0314 0427 0330
2016	Karl/Viva		Fuel Injector Control Module	√	√	√	√	√	0306
2016	Karl/Viva		HVAC Controls	√	√	√	√	√	
2016	Karl/Viva		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Meriva-B		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2016	Meriva-B		Fuel Injector Control Module	√			√	√	
2016	Meriva-B		Headlamp Control Module	√	√	√	√	√	0366
2016	Meriva-B		HVAC Control Module	√	√	√	√	√	0211 0040
2016	Meriva-B		Engine Control Module	√	√	√	√	√	0049 0129 0251 0252 0122 0019 0132 0092 0085
2016	Meriva-B		Body Control Module	√	√	√	√	√	0047 0045 0372 0378 0376 0040 0046 0217 0334
2016	Meriva-B		Parking Assist Control Module	√	√	√	√	√	0040
2016	Meriva-B		Front Seat Heating Control Module	√	√	√	√	√	
2016	Meriva-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2016	Meriva-B		Parking Brake Control Module	√	√	√	√	√	0109
2016	Meriva-B		Electronic Brake Control Module	√	√	√	√	√	0082 0460 0269
2016	Meriva-B		Power Steering Control Module	√	√	√	√	√	
2016	Meriva-B		Radio	√	√	√		√	
2016	Meriva-B		Instrument Cluster	√	√	√	√	√	0040

2016	Meriva-B		Trailer Interface Control Module	√	√	√	√	√	0040
2016	Meriva-B		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Meriva-B		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2016	Mokka		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2016	Mokka		Radio	√	√	√	√	√	
2016	Mokka		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2016	Mokka		Frontview Camera Module	√	√	√	√	√	0108
2016	Mokka		Instrument Cluster	√	√	√	√	√	0040
2016	Mokka		Electronic Brake Control Module	√	√	√	√	√	0083
2016	Mokka		Trailer Interface Control Module	√	√	√	√	√	0040
2016	Mokka		Power Steering Control Module	√	√	√	√		
2016	Mokka		HVAC Control Module	√	√	√	√	√	0211 0040
2016	Mokka		Headlamp Control Module	√	√	√	√	√	0366
2016	Mokka		Fuel Injector Control Module	√			√	√	
2016	Mokka		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2016	Mokka		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347 0086
2016	Mokka		Front Seat Heating Control Module	√	√	√	√	√	
2016	Mokka		Parking Assist Control Module	√	√	√	√	√	0040
2016	Mokka		Engine Control Module	√	√	√	√	√	0049 0129 0251 0252 0122 0019 0132 0092 0085
2016	Mokka		Transmission Control Module	√	√	√	√	√	0422
2016	Mokka		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Mokka		Rear Differential Clutch Control Module	√	√	√	√	√	
2016	Movano-B		Frontview Camera Module	√	√	√	√		
2016	Movano-B		Power Steering Control Module	√	√	√	√		
2016	Movano-B		Instrument Cluster	√	√	√	√	√	
2016	Movano-B		Multifunction Accessory Control Module	√	√	√	√		
2016	Movano-B		Tire Pressure Indicator Module	√	√	√	√		

2016	Movano-B		HVAC Control Module	√	√	√	√	√	
2016	Movano-B		Engine Control Module	√	√	√	√	√	
2016	Movano-B		Electronic Brake Control Module	√	√	√	√	√	0083 0289 0461 0086 0082 0447 0290 0460 0551
2016	Movano-B		Auxiliary Body Control Module	√	√	√	√	√	
2016	Movano-B		Radio	√	√	√	√	√	
2016	Movano-B		Serial Data Gateway Module	√	√	√	√	√	
2016	Movano-B		Navigation Control Module	√	√	√	√	√	
2016	Movano-B		Parking Assist Control Module	√	√	√	√		
2016	Movano-B		Info Display Module	√	√	√	√	√	
2016	Movano-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2016	Movano-B		Body Control Module	√	√	√	√	√	
2016	Movano-B		Transmission Control Module	√	√	√	√	√	0314 0222
2016	Movano-B		Reductant Control Module	√	√	√	√	√	
2016	Vivaro-B		Engine Control Module	√	√	√	√	√	0049
2016	Vivaro-B		Power Steering Control Module	√	√	√	√		
2016	Vivaro-B		Instrument Cluster	√	√	√	√	√	
2016	Vivaro-B		Body Control Module	√	√	√	√	√	
2016	Vivaro-B		Multifunction Accessory Control Module	√	√	√	√		
2016	Vivaro-B		Auxiliary Heater Control Module	√	√	√	√	√	0553 0554
2016	Vivaro-B		HVAC Control Module	√	√	√	√	√	
2016	Vivaro-B		Electronic Brake Control Module	√	√	√	√	√	0083 0289 0461 0082 0290 0460
2016	Vivaro-B		Auxiliary Body Control Module	√	√	√	√	√	0239
2016	Vivaro-B		Parking Assist Control Module	√	√	√	√	√	0423
2016	Vivaro-B		Info Display Module	√	√	√	√	√	
2016	Vivaro-B		Serial Data Gateway Module	√	√	√	√	√	
2016	Vivaro-B		Radio	√	√	√	√	√	
2016	Vivaro-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√		
2016	Vivaro-B		Keyless Entry Control Module	√	√	√	√	√	
2016	Vivaro-B		Reductant Control Module	√	√	√	√	√	

2016	Zafira-C		Distance Sensing Cruise Control Module	√	√	√	√		0231
2016	Zafira-C		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2016	Zafira-C		Frontview Camera Module	√	√	√	√	√	0108
2016	Zafira-C		Fuel Injector Control Module	√			√	√	
2016	Zafira-C		Headlamp Control Module	√	√	√	√	√	0366
2016	Zafira-C		HVAC Control Module	√	√	√	√	√	0211 0040
2016	Zafira-C		Engine Control Module	√	√	√	√	√	0049 0129 0251 0252 0122 0019 0132 0092 0085
2016	Zafira-C		Parking Assist Control Module	√	√	√	√	√	0040
2016	Zafira-C		Front Seat Heating Control Module	√	√	√	√	√	
2016	Zafira-C		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2016	Zafira-C		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2016	Zafira-C		Parking Brake Control Module	√	√	√	√	√	0109
2016	Zafira-C		Power Steering Control Module	√	√	√	√		0090
2016	Zafira-C		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2016	Zafira-C		Radio	√	√	√	√	√	
2016	Zafira-C		Instrument Cluster	√	√	√	√	√	0040
2016	Zafira-C		Trailer Interface Control Module	√	√	√	√	√	0040
2016	Zafira-C		Telematics Communication Interface Control Module	√	√	√	√	√	
2016	Zafira-C		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2016	Zafira-C		Suspension Control Module	√	√	√	√	√	
2016	Zafira-C		Transmission Control Module	√	√	√	√	√	0422
2016	Zafira-C		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2015	Adam		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092
2015	Adam		Fuel Injector Control Module	√			√	√	
2015	Adam		HVAC Control Module	√	√	√	√	√	0211 0040
2015	Adam		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	

2015	Adam		Electronic Brake Control Module	√	√	√	√	√	0082 0460 0269
2015	Adam		Power Steering Control Module	√	√	√	√		0090
2015	Adam		Parking Assist Control Module	√	√	√	√	√	0040
2015	Adam		Instrument Cluster	√	√	√	√	√	0040
2015	Adam		Trailer Interface Control Module	√	√	√	√	√	0040
2015	Adam		Body Control Module	√	√	√	√	√	0047 0048 0045 0372 0046 0334
2015	Adam		Radio	√	√	√	√	√	
2015	Adam		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2015	Adam		Transmission Control Module	√	√	√	√	√	0314 0427 0330
2015	Ampera		Electric A/C Compressor Control Module	√					
2015	Ampera		Battery Energy Control Module	√			√		
2015	Ampera		Coolant Heater Control Module	√	√	√	√		
2015	Ampera		Battery Charger Control Module	√			√		
2015	Ampera		Hybrid Powertrain Control Module 2	√	√	√	√	√	0556 0303 0240 0559 0301 0302
2015	Ampera		Hybrid Powertrain Control Module	√	√	√	√	√	
2015	Ampera		Drive Motor Control Module 1	√	√	√	√		
2015	Ampera		Drive Motor Control Module 2	√	√	√	√		
2015	Ampera		Auxiliary Transmission Fluid Pump	√	√	√	√		
2015	Ampera		Steering Column Lock Control Module	√	√	√	√		
2015	Ampera		Telematics Communication Interface Control Module	√	√	√	√		
2015	Ampera		Chassis Control Module	√	√	√	√	√	0016
2015	Ampera		Instrument Cluster	√	√	√	√	√	0040 0040
2015	Ampera		Front Seat Heating Control Module	√	√	√	√	√	
2015	Ampera		Parking Assist Control Module	√	√	√	√	√	0040
2015	Ampera		Engine Control Module	√	√	√	√	√	0017 0018 0016 0019 0586
2015	Ampera		Transmission Control Module	√	√	√	√	√	
2015	Ampera		HVAC Control Module	√	√	√	√	√	0211 0307
2015	Ampera		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311

2015	Ampera		Keyless Entry Control Module	√	√	√	√	√	
2015	Ampera		Radio	√	√	√	√	√	
2015	Ampera		Electronic Brake Control Module	√	√	√	√	√	0565
2015	Ampera		Parking Brake Control Module	√	√	√	√	√	0109
2015	Ampera		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2015	Ampera		Body Control Module	√	√	√	√	√	0370 0413 0335 0336 0337 0338 0339 0340 0341 0342 0047 0048 0045 0372 0378 0076 0016 0031
2015	Ampera		Power Steering Control Module	√	√	√	√		0090
2015	Ampera		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2015	Ampera		Frontview Camera Module	√	√	√	√	√	0108
2015	Antara		Headlamp Control Module	√	√	√	√	√	0366
2015	Antara		HVAC Control Module	√	√	√		√	
2015	Antara		Engine Control Module	√	√	√	√	√	0048 0084 0017 0018 0016 0571
2015	Antara		Electronic Brake Control Module	√	√	√	√	√	0083
2015	Antara		Variable Power Steering Control Module	√	√	√		√	
2015	Antara		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347 0442
2015	Antara		Info Display Module	√	√	√	√	√	0423 0398
2015	Antara		Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Antara		Parking Brake Control Module	√	√	√	√	√	0109
2015	Antara		Parking Assist Control Module	√	√	√	√	√	
2015	Antara		Body Control Module	√	√	√	√	√	0048 0442
2015	Antara		Theft Deterrent Module	√	√	√	√		
2015	Antara		Auxiliary Body Control Module	√	√	√	√	√	0236
2015	Antara		Remote Control Door Lock Receiver	√	√	√	√	√	0374 0413 0335 0336 0337 0338 0332 0334 0403
2015	Antara		Instrument Cluster	√	√	√	√	√	
2015	Antara		Mobile Telephone Control Module	√	√	√		√	0040 0243 0423

2015	Antara		Radio	√	√	√	√	√	0428 0040 0420
2015	Antara		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2015	Antara		Transmission Control Module	√	√	√	√	√	0422
2015	Astra-J		Headlamp Control Module	√	√	√	√	√	0366
2015	Astra-J		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092
2015	Astra-J		Fuel Injector Control Module	√			√	√	
2015	Astra-J		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2015	Astra-J		Front Seat Heating Control Module	√	√	√	√	√	
2015	Astra-J		HVAC Control Module	√	√	√	√	√	0211 0040
2015	Astra-J		Suspension Control Module	√	√	√	√	√	
2015	Astra-J		Parking Assist Control Module	√	√	√	√	√	0040
2015	Astra-J		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2015	Astra-J		Parking Brake Control Module	√	√	√	√	√	0109
2015	Astra-J		Power Steering Control Module	√	√	√	√		0090
2015	Astra-J		Distance Sensing Cruise Control Module	√	√	√	√		0231
2015	Astra-J		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2015	Astra-J		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2015	Astra-J		Frontview Camera Module	√	√	√	√	√	0108
2015	Astra-J		Multimedia Player Interface Module	√	√	√	√		
2015	Astra-J		Instrument Cluster	√	√	√	√	√	0040
2015	Astra-J		Trailer Interface Control Module	√	√	√	√	√	0040
2015	Astra-J		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2015	Astra-J		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2015	Astra-J		Mobile Telephone Control Module	√	√	√	√	√	
2015	Astra-J		Radio	√	√	√		√	
2015	Astra-J		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2015	Astra-J		Transmission Control Module	√	√	√	√	√	0422
2015	Cascada		Headlamp Control Module	√	√	√	√	√	0366
2015	Cascada		HVAC Control Module	√	√	√	√	√	0211 0040

2015	Cascada		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2015	Cascada		Front Seat Heating Control Module	√	√	√	√	√	
2015	Cascada		Suspension Control Module	√	√	√	√	√	
2015	Cascada		Parking Brake Control Module	√	√	√	√	√	0109
2015	Cascada		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2015	Cascada		Power Steering Control Module	√	√	√	√		0090
2015	Cascada		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092
2015	Cascada		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2015	Cascada		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2015	Cascada		Frontview Camera Module	√	√	√	√	√	0108
2015	Cascada		Multimedia Player Interface Module	√	√	√	√		
2015	Cascada		Instrument Cluster	√	√	√	√	√	0040
2015	Cascada		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2015	Cascada		Folding Top Control Module	√	√	√	√	√	0040 0207 0208
2015	Cascada		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2015	Cascada		Mobile Telephone Control Module	√	√	√	√	√	
2015	Cascada		Radio	√	√	√	√	√	
2015	Cascada		Parking Assist Control Module	√	√	√	√	√	0040
2015	Cascada		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2015	Cascada		Transmission Control Module	√	√	√	√	√	0422
2015	Combo-D		Engine Control Module	√	√	√	√	√	0234 0122 0221 0316 0325 0084
2015	Combo-D		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2015	Combo-D		Auxiliary Heater Control Module	√	√	√	√	√	0278
2015	Combo-D		HVAC Control Module	√	√	√	√	√	0211
2015	Combo-D		Electronic Brake Control Module	√	√	√	√	√	0459 0394 0083
2015	Combo-D		Parking Assist Control Module	√	√	√	√		0344
2015	Combo-D		Multimedia Player Interface Module	√	√	√	√	√	
2015	Combo-D		Instrument Cluster	√	√	√	√	√	0218

2015	Combo-D		Body Control Module	√	√	√	√	√	0242 0418 0389
2015	Combo-D		Tire Pressure Indicator Module	√	√	√	√		
2015	Combo-D		Transmission Control Module	√	√	√	√	√	0314 0427
2015	Corsa-E		Electronic Brake Control Module	√	√	√	√	√	0082 0460 0269
2015	Corsa-E		Power Steering Control Module	√	√	√	√		0090
2015	Corsa-E		Instrument Cluster	√	√	√	√	√	0040
2015	Corsa-E		Trailer Interface Control Module	√	√	√	√	√	0040
2015	Corsa-E		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092
2015	Corsa-E		Frontview Camera Module	√	√	√	√	√	0108
2015	Corsa-E		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2015	Corsa-E		Body Control Module	√	√	√	√	√	0047 0048 0048 0045 0372 0046
2015	Corsa-E		HVAC Control Module	√	√	√	√	√	0211 0040
2015	Corsa-E		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2015	Corsa-E		Fuel Injector Control Module	√	√	√	√	√	0306
2015	Corsa-E		Parking Assist Control Module	√	√	√	√	√	0040
2015	Corsa-E		Radio	√	√	√	√	√	
2015	Corsa-E		Transmission Control Module	√	√	√	√	√	0422
2015	Insignia		HVAC Controls	√	√	√	√	√	
2015	Insignia		Human Machine Interface Control Module	√	√	√	√	√	0326
2015	Insignia		Radio Controls	√	√	√	√	√	0326
2015	Insignia		Headlamp Control Module	√	√	√	√	√	0366
2015	Insignia		Engine Control Module	√	√	√	√	√	0084 0018 0019
2015	Insignia		Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Insignia		Fuel Injector Control Module	√			√	√	
2015	Insignia		Suspension Control Module	√	√	√	√	√	
2015	Insignia		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2015	Insignia		Front Seat Heating/Venting/Cooling/Memory Control Module	√	√	√	√	√	
2015	Insignia		HVAC Control Module	√	√	√	√	√	0211 0040

2015	Insignia		Parking Assist Control Module	√	√	√	√	√	0040
2015	Insignia		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2015	Insignia		Parking Brake Control Module	√	√	√	√	√	0109
2015	Insignia		Power Steering Control Module	√	√	√	√		0090
2015	Insignia		Instrument Cluster	√	√	√	√	√	0040
2015	Insignia		Trailer Interface Control Module	√	√	√	√	√	0040
2015	Insignia		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2015	Insignia		Keyless Entry Control Module	√	√	√	√	√	
2015	Insignia		Steering Column Lock Control Module	√	√	√	√		
2015	Insignia		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2015	Insignia		Transmission Control Module	√	√	√	√	√	0051
2015	Insignia		Distance Sensing Cruise Control Module	√	√	√	√		0231
2015	Insignia		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2015	Insignia		Frontview Camera Module	√	√	√	√	√	0108
2015	Insignia		Left Side Object Detection Control Module	√	√	√		√	
2015	Insignia		Radio	√	√	√	√	√	0396 0213
2015	Insignia		Amplifier	√	√	√	√		
2015	Insignia		Infotainment Control Touchpad	√	√	√	√	√	
2015	Insignia		Liftgate Control Module	√	√	√	√	√	0323
2015	Meriva-B		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2015	Meriva-B		Multimedia Player Interface Module	√	√	√	√		
2015	Meriva-B		Power Steering Control Module	√	√	√	√	√	
2015	Meriva-B		Instrument Cluster	√	√	√	√	√	0040
2015	Meriva-B		Trailer Interface Control Module	√	√	√	√	√	0040
2015	Meriva-B		Body Control Module	√	√	√	√	√	0047 0045 0372 0378 0376 0040 0046 0217 0334
2015	Meriva-B		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092

2015	Meriva-B		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2015	Meriva-B		Radio	√	√	√	√	√	
2015	Meriva-B		Mobile Telephone Control Module	√	√	√	√	√	
2015	Meriva-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2015	Meriva-B		Front Seat Heating Control Module	√	√	√	√	√	
2015	Meriva-B		Parking Brake Control Module	√	√	√	√	√	0109
2015	Meriva-B		Electronic Brake Control Module	√	√	√	√	√	0082 0460 0269
2015	Meriva-B		Fuel Injector Control Module	√			√	√	
2015	Meriva-B		HVAC Control Module	√	√	√	√	√	0211 0040
2015	Meriva-B		Headlamp Control Module	√	√	√	√	√	0366
2015	Meriva-B		Parking Assist Control Module	√	√	√	√	√	0040
2015	Meriva-B		Transmission Control Module	√	√	√	√	√	0223 0122
2015	Mokka		Headlamp Control Module	√	√	√	√	√	0366
2015	Mokka		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092
2015	Mokka		Rear Differential Clutch Control Module	√	√	√	√	√	
2015	Mokka		Fuel Injector Control Module	√			√	√	
2015	Mokka		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347 0086
2015	Mokka		Front Seat Heating Control Module	√	√	√	√	√	
2015	Mokka		HVAC Control Module	√	√	√	√	√	0211 0040
2015	Mokka		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2015	Mokka		Frontview Camera Module	√	√	√	√	√	0108
2015	Mokka		Electronic Brake Control Module	√	√	√	√	√	0083
2015	Mokka		Power Steering Control Module	√	√	√	√		
2015	Mokka		Parking Assist Control Module	√	√	√	√	√	0040
2015	Mokka		Instrument Cluster	√	√	√	√	√	0040
2015	Mokka		Trailer Interface Control Module	√	√	√	√	√	0040
2015	Mokka		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2015	Mokka		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2015	Mokka		Radio	√	√	√	√	√	

2015	Mokka		Transmission Control Module	√	√	√	√	√	0422
2015	Movano-B		Radio	√	√	√	√	√	
2015	Movano-B		Serial Data Gateway Module	√	√	√	√	√	
2015	Movano-B		Auxiliary Body Control Module	√	√	√	√	√	
2015	Movano-B		Electronic Brake Control Module	√	√	√	√	√	0083 0289 0461 0086 0082 0447 0290 0460 0551
2015	Movano-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2015	Movano-B		Engine Control Module	√	√	√	√	√	0049
2015	Movano-B		Body Control Module	√	√	√	√	√	
2015	Movano-B		Instrument Cluster	√	√	√	√	√	
2015	Movano-B		Transmission Control Module	√	√	√	√	√	0314 0222
2015	Movano-B		HVAC Control Module	√	√	√	√	√	
2015	Movano-B		Power Steering Control Module	√	√	√	√		
2015	Movano-B		Parking Assist Control Module	√	√	√	√		
2015	Movano-B		Navigation Control Module	√	√	√	√	√	
2015	Movano-B		Tire Pressure Indicator Module	√	√	√	√		
2015	Vivaro-B		Electronic Brake Control Module	√	√	√	√	√	0083 0289 0461 0082 0290 0460
2015	Vivaro-B		Parking Assist Control Module	√	√	√	√	√	0423
2015	Vivaro-B		Power Steering Control Module	√	√	√	√		
2015	Vivaro-B		HVAC Control Module	√	√	√	√	√	
2015	Vivaro-B		Info Display Module	√	√	√	√	√	
2015	Vivaro-B		Serial Data Gateway Module	√	√	√	√	√	
2015	Vivaro-B		Radio	√	√	√	√	√	
2015	Vivaro-B		Engine Control Module	√	√	√	√	√	0049
2015	Vivaro-B		Keyless Entry Control Module	√	√	√	√	√	
2015	Vivaro-B		Inflatable Restraint Sensing and Diagnostic	√	√	√	√		
2015	Vivaro-B		Auxiliary Body Control Module	√	√	√	√	√	0239
2015	Vivaro-B		Telematics Communication Interface Control Module	√	√	√	√		
2015	Vivaro-B		Multifunction Accessory Control Module	√	√	√	√		

2015	Vivaro-B		Body Control Module	√	√	√	√	√	
2015	Zafira-C		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2015	Zafira-C		Headlamp Control Module	√	√	√	√	√	0366
2015	Zafira-C		Engine Control Module	√	√	√	√	√	
2015	Zafira-C		Fuel Injector Control Module	√			√	√	
2015	Zafira-C		Front Seat Heating Control Module	√	√	√	√	√	
2015	Zafira-C		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2015	Zafira-C		Parking Brake Control Module	√	√	√	√	√	0109
2015	Zafira-C		Power Steering Control Module	√	√	√	√		0090
2015	Zafira-C		Suspension Control Module	√	√	√	√	√	
2015	Zafira-C		Parking Assist Control Module	√	√	√	√	√	0040
2015	Zafira-C		Distance Sensing Cruise Control Module	√	√	√	√		0231
2015	Zafira-C		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2015	Zafira-C		Frontview Camera Module	√	√	√	√	√	0108
2015	Zafira-C		Multimedia Player Interface Module	√	√	√	√		
2015	Zafira-C		Instrument Cluster	√	√	√	√	√	0040
2015	Zafira-C		Trailer Interface Control Module	√	√	√	√	√	0040
2015	Zafira-C		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2015	Zafira-C		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2015	Zafira-C		Mobile Telephone Control Module	√	√	√	√	√	
2015	Zafira-C		Radio	√	√	√	√	√	
2015	Zafira-C		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2015	Zafira-C		HVAC Control Module	√	√	√	√	√	0211 0040
2015	Zafira-C		Transmission Control Module	√	√	√	√	√	0223 0122
2014	Adam		HVAC Control Module	√	√	√	√	√	0211 0040
2014	Adam		Engine Control Module	√	√	√	√	√	0048 0084 0018 0019 0016
2014	Adam		Trailer Interface Control Module	√	√	√	√	√	0040
2014	Adam		Instrument Cluster	√	√	√	√	√	0040
2014	Adam		Fuel Injector Control Module	√			√	√	
2014	Adam		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	

2014	Adam		Body Control Module	√	√	√	√	√	0047 0048 0045 0372 0046 0334
2014	Adam		Electronic Brake Control Module	√	√	√	√	√	0082 0460 0269
2014	Adam		Power Steering Control Module	√	√	√	√		0090
2014	Adam		Radio	√	√	√	√	√	
2014	Adam		Parking Assist Control Module	√	√	√	√	√	0040
2014	Ampera		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2014	Ampera		Auxiliary Transmission Fluid Pump	√	√	√	√		
2014	Ampera		Drive Motor Control Module 1	√	√	√	√		
2014	Ampera		Drive Motor Control Module 2	√	√	√	√		
2014	Ampera		Hybrid Powertrain Control Module	√	√	√	√	√	
2014	Ampera		Electric A/C Compressor Control Module	√					
2014	Ampera		Battery Charger Control Module	√			√		
2014	Ampera		Battery Energy Control Module	√			√		
2014	Ampera		Coolant Heater Control Module	√	√	√			
2014	Ampera		Hybrid Powertrain Control Module 2	√	√	√	√	√	0556 0303 0240 0559 0301 0302
2014	Ampera		Telematics Communication Interface Control Module	√	√	√	√		
2014	Ampera		Steering Column Lock Control Module	√	√	√	√		
2014	Ampera		Body Control Module	√	√	√	√	√	0370 0413 0335 0336 0337 0338 0339 0340 0341 0342 0047 0048 0045 0372 0378 0375 0046 0334
2014	Ampera		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2014	Ampera		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2014	Ampera		Keyless Entry Control Module	√	√	√	√	√	
2014	Ampera		Power Steering Control Module	√	√	√	√		0090
2014	Ampera		Frontview Camera Module	√	√	√	√	√	0108
2014	Ampera		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2014	Ampera		Instrument Cluster	√	√	√	√	√	0040 0040

2014	Ampera		HVAC Control Module	√	√	√	√	√	0211 0307
2014	Ampera		Radio	√	√	√	√	√	
2014	Ampera		Front Seat Heating Control Module	√	√	√	√	√	
2014	Ampera		Parking Assist Control Module	√	√	√	√	√	0040
2014	Ampera		Electronic Brake Control Module	√	√	√	√	√	0565
2014	Ampera		Parking Brake Control Module	√	√	√	√	√	0109
2014	Ampera		Engine Control Module	√	√	√	√	√	0017 0018 0016 0019 0586
2014	Ampera		Transmission Control Module	√	√	√	√	√	
2014	Antara		Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Antara		Transmission Control Module	√	√	√	√	√	0422
2014	Antara		Headlamp Control Module	√	√	√	√	√	0366
2014	Antara		HVAC Control Module	√	√	√		√	
2014	Antara		Engine Control Module	√	√	√	√	√	0048 0084 0017 0018 0016 0571
2014	Antara		Radio	√	√	√	√	√	0428 0040 0420
2014	Antara		Mobile Telephone Control Module	√	√	√		√	0040 0243 0423
2014	Antara		Body Control Module	√	√	√	√	√	0048 0442
2014	Antara		Auxiliary Body Control Module	√	√	√	√	√	0236
2014	Antara		Remote Control Door Lock Receiver	√	√	√	√	√	0374 0413 0335 0336 0337 0338 0332 0334 0403
2014	Antara		Theft Deterrent Module	√	√	√	√		
2014	Antara		Instrument Cluster	√	√	√	√	√	
2014	Antara		Parking Brake Control Module	√	√	√	√	√	0109
2014	Antara		Parking Assist Control Module	√	√	√	√	√	
2014	Antara		Electronic Brake Control Module	√	√	√	√	√	0083
2014	Antara		Variable Power Steering Control Module	√	√	√		√	
2014	Antara		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347 0442
2014	Antara		Info Display Module	√	√	√	√	√	0423 0398
2014	Antara		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2014	Astra-J		HVAC Control Module	√	√	√	√	√	0211 0040

2014	Astra-J		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2014	Astra-J		Transmission Control Module	√	√	√	√	√	0223 0122
2014	Astra-J		Suspension Control Module	√	√	√	√	√	
2014	Astra-J		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092
2014	Astra-J		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2014	Astra-J		Instrument Cluster	√	√	√	√	√	0040
2014	Astra-J		Trailer Interface Control Module	√	√	√	√	√	0040
2014	Astra-J		Headlamp Control Module	√	√	√	√	√	0366
2014	Astra-J		Fuel Injector Control Module	√			√	√	
2014	Astra-J		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2014	Astra-J		Power Steering Control Module	√	√	√	√		0090
2014	Astra-J		Parking Brake Control Module	√	√	√	√	√	0109
2014	Astra-J		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2014	Astra-J		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2014	Astra-J		Multimedia Player Interface Module	√	√	√	√		
2014	Astra-J		Frontview Camera Module	√	√	√	√	√	0040
2014	Astra-J		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2014	Astra-J		Front Seat Heating Control Module	√	√	√	√	√	
2014	Astra-J		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2014	Astra-J		Mobile Telephone Control Module	√	√	√	√	√	
2014	Astra-J		Radio	√	√	√		√	
2014	Astra-J		Parking Assist Control Module	√	√	√	√	√	0040
2014	Astra-J		Distance Sensing Cruise Control Module	√	√	√	√		0231
2014	Cascada		HVAC Control Module	√	√	√	√	√	0211 0040
2014	Cascada		Transmission Control Module	√	√	√	√	√	0223 0122
2014	Cascada		Suspension Control Module	√	√	√	√	√	
2014	Cascada		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092

2014	Cascada		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2014	Cascada		Folding Top Control Module	√	√	√	√	√	0040 0574 0575
2014	Cascada		Headlamp Control Module	√	√	√	√	√	0366
2014	Cascada		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2014	Cascada		Power Steering Control Module	√	√	√	√		0090
2014	Cascada		Parking Brake Control Module	√	√	√	√	√	0109
2014	Cascada		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2014	Cascada		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2014	Cascada		Multimedia Player Interface Module	√	√	√	√		
2014	Cascada		Frontview Camera Module	√	√	√	√	√	0108
2014	Cascada		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2014	Cascada		Front Seat Heating Control Module	√	√	√	√	√	
2014	Cascada		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2014	Cascada		Mobile Telephone Control Module	√	√	√	√	√	
2014	Cascada		Radio	√	√	√	√	√	
2014	Cascada		Parking Assist Control Module	√	√	√	√	√	0040
2014	Cascada		Instrument Cluster	√	√	√	√	√	0040
2014	Cascada		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2014	Combo-D		HVAC Control Module	√	√	√	√	√	0211
2014	Combo-D		Engine Control Module	√	√	√	√	√	0049 0121 0104 0234 0019 0585 0101 0285 0085 0325 0084 0385
2014	Combo-D		Instrument Cluster	√	√	√	√	√	0218
2014	Combo-D		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2014	Combo-D		Auxiliary Heater Control Module	√	√	√	√	√	0278
2014	Combo-D		Transmission Control Module	√	√	√	√	√	0314 0427
2014	Combo-D		Body Control Module	√	√	√	√	√	0242 0418 0389
2014	Combo-D		Multimedia Player Interface Module	√	√	√	√	√	
2014	Combo-D		Electronic Brake Control Module	√	√	√	√	√	0459 0394 0083
2014	Combo-D		Parking Assist Control Module	√	√	√	√	√	0344

2014	Insignia		HVAC Control Module	√	√	√	√	√	0211 0040
2014	Insignia		Amplifier	√	√	√	√		
2014	Insignia		Human Machine Interface Control Module	√	√	√	√	√	0326
2014	Insignia		Radio	√	√	√	√	√	0396 0213
2014	Insignia		Transmission Control Module	√	√	√	√	√	0223 0122
2014	Insignia		Suspension Control Module	√	√	√	√	√	
2014	Insignia		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306 0210 0093 0320 0092
2014	Insignia		HVAC Controls	√	√	√	√	√	
2014	Insignia		Infotainment Control Touchpad	√	√	√	√	√	
2014	Insignia		Radio Controls	√	√	√	√	√	0326
2014	Insignia		Instrument Cluster	√	√	√	√	√	0040
2014	Insignia		Trailer Interface Control Module	√	√	√	√	√	0040
2014	Insignia		Liftgate Control Module	√	√	√	√	√	0323
2014	Insignia		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2014	Insignia		Steering Column Lock Control Module	√	√	√	√		
2014	Insignia		Keyless Entry Control Module	√	√	√	√	√	
2014	Insignia		Front Seat Heating/Venting/Cooling/Memory Control Module	√	√	√	√	√	
2014	Insignia		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2014	Insignia		Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Insignia		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2014	Insignia		Distance Sensing Cruise Control Module	√	√	√	√		0231
2014	Insignia		Frontview Camera Module	√	√	√	√	√	0108
2014	Insignia		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2014	Insignia		Fuel Injector Control Module	√			√	√	
2014	Insignia		Headlamp Control Module	√	√	√	√	√	0366
2014	Insignia		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2014	Insignia		Power Steering Control Module	√	√	√	√	√	

2014	Insignia		Parking Brake Control Module	√	√	√	√	√	0109
2014	Insignia		Parking Assist Control Module	√	√	√	√	√	0040
2014	Insignia		Left Side Object Detection Control Module	√	√	√		√	
2014	Insignia		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2014	Mokka		HVAC Control Module	√	√	√	√	√	0211 0040
2014	Mokka		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306
2014	Mokka		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2014	Mokka		Instrument Cluster	√	√	√	√	√	0040
2014	Mokka		Trailer Interface Control Module	√	√	√	√	√	0040
2014	Mokka		Headlamp Control Module	√	√	√	√	√	0366
2014	Mokka		Transmission Control Module	√	√	√	√	√	0422
2014	Mokka		Rear Differential Clutch Control Module	√	√	√	√	√	
2014	Mokka		Electronic Brake Control Module	√	√	√	√	√	0083
2014	Mokka		Power Steering Control Module	√	√	√	√		
2014	Mokka		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2014	Mokka		Frontview Camera Module	√	√	√	√	√	0108
2014	Mokka		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347 0086
2014	Mokka		Front Seat Heating Control Module	√	√	√	√	√	
2014	Mokka		Fuel Injector Control Module	√			√	√	
2014	Mokka		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2014	Mokka		Radio	√	√	√	√	√	
2014	Mokka		Parking Assist Control Module	√	√	√	√	√	0040
2014	Meriva-B		Engine Control Module						0210
2014	Zafira-C		HVAC Control Module	√	√	√	√	√	0211 0040
2014	Zafira-C		Transmission Control Module	√	√	√	√	√	0223 0122
2014	Zafira-C		Suspension Control Module	√	√	√	√	√	
2014	Zafira-C		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306
2014	Zafira-C		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376

2014	Zafira-C		Instrument Cluster	√	√	√	√	√	0040
2014	Zafira-C		Trailer Interface Control Module	√	√	√	√	√	0040
2014	Zafira-C		Headlamp Control Module	√	√	√	√	√	0366
2014	Zafira-C		Fuel Injector Control Module	√			√	√	
2014	Zafira-C		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2014	Zafira-C		Power Steering Control Module	√	√	√	√		0090
2014	Zafira-C		Parking Brake Control Module	√	√	√	√	√	0109
2014	Zafira-C		Distance Sensing Cruise Control Module	√	√	√	√		0231
2014	Zafira-C		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2014	Zafira-C		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2014	Zafira-C		Multimedia Player Interface Module	√	√	√	√		
2014	Zafira-C		Frontview Camera Module	√	√	√	√	√	0108
2014	Zafira-C		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2014	Zafira-C		Front Seat Heating Control Module	√	√	√	√	√	
2014	Zafira-C		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2014	Zafira-C		Radio	√	√	√		√	
2014	Zafira-C		Mobile Telephone Control Module	√	√	√	√	√	
2014	Zafira-C		Parking Assist Control Module	√	√	√	√	√	0040
2014	Zafira-C		Chassis Control Module	√	√	√	√	√	0016 0271 0365
2014	Corsa-D	Body	Interior Lighting	√	√	√	√		
2014	Corsa-D	Body	Wipers/Washer	√	√	√	√		
2014	Corsa-D	Body	Heating,Ventilation and Air Cond.	√	√	√	√		
2014	Corsa-D	Body	Anti Theft Warning System	√	√	√	√		
2014	Corsa-D	Body	Central Door Lock	√	√	√	√	√	
2014	Corsa-D	Body	Immobiliser	√	√	√	√		
2014	Corsa-D	Body	AFL (Adaptive Forward Lighting)	√	√	√	√		
2014	Corsa-D	Body	EHS (Electrical Heater System)	√	√	√	√		
2014	Corsa-D	Body	IPC ECU (Instrument Control Unit)	√	√	√	√		
2014	Corsa-D	Body	PAS (Park Pilot)	√	√	√	√		
2014	Corsa-D	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2014	Corsa-D	Body	TIM(Trailer Interface Module)	√	√	√	√		
2014	Corsa-D	Body	BCM (Body Control Module)	√	√	√	√		

2014	Corsa-D	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	
2014	Corsa-D	Chassis	Electronic Power Steering	√	√	√	√		
2014	Corsa-D	Chassis	Fuel injector control module	√			√		
2014	Corsa-D	Engine	Z10XEP	√	√	√	√	√	0007 0008 0009 0010 0011 0012 0013 0014 0015
2014	Corsa-D	Engine	A10XEP	√	√	√	√	√	0006 0016 0017 0018 0019
2014	Corsa-D	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2014	Corsa-D	Engine	A12XER	√	√	√	√	√	0006 0018
2014	Corsa-D	Engine	A12XEL	√	√	√	√	√	0006 0018
2014	Corsa-D	Engine	Z13DTH	√	√	√	√	√	0020 0010 0011 0014 0021
2014	Corsa-D	Engine	Z13DTE	√	√	√	√	√	0006
2014	Corsa-D	Engine	Z13DTJ	√	√	√	√	√	0019 0010 0011 0014 0020
2014	Corsa-D	Engine	A13DTC	√	√	√	√	√	0019
2014	Corsa-D	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2014	Corsa-D	Engine	A14XEL	√	√	√	√	√	0006 0015 0016 0017 0018
2014	Corsa-D	Engine	A14XER	√	√	√	√	√	0006 0015 0016 0017 0018
2014	Corsa-D	Engine	Z16LEL	√	√	√	√	√	
2014	Corsa-D	Engine	Z16LER	√	√	√	√	√	
2014	Corsa-D	Engine	A16LEL	√	√	√	√	√	
2014	Corsa-D	Engine	A16LER	√	√	√	√	√	

2014	Corsa-D	Engine	Z17DTR	√	√	√	√	√	0019 0022 0011 0014 0023 0024 0025 0012 0026 0027 0028 0029
2014	Corsa-D	Engine	Engine(default)	√	√	√			
2014	Corsa-D	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2014	Corsa-D	Transmission	AF 13-4	√	√	√	√	√	0031 0032 0033
2014	Corsa-D	Transmission	MTA(Easytronic)	√	√	√	√	√	0035 0036
2013	Adam		Engine Control Module	√	√	√	√	√	0048 0084 0018 0016 0306
2013	Adam		Electronic Brake Control Module	√	√	√	√	√	0082 0460 0269
2013	Adam		Power Steering Control Module	√	√	√	√		0090
2013	Adam		Body Control Module	√	√	√	√	√	0047 0048 0045 0372 0046 0334
2013	Adam		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2013	Adam		Instrument Cluster	√	√	√	√	√	0040
2013	Adam		Trailer Interface Control Module	√	√	√	√	√	0040
2013	Adam		Radio	√	√	√	√	√	
2013	Ampera		Engine Control Module	√	√	√	√	√	0017 0018 0016 0019 0586
2013	Ampera		Fuel Pump Control Module	√	√	√	√	√	0016
2013	Ampera		Hybrid Powertrain Control Module	√	√	√	√	√	
2013	Ampera		Transmission Control Module	√	√	√	√	√	
2013	Ampera		Drive Motor Control Module 1	√	√	√	√		
2013	Ampera		Drive Motor Control Module 2	√	√	√	√		
2013	Ampera		Auxiliary Transmission Fluid Pump	√	√	√	√		
2013	Ampera		Electronic Brake Control Module	√	√	√	√	√	0565
2013	Ampera		Parking Brake Control Module	√	√	√	√	√	0109
2013	Ampera		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2013	Ampera		Power Steering Control Module	√	√	√	√		0090
2013	Ampera		Steering Wheel Angle Sensor Module	√	√	√			0082 0083

2013	Ampera		Body Control Module	√	√	√	√	√	0047 0048 0045 0372 0378 0376 0046 0334 0403
2013	Ampera		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2013	Ampera		Instrument Cluster	√	√	√	√	√	0040 0040
2013	Ampera		Radio	√	√	√	√	√	
2013	Ampera		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2013	Ampera		Mobile Telephone Control Module	√	√	√	√	√	
2013	Ampera		Telematics Communication Interface Control Module	√	√	√	√		
2013	Ampera		Electric A/C Compressor Control Module	√					
2013	Ampera		Coolant Heater Control Module	√	√	√			
2013	Ampera		Front Seat Heating Control Module	√	√	√	√	√	
2013	Ampera		Keyless Entry Control Module	√	√	√	√	√	
2013	Ampera		Parking Assist Control Module	√	√	√	√	√	0040
2013	Ampera		Steering Column Lock Control Module	√	√	√	√		
2013	Ampera		Battery Charger Control Module	√			√		
2013	Ampera		Hybrid Powertrain Control Module 2	√	√	√	√	√	0556 0303 0240 0559 0301 0302
2013	Ampera		Battery Energy Control Module	√			√		
2013	Ampera		HVAC Control Module	√	√	√	√	√	0211 0307
2013	Ampera		Multimedia Player Interface Module	√	√	√	√		0040
2013	Ampera		Frontview Camera Module	√	√	√	√	√	0108
2013	Antara		Transmission Control Module	√	√	√	√	√	0422
2013	Antara		Instrument Cluster	√	√	√	√	√	
2013	Antara		Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Antara		Fuel Pump Control Module	√	√	√	√	√	0016
2013	Antara		Parking Assist Control Module	√	√	√	√	√	
2013	Antara		Parking Brake Control Module	√	√	√	√	√	0109
2013	Antara		Electronic Brake Control Module	√	√	√	√	√	0083
2013	Antara		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347 0442
2013	Antara		Info Display Module	√	√	√	√	√	0423 0398

2013	Antara		Variable Power Steering Control Module	√	√	√		√	
2013	Antara		Engine Control Module	√	√	√	√	√	0313
2013	Antara		Body Control Module	√	√	√	√	√	0048 0442
2013	Antara		Radio	√	√	√	√	√	0428 0040 0420
2013	Antara		HVAC Control Module	√	√	√		√	
2013	Antara		Auxiliary Body Control Module	√	√	√	√	√	0236
2013	Antara		Headlamp Control Module	√	√	√	√	√	0366
2013	Antara		Remote Control Door Lock Receiver	√	√	√	√	√	0374 0413 0335 0336 0337 0338 0332 0334 0403
2013	Antara		Theft Deterrent Module	√	√	√	√		
2013	Antara		Mobile Telephone Control Module	√	√	√		√	0040 0243 0423
2013	Astra-J		Engine Control Module	√	√	√	√	√	0048 0084 0018 0019 0016
2013	Astra-J		Fuel Pump Control Module	√	√	√	√	√	0016
2013	Astra-J		Transmission Control Module	√	√	√	√	√	0223 0122
2013	Astra-J		Parking Brake Control Module	√	√	√	√	√	0109
2013	Astra-J		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2013	Astra-J		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2013	Astra-J		Power Steering Control Module	√	√	√	√		0090
2013	Astra-J		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2013	Astra-J		Suspension Control Module	√	√	√	√	√	
2013	Astra-J		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2013	Astra-J		Instrument Cluster	√	√	√	√	√	0040
2013	Astra-J		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2013	Astra-J		Headlamp Control Module	√	√	√	√	√	0366
2013	Astra-J		Trailer Interface Control Module	√	√	√	√	√	0040
2013	Astra-J		Radio	√	√	√		√	
2013	Astra-J		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2013	Astra-J		Multimedia Player Interface Module	√	√	√	√		
2013	Astra-J		Mobile Telephone Control Module	√	√	√	√	√	

2013	Astra-J		Front Seat Heating Control Module	√	√	√	√	√	
2013	Astra-J		Parking Assist Control Module	√	√	√	√	√	0040
2013	Astra-J		HVAC Control Module	√	√	√	√	√	0211 0040
2013	Cascada		Power Steering Control Module	√	√	√	√		0090
2013	Cascada		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2013	Cascada		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2013	Cascada		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2013	Cascada		Front Seat Heating Control Module	√	√	√	√	√	
2013	Cascada		Parking Assist Control Module	√	√	√	√	√	0040
2013	Cascada		Transmission Control Module	√	√	√	√	√	0223 0122
2013	Cascada		Engine Control Module	√	√	√	√	√	
2013	Cascada		HVAC Control Module	√	√	√	√	√	0211 0040
2013	Cascada		Mobile Telephone Control Module	√	√	√	√	√	
2013	Cascada		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2013	Cascada		Headlamp Control Module	√	√	√	√	√	0366
2013	Cascada		Instrument Cluster	√	√	√	√	√	0040
2013	Cascada		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2013	Cascada		Multimedia Player Interface Module	√	√	√	√		
2013	Cascada		Suspension Control Module	√	√	√	√	√	
2013	Cascada		Folding Top Control Module	√	√	√	√	√	0040 0574 0575
2013	Cascada		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2013	Cascada		Frontview Camera Module	√	√	√	√	√	0108
2013	Cascada		Radio	√	√	√	√	√	
2013	Cascada		Parking Brake Control Module	√	√	√	√	√	0109
2013	Cascada		Fuel Pump Control Module	√	√	√	√	√	0016
2013	Combo-D		Engine Control Module	√	√	√	√	√	0576 0230 0578 0234 0221 0565 0316 0325 0426
2013	Combo-D		Transmission Control Module	√	√	√	√	√	0314 0427
2013	Combo-D		Electronic Brake Control Module	√	√	√	√	√	0459 0394 0083
2013	Combo-D		Body Control Module	√	√	√	√	√	0242 0418 0389

2013	Combo-D		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2013	Combo-D		Instrument Cluster	√	√	√	√	√	0218
2013	Combo-D		Multimedia Player Interface Module	√	√	√	√	√	
2013	Combo-D		HVAC Control Module	√	√	√	√	√	0211
2013	Combo-D		Auxiliary Heater Control Module	√	√	√	√	√	0278
2013	Combo-D		Parking Assist Control Module	√	√	√	√		0344
2013	Insignia		Engine Control Module	√	√	√	√	√	0048 0084 0018 0019 0016
2013	Insignia		Fuel Pump Control Module	√	√	√	√	√	0016
2013	Insignia		Transmission Control Module	√	√	√	√	√	0223 0122
2013	Insignia		Parking Brake Control Module	√	√	√	√	√	0109
2013	Insignia		Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Insignia		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2013	Insignia		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2013	Insignia		Power Steering Control Module	√	√	√	√		0090
2013	Insignia		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2013	Insignia		Suspension Control Module	√	√	√	√	√	
2013	Insignia		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2013	Insignia		Instrument Cluster	√	√	√	√	√	0040
2013	Insignia		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2013	Insignia		Headlamp Control Module	√	√	√	√	√	0366
2013	Insignia		Trailer Interface Control Module	√	√	√	√	√	0040
2013	Insignia		Radio	√	√	√		√	
2013	Insignia		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2013	Insignia		Multimedia Player Interface Module	√	√	√	√		
2013	Insignia		Mobile Telephone Control Module	√	√	√	√	√	
2013	Insignia		Liftgate Control Module	√	√	√	√	√	0323
2013	Insignia		Parking Assist Control Module	√	√	√	√	√	0040
2013	Insignia		Fuel Injector Control Module	√			√	√	
2013	Mokka		Engine Control Module	√	√	√	√	√	0048 0084 0018 0019 0016

2013	Mokka		Transmission Control Module	√	√	√	√	√	0422
2013	Mokka		Rear Differential Clutch Control Module	√	√	√	√	√	
2013	Mokka		Electronic Brake Control Module	√	√	√	√	√	0083
2013	Mokka		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2013	Mokka		Power Steering Control Module	√	√	√	√		
2013	Mokka		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2013	Mokka		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2013	Mokka		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2013	Mokka		Instrument Cluster	√	√	√	√	√	0040
2013	Mokka		Headlamp Control Module	√	√	√	√	√	0366
2013	Mokka		Trailer Interface Control Module	√	√	√	√	√	0040
2013	Mokka		Radio	√	√	√	√	√	
2013	Mokka		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2013	Mokka		Mobile Telephone Control Module	√	√	√	√	√	
2013	Mokka		HVAC Control Module	√	√	√	√	√	0211 0040
2013	Mokka		Front Seat Heating Control Module	√	√	√	√	√	
2013	Mokka		Parking Assist Control Module	√	√	√	√	√	0040
2013	Mokka		Frontview Camera Module	√	√	√	√	√	0040
2013	Zafira-C		Engine Control Module	√	√	√	√	√	0048 0084 0018 0019 0016
2013	Zafira-C		Fuel Injector Control Module	√			√	√	
2013	Zafira-C		Fuel Pump Control Module	√	√	√	√	√	0016
2013	Zafira-C		Transmission Control Module	√	√	√	√	√	0223 0122
2013	Zafira-C		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2013	Zafira-C		Distance Sensing Cruise Control Module	√	√	√	√		0231
2013	Zafira-C		Parking Brake Control Module	√	√	√	√	√	0109
2013	Zafira-C		Multi-Axis Acceleration Sensor Module	√	√	√			0350 0086
2013	Zafira-C		Power Steering Control Module	√	√	√	√		0090
2013	Zafira-C		Steering Wheel Angle Sensor Module	√	√	√			0082 0083
2013	Zafira-C		Suspension Control Module	√	√	√	√	√	

2013	Zafira-C		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376
2013	Zafira-C		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347
2013	Zafira-C		Instrument Cluster	√	√	√	√	√	0040
2013	Zafira-C		Headlamp Control Module	√	√	√	√	√	0366
2013	Zafira-C		Trailer Interface Control Module	√	√	√	√	√	0040
2013	Zafira-C		Radio	√	√	√		√	
2013	Zafira-C		Digital Radio Receiver Control Module	√	√	√	√	√	0040
2013	Zafira-C		Multimedia Player Interface Module	√	√	√	√		
2013	Zafira-C		Mobile Telephone Control Module	√	√	√	√	√	
2013	Zafira-C		HVAC Control Module	√	√	√	√	√	0211 0040
2013	Zafira-C		Front Seat Heating Control Module	√	√	√	√	√	
2013	Zafira-C		Parking Assist Control Module	√	√	√	√	√	0040
2013	Zafira-C		Frontview Camera Module	√	√	√	√	√	0040
2013	Agila_B	Body	BCM (Body Control Module)		√	√	√	√	
2013	Agila_B	Body	Immobiliser		√	√	√		
2013	Agila_B	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2013	Agila_B	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√		0005
2013	Agila_B	Chassis	Electronic Power Steering	√	√	√			
2013	Agila_B	Engine	K10B	√	√	√	√	√	0015
2013	Agila_B	Engine	K12B	√	√	√	√	√	0015
2013	Agila_B	Engine	D13A / Z 13 DTJ	√	√	√	√	√	0041 0019 0011 0021 0020 0018 0028 0025 0042
2013	Agila_B	Transmission	TCM (Transmission Control Module)	√	√	√	√		0033
2013	Astra-H	Body	AHL/AFL (Headlamp Levelling)	√	√	√	√		
2013	Astra-H	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2013	Astra-H	Body	Interior Lighting	√	√	√	√		
2013	Astra-H	Body	Wipers/Washer	√	√	√	√		
2013	Astra-H	Body	Central Door Lock	√	√	√	√		
2013	Astra-H	Body	Instrument	√	√	√	√		

2013	Astra-H	Body	Immobiliser	√	√	√	√		
2013	Astra-H	Body	CIM (Steering Column Module)	√	√	√	√	√	0052 0003 0053 0001 0004 0054
2013	Astra-H	Body	Anti Theft Warning System	√	√	√	√		
2013	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√		
2013	Astra-H	Body	ECC/SAC (Electronic Climate Control)	√	√	√	√		
2013	Astra-H	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	0006 0056 0057 0058 0059 0060 0061 0001 0004
2013	Astra-H	Body	EHS (Electrical Heater System)	√	√	√	√		
2013	Astra-H	Body	PAS (Park Pilot)	√	√	√	√		
2013	Astra-H	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2013	Astra-H	Body	SLM (Shift Lever Module)	√	√	√	√		
2013	Astra-H	Body	UEC (Underhood Electrical Centre)	√	√	√	√		
2013	Astra-H	Body	REC (Rear Electrical Centre)	√	√	√	√		
2013	Astra-H	Body	PEPS (Open&Start)	√	√	√	√		
2013	Astra-H	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2013	Astra-H	Chassis	TPMS ECU (Tyre Pressure Monitoring)	√	√	√	√		0035
2013	Astra-H	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		0062
2013	Astra-H	Chassis	EHPS (Electrohydraulic Power Steering)	√	√	√	√		0003
2013	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2013	Astra-H	Chassis	CDC (Continuous Damping Control)	√	√	√	√		
2013	Astra-H	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2013	Astra-H	Engine	Z12XEP	√	√	√	√	√	0009 0064 0011 0065 0012 0066 0006 0007 0008
2013	Astra-H	Engine	Y13DTH	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008

2013	Astra-H	Engine	Z13DTH	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0067 0020 0029 0028 0025 0026
2013	Astra-H	Engine	Z14XEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2013	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2013	Astra-H	Engine	Z16LET	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2013	Astra-H	Engine	Z16XE1	√	√	√	√	√	0019 0009 0063 0068 0064 0012 0065 0069 0006
2013	Astra-H	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2013	Astra-H	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2013	Astra-H	Engine	A16LET	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2013	Astra-H	Engine	A16XER	√	√	√	√	√	0019 0009 0063 0067 0064 0033 0012 0006 0007
2013	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012

2013	Astra-H	Engine	Z17DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0032
2013	Astra-H	Engine	Z17DTL	√	√	√	√	√	0063 0011 0064 0020 0024 0012 0029 0032 0018
2013	Astra-H	Engine	Z17DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0032
2013	Astra-H	Engine	A17DTJ	√	√	√	√	√	0019 0063 0011 0064 0014 0022 0023 0024 0012 0028 0025 0070 0026 0071 0006 0027 0028 0029
2013	Astra-H	Engine	A17DTR	√	√	√	√	√	0019 0063 0011 0064 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0006 0027 0028 0029
2013	Astra-H	Engine	Z18XE	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0012
2013	Astra-H	Engine	Z18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2013	Astra-H	Engine	A18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0033

2013	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0005 0028 0018
2013	Astra-H	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0005 0028 0018
2013	Astra-H	Engine	Z20LEH	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2013	Astra-H	Engine	Z20LEL	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2013	Astra-H	Engine	Z20LER	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2013	Astra-H	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0072 0019 0010 0011 0066 0012
2013	Astra-H	Engine	Engine(default)	√	√	√			
2013	Astra-H	Transmission	AF 40-6	√	√	√	√	√	0073 0074 0075 0076 0077 0078 0032 0003 0033
2013	Astra-H	Transmission	AF17-4	√	√	√	√	√	0030 0031 0032 0003 0033
2013	Astra-H	Transmission	AF 22-4	√	√	√	√	√	0032 0080 0033
2013	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0079 0034 0035
2013	Astra-H	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	0079 0004 0061

2013	Combo-D		Engine Control Module	√	√	√	√	√	0099 0085 0102 0131 0104 0019 0121 0106 0049
2013	Combo-D		Transmission Control Module	√	√	√	√	√	
2013	Combo-D		Body Control Module	√	√	√	√	√	
2013	Combo-D		Electronic Brake Control Module	√	√	√	√	√	0083
2013	Combo-D		HVAC Control Module	√	√	√	√	√	
2013	Combo-D		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2013	Combo-D		Instrument Cluster	√	√	√	√	√	
2013	Combo-D		Multimedia Player Interface Module	√	√	√	√	√	
2013	Combo-D		Auxiliary Heater Control Module	√	√	√	√	√	
2013	Combo-D		Parking Assist Control Module	√	√	√	√		
2013	Corsa-D	Body	Exterior Lighting	√	√	√	√		
2013	Corsa-D	Body	Interior Lighting	√	√	√	√		
2013	Corsa-D	Body	Wipers/Washer	√	√	√	√		
2013	Corsa-D	Body	Heating, Ventilation and Air Cond.	√	√	√	√		
2013	Corsa-D	Body	Anti Theft Warning System	√	√	√	√		
2013	Corsa-D	Body	Central Door Lock	√	√	√	√	√	
2013	Corsa-D	Body	Immobiliser	√	√	√	√		
2013	Corsa-D	Body	AFL (Adaptive Forward Lighting)	√	√	√	√		
2013	Corsa-D	Body	EHS (Electrical Heater System)	√	√	√	√		
2013	Corsa-D	Body	IPC ECU (Instrument Control Unit)	√	√	√	√		
2013	Corsa-D	Body	PAS (Park Pilot)	√	√	√	√		
2013	Corsa-D	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2013	Corsa-D	Body	TIM(Trailer Interface Module)	√	√	√	√		
2013	Corsa-D	Body	BCM (Body Control Module)	√	√	√	√		
2013	Corsa-D	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	
2013	Corsa-D	Chassis	Electronic Power Steering	√	√	√	√		
2013	Corsa-D	Chassis	Fuel injector control module	√			√		

2013	Corsa-D	Engine	Z10XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2013	Corsa-D	Engine	A10XEP	√	√	√	√	√	0006 0015 0016 0017 0018
2013	Corsa-D	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2013	Corsa-D	Engine	A12XER	√	√	√	√	√	0006 0018
2013	Corsa-D	Engine	A12XEL	√	√	√	√	√	0006 0018
2013	Corsa-D	Engine	Z13DTH	√	√	√	√	√	0019 0010 0011 0014 0020
2013	Corsa-D	Engine	Z13DTE	√	√	√	√	√	0006
2013	Corsa-D	Engine	Z13DTJ	√	√	√	√	√	0019 0010 0011 0014 0020
2013	Corsa-D	Engine	A13DTC	√	√	√	√	√	0019
2013	Corsa-D	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2013	Corsa-D	Engine	A14XEL	√	√	√	√	√	0006 0015 0016 0017 0018
2013	Corsa-D	Engine	A14XER	√	√	√	√	√	0006 0015 0016 0017 0018
2013	Corsa-D	Engine	Z16LEL	√	√	√	√	√	
2013	Corsa-D	Engine	Z16LER	√	√	√	√	√	
2013	Corsa-D	Engine	A16LEL	√	√	√	√	√	
2013	Corsa-D	Engine	A16LER	√	√	√	√	√	
2013	Corsa-D	Engine	Z17DTR	√	√	√	√	√	0019 0021 0011 0014 0022 0023 0024 0012 0025 0026 0027 0028
2013	Corsa-D	Engine	Engine(default)	√	√	√			

2013	Corsa-D	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2013	Corsa-D	Transmission	AF 13-4	√	√	√	√	√	0030 0031 0032
2013	Corsa-D	Transmission	MTA(Easytronic)	√	√	√	√	√	0034 0035
2013	Meriva-B	Body	Front Seat Heating Control Module	√	√	√	√		
2013	Meriva-B	Body	BCM (Body Control Module)	√	√	√	√		
2013	Meriva-B	Body	Headlamp Control Module	√	√	√	√		
2013	Meriva-B	Body	Inflatable Restraint Sensing&Diag.Module	√	√	√	√		
2013	Meriva-B	Body	Parking Assist Control Module	√	√	√	√	√	0108 0039
2013	Meriva-B	Body	Remote Heater & A/C Control Module	√	√	√	√		
2013	Meriva-B	Body	Instrument	√	√	√	√	√	0039
2013	Meriva-B	Body	Trailer Interface Control Module	√	√	√	√		
2013	Meriva-B	Chassis	Electronic Brake Control Module	√	√	√	√		
2013	Meriva-B	Chassis	Electric Power Steering Control Module	√	√	√	√		
2013	Meriva-B	Chassis	Parking Brake Control Module	√	√	√	√	√	0109 0110
2013	Meriva-B	Chassis	Steering Wheel Angle Sensor Module	√	√	√			0081
2013	Meriva-B	Chassis	Fuel injector control module	√			√		
2013	Meriva-B	Engine	A 13 DTC 1.3(LDV)	√	√	√	√	√	0083 0111 0112 0023 0024 0028 0025 0069 0113 0114 0115 0116
2013	Meriva-B	Engine	A 13 DTE 1.3(LSF)	√	√	√	√	√	0083 0119 0111 0023 0024 0028 0025 0069 0112 0113 0114 0115
2013	Meriva-B	Engine	A 14 NEL (LUH)	√	√	√	√	√	0018
2013	Meriva-B	Engine	A 14 NET (LUJ)	√	√	√	√	√	0018
2013	Meriva-B	Engine	A 14 XER (LDD)	√	√	√	√	√	0018
2013	Meriva-B	Engine	A 17 DTC 1.7(LUE)	√	√	√	√	√	0121 0103 0018
2013	Meriva-B	Engine	A 17 DTS 1.7(LUD)	√	√	√	√	√	0120 0103 0018
2013	Meriva-B	Engine	Engine Control Module	√	√	√	√	√	0025 0018
2013	Meriva-B	Transmission	Transmission Control Module	√	√	√	√	√	0078 0122
2013	Vivaro	Body	Park Pilot		√	√	√		

2013	Vivaro	Body	Add On Heater	√	√	√	√	√	0123 0124
2013	Vivaro	Body	Airbag		√	√	√		0004
2013	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2013	Vivaro	Transmission	MTA(Tecshift)		√	√	√	√	
2013	Zafira-B	Body	AHL/AFL (Headlamp Levelling)	√	√	√	√		
2013	Zafira-B	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2013	Zafira-B	Body	Interior Lighting	√	√	√	√		
2013	Zafira-B	Body	Wipers/Washer	√	√	√	√		
2013	Zafira-B	Body	Central Door Lock	√	√	√	√		
2013	Zafira-B	Body	Instrument	√	√	√	√		
2013	Zafira-B	Body	Immobiliser	√	√	√	√		
2013	Zafira-B	Body	CIM (Steering Column Module)	√	√	√	√	√	
2013	Zafira-B	Body	ECC/SAC (Electronic Climate Control)	√	√	√	√		
2013	Zafira-B	Body	EHS (Electrical Heater System)	√	√	√	√		
2013	Zafira-B	Body	PAS (Park Pilot)	√	√	√	√		
2013	Zafira-B	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2013	Zafira-B	Body	SLM (Shift Lever Module)	√	√	√	√		
2013	Zafira-B	Body	UEC (Underhood Electrical Centre)	√	√	√	√		
2013	Zafira-B	Body	REC (Rear Electrical Centre)	√	√	√	√		
2013	Zafira-B	Body	PEPS (Open&Start)	√	√	√	√		
2013	Zafira-B	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2013	Zafira-B	Body	Anti Theft Warning System	√	√	√	√		
2013	Zafira-B	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2013	Zafira-B	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	0005
2013	Zafira-B	Chassis	TPMS ECU (Tyre Pressure Monitoring)	√	√	√	√		
2013	Zafira-B	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		
2013	Zafira-B	Chassis	EHPS (Electrohydraulic Power Steering)	√	√	√	√		0003
2013	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2013	Zafira-B	Chassis	CDC (Continuous Damping Control)	√	√	√	√		

2013	Zafira-B	Engine	Z16XE1	√	√	√	√	√	0033 0018
2013	Zafira-B	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2013	Zafira-B	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2013	Zafira-B	Engine	Z16YNG	√	√	√	√	√	0033 0018
2013	Zafira-B	Engine	A16XER	√	√	√	√	√	0009 0019 0033
2013	Zafira-B	Engine	Z17DTJ	√	√	√	√	√	0019 0025 0027 0020 0018
2013	Zafira-B	Engine	A17DTJ	√	√	√	√	√	0006 0007 0008 0019 0025 0027
2013	Zafira-B	Engine	A17DTR	√	√	√	√	√	0006 0007 0008 0019 0025 0027
2013	Zafira-B	Engine	Z18XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2013	Zafira-B	Engine	A18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0033
2013	Zafira-B	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027
2013	Zafira-B	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0032 0010 0011 0066 0023 0024 0028 0025 0026
2013	Zafira-B	Engine	Z20LEH	√	√	√	√	√	0018
2013	Zafira-B	Engine	Z20LER	√	√	√	√	√	0018
2013	Zafira-B	Engine	Z22YH	√	√	√	√	√	0018

2013	Zafira-B	Engine	Engine(default)	√	√	√			
2013	Zafira-B	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0126 0075 0076 0077 0032 0033 0078
2013	Zafira-B	Transmission	MTA(Easytronic)	√	√	√	√	√	0034 0035
2013	Zafira-B	Transmission	AF 22-4	√	√	√	√	√	0032 0033
2012	Ampera		Engine Control Module	√	√	√	√	√	0017 0018 0016 0019 0586
2012	Ampera		Fuel Pump Control Module	√	√	√	√	√	0016
2012	Ampera		Hybrid Powertrain Control Module	√	√	√	√	√	
2012	Ampera		Transmission Control Module	√	√	√	√	√	
2012	Ampera		Drive Motor Control Module 1	√	√	√	√		
2012	Ampera		Drive Motor Control Module 2	√	√	√	√		
2012	Ampera		Auxiliary Transmission Fluid Pump	√	√	√	√		
2012	Ampera		Electronic Brake Control Module	√	√	√	√	√	0565
2012	Ampera		Parking Brake Control Module	√	√	√	√	√	0109
2012	Ampera		Multi-Axis Acceleration Sensor Module	√	√	√			0350
2012	Ampera		Power Steering Control Module	√	√	√	√		0090
2012	Ampera		Steering Wheel Angle Sensor Module	√	√	√			
2012	Ampera		Body Control Module	√	√	√	√	√	0047 0048 0045 0372 0378 0376 0046 0334 0332
2012	Ampera		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2012	Ampera		Passenger Presence Module	√	√	√	√		0579
2012	Ampera		Instrument Cluster	√	√	√	√	√	0040 0040
2012	Ampera		Radio	√	√	√	√	√	
2012	Ampera		Digital Radio Receiver Control Module	√	√	√	√	√	
2012	Ampera		Mobile Telephone Control Module	√	√	√	√	√	
2012	Ampera		Telematics Communication Interface Control Module	√	√	√	√	√	0580
2012	Ampera		Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0211 0307

2012	Ampera		Electric A/C Compressor Control Module	√					
2012	Ampera		Coolant Heater Control Module	√	√	√			
2012	Ampera		Front Seat Heating Control Module	√	√	√	√	√	
2012	Ampera		Keyless Entry Control Module	√	√	√	√	√	
2012	Ampera		Parking Assist Control Module	√	√	√	√	√	0040
2012	Ampera		Steering Column Lock Control Module	√	√	√	√		
2012	Ampera		Battery Charger Control Module	√			√		
2012	Ampera		Hybrid Powertrain Control Module 2	√	√	√	√	√	0556 0303 0240 0559 0301 0302
2012	Ampera		Battery Energy Control Module	√			√		
2012	Antara		Engine Control Module	√	√	√	√	√	0048 0084 0017 0018 0016 0571
2012	Antara		Fuel Pump Control Module	√	√	√	√	√	0016
2012	Antara		Transmission Control Module	√	√	√	√	√	0422
2012	Antara		Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Antara		Electronic Brake Control Module	√	√	√	√	√	0083
2012	Antara		Parking Brake Control Module	√	√	√	√	√	0109
2012	Antara		Variable Power Steering Control Module	√	√	√		√	
2012	Antara		Body Control Module	√	√	√	√	√	0048 0442
2012	Antara		Auxiliary Body Control Module	√	√	√	√	√	0236
2012	Antara		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0347 0442
2012	Antara		Instrument Cluster	√	√	√	√	√	
2012	Antara		Headlamp Control Module	√	√	√	√	√	0366
2012	Antara		Radio	√	√	√	√	√	0428 0040 0420
2012	Antara		Mobile Telephone Control Module	√	√	√		√	0040 0243 0423
2012	Antara		HVAC Control Module	√	√	√		√	
2012	Antara		Info Display Module	√	√	√	√	√	0423 0398
2012	Antara		Remote Control Door Lock Receiver	√	√	√	√	√	0374 0413 0335 0336 0337 0338 0332 0334 0403
2012	Antara		Parking Assist Control Module	√	√	√	√	√	
2012	Antara		Theft Deterrent Module	√	√	√	√		

2012	Astra-J		Engine Control Module	√	√	√	√	√	0313 0306
2012	Astra-J		Fuel Injector Control Module	√			√	√	
2012	Astra-J		Fuel Pump Control Module	√	√	√	√	√	0016
2012	Astra-J		Transmission Control Module	√	√	√	√	√	0223 0122
2012	Astra-J		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2012	Astra-J		Parking Brake Control Module	√	√	√	√	√	0109
2012	Astra-J		Multi-Axis Acceleration Sensor Module	√	√	√			0350
2012	Astra-J		Power Steering Control Module	√	√	√	√		0090
2012	Astra-J		Steering Wheel Angle Sensor Module	√	√	√			
2012	Astra-J		Suspension Control Module	√	√	√	√	√	
2012	Astra-J		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2012	Astra-J		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2012	Astra-J		Instrument Cluster	√	√	√	√	√	0040
2012	Astra-J		Chime Alarm Control Module	√	√	√		√	
2012	Astra-J		Headlamp Control Module	√	√	√	√	√	0366
2012	Astra-J		Trailer Interface Control Module	√	√	√	√	√	0040
2012	Astra-J		Radio	√	√	√	√	√	
2012	Astra-J		Digital Radio Receiver Control Module	√	√	√	√	√	
2012	Astra-J		Multimedia Player Interface Module	√	√	√	√		
2012	Astra-J		Mobile Telephone Control Module	√	√	√	√	√	
2012	Astra-J		Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0211 0040
2012	Astra-J		Front Seat Heating Control Module	√	√	√	√	√	
2012	Astra-J		Parking Assist Control Module	√	√	√	√	√	0040
2012	Astra-J		Vehicle Direction Camera Control Module	√	√	√	√	√	
2012	Combo-D		Engine Control Module	√	√	√	√	√	0576 0230 0578 0234 0122 0221 0565 0316 0325
2012	Combo-D		Transmission Control Module	√	√	√	√	√	0314 0427
2012	Combo-D		Electronic Brake Control Module	√	√	√	√	√	0459 0394 0083

2012	Combo-D		Body Control Module	√	√	√	√	√	0242 0418 0389
2012	Combo-D		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	
2012	Combo-D		Instrument Cluster	√	√	√	√	√	0218
2012	Combo-D		Multimedia Player Interface Module	√	√	√	√	√	
2012	Combo-D		HVAC Control Module	√	√	√	√	√	0211
2012	Combo-D		Auxiliary Heater Control Module	√	√	√	√	√	0278
2012	Combo-D		Parking Assist Control Module	√	√	√	√	√	0344
2012	Insignia		Engine Control Module	√	√	√	√	√	0084 0018 0016
2012	Insignia		Fuel Injector Control Module	√			√	√	
2012	Insignia		Fuel Pump Control Module	√	√	√	√	√	0016
2012	Insignia		Transmission Control Module	√	√	√	√	√	0223 0122
2012	Insignia		Rear Differential Clutch Control Module	√	√	√	√	√	
2012	Insignia		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2012	Insignia		Parking Brake Control Module	√	√	√	√	√	0109
2012	Insignia		Multi-Axis Acceleration Sensor Module	√	√	√			0350
2012	Insignia		Power Steering Control Module	√	√	√	√		0090
2012	Insignia		Steering Wheel Angle Sensor Module	√	√	√			
2012	Insignia		Suspension Control Module	√	√	√	√	√	
2012	Insignia		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2012	Insignia		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2012	Insignia		Instrument Cluster	√	√	√	√	√	0040
2012	Insignia		Chime Alarm Control Module	√	√	√		√	
2012	Insignia		Headlamp Control Module	√	√	√	√	√	0366
2012	Insignia		Trailer Interface Control Module	√	√	√	√	√	0040
2012	Insignia		Radio	√	√	√	√	√	
2012	Insignia		Digital Radio Receiver Control Module	√	√	√	√	√	
2012	Insignia		Multimedia Player Interface Module	√	√	√	√		0040
2012	Insignia		Mobile Telephone Control Module	√	√	√	√	√	
2012	Insignia		Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0211 0040

2012	Insignia		Liftgate Control Module	√	√	√	√	√	0323
2012	Insignia		Seat Memory Control Module	√	√	√	√	√	0581
2012	Insignia		Front Seat Heating Control Module	√	√	√	√	√	
2012	Insignia		Parking Assist Control Module	√	√	√	√	√	0040
2012	Insignia		Vehicle Direction Camera Control Module	√	√	√	√	√	
2012	Insignia		Distance Sensing Cruise Control Module	√	√	√	√		0231
2012	Zafira-C		Engine Control Module	√	√	√	√	√	0313 0105 0385 0103 0102
2012	Zafira-C		Fuel Injector Control Module	√			√	√	
2012	Zafira-C		Transmission Control Module	√	√	√	√	√	0223 0122
2012	Zafira-C		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2012	Zafira-C		Distance Sensing Cruise Control Module	√	√	√	√		0231
2012	Zafira-C		Parking Brake Control Module	√	√	√	√	√	0109
2012	Zafira-C		Multi-Axis Acceleration Sensor Module	√	√	√			0350
2012	Zafira-C		Power Steering Control Module	√	√	√	√		0090
2012	Zafira-C		Steering Wheel Angle Sensor Module	√	√	√			
2012	Zafira-C		Suspension Control Module	√	√	√	√	√	
2012	Zafira-C		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2012	Zafira-C		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2012	Zafira-C		Instrument Cluster	√	√	√	√	√	0040
2012	Zafira-C		Chime Alarm Control Module	√	√	√		√	
2012	Zafira-C		Headlamp Control Module	√	√	√	√	√	0366
2012	Zafira-C		Trailer Interface Control Module	√	√	√	√	√	0040
2012	Zafira-C		Radio	√	√	√	√	√	
2012	Zafira-C		Digital Radio Receiver Control Module	√	√	√	√	√	
2012	Zafira-C		Multimedia Player Interface Module	√	√	√	√		
2012	Zafira-C		Mobile Telephone Control Module	√	√	√	√	√	
2012	Zafira-C		Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0211 0040
2012	Zafira-C		Front Seat Heating Control Module	√	√	√	√	√	

2012	Zafira-C		Parking Assist Control Module	√	√	√	√	√	0040
2012	Zafira-C		Vehicle Direction Camera Control Module	√	√	√	√	√	0040
2012	Agila-B	Body	BCM (Body Control Module)		√	√	√		
2012	Agila-B	Body	Immobiliser		√	√	√		
2012	Agila-B	Body	SDM (Airbag)		√	√	√		0000 0001 0002
2012	Agila-B	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√		0005
2012	Agila-B	Chassis	Electronic Power Steering		√	√	√		
2012	Agila-B	Engine	K10B	√	√	√	√	√	0015
2012	Agila-B	Engine	K12B	√	√	√	√	√	0015
2012	Agila-B	Engine	D13A / Z 13 DTJ	√	√	√	√	√	0040 0019 0020 0018 0025 0042
2012	Agila-B	Transmission	TCM (Transmission Control Module)	√	√	√	√		0033
2012	Astra-H	Body	AHL/AFL (Headlamp Levelling)	√	√	√	√		
2012	Astra-H	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2012	Astra-H	Body	Interior Lighting	√	√	√	√		
2012	Astra-H	Body	Wipers/Washer	√	√	√	√		
2012	Astra-H	Body	Central Door Lock	√	√	√	√		
2012	Astra-H	Body	Instrument	√	√	√	√		
2012	Astra-H	Body	Immobiliser	√	√	√	√		
2012	Astra-H	Body	CIM (Steering Column Module)	√	√	√	√	√	
2012	Astra-H	Body	Anti Theft Warning System	√	√	√	√		
2012	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√		
2012	Astra-H	Body	ECC/SAC (Electronic Climate Control)	√	√	√	√		
2012	Astra-H	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2012	Astra-H	Body	EHS (Electrical Heater System)	√	√	√	√		
2012	Astra-H	Body	PAS (Park Pilot)	√	√	√	√		
2012	Astra-H	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2012	Astra-H	Body	SLM (Shift Lever Module)	√	√	√	√		
2012	Astra-H	Body	UEC (Underhood Electrical Centre)	√	√	√	√		

2012	Astra-H	Body	REC (Rear Electrical Centre)	√	√	√	√		
2012	Astra-H	Body	PEPS (Open&Start)	√	√	√	√		
2012	Astra-H	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2012	Astra-H	Chassis	TPMS ECU (Tyre Pressure Monitoring)	√	√	√	√		
2012	Astra-H	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		
2012	Astra-H	Chassis	EHPS (Electrohydraulic Power Steering)	√	√	√	√		0003
2012	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2012	Astra-H	Chassis	CDC (Continuous Damping Control)	√	√	√	√		
2012	Astra-H	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2012	Astra-H	Engine	Z12XEP	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2012	Astra-H	Engine	Y13DTH	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2012	Astra-H	Engine	Z13DTH	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0020 0029 0028 0025 0026
2012	Astra-H	Engine	Z14XEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2012	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2012	Astra-H	Engine	Z16LET	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2012	Astra-H	Engine	Z16XE1	√	√	√	√	√	0019 0009 0063 0067 0064 0012 0065 0068 0006

2012	Astra-H	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2012	Astra-H	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2012	Astra-H	Engine	A16LET	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2012	Astra-H	Engine	A16XER	√	√	√	√	√	0019 0009 0063 0067 0064 0033 0012 0006 0007
2012	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012
2012	Astra-H	Engine	Z17DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030
2012	Astra-H	Engine	Z17DTL	√	√	√	√	√	0063 0011 0064 0020 0024 0012 0029 0032 0018
2012	Astra-H	Engine	Z17DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030

2012	Astra-H	Engine	A17DTJ	√	√	√	√	√	0019 0063 0011 0064 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0006 0007 0008 0007
2012	Astra-H	Engine	A17DTR	√	√	√	√	√	0019 0063 0011 0064 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0006 0007 0008 0007
2012	Astra-H	Engine	Z18XE	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0012
2012	Astra-H	Engine	Z18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2012	Astra-H	Engine	A18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0033
2012	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0007 0008 0010
2012	Astra-H	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0007 0008 0010
2012	Astra-H	Engine	Z20LEH	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008

2012	Astra-H	Engine	Z20LEL	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2012	Astra-H	Engine	Z20LER	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2012	Astra-H	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2012	Astra-H	Engine	Engine(default)	√	√	√			
2012	Astra-H	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2012	Astra-H	Transmission	AF17-4	√	√	√	√	√	0030 0031 0032 0003 0033
2012	Astra-H	Transmission	AF 22-4	√	√	√	√	√	0032 0079 0033
2012	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0079 0034 0035
2012	Astra-H	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	0079 0004 0061
2012	Corsa-C	Body	Airbag	√	√	√	√	√	
2012	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0139
2012	Corsa-C	Body	Instrument	√	√	√	√		
2012	Corsa-C	Body	Immobiliser	√	√	√	√		0140 0141
2012	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2012	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0142
2012	Corsa-C	Chassis	ABS8/ESP8 (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0005 0143 0144 0145 0004
2012	Corsa-C	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2012	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2012	Corsa-C	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2012	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0146 0009 0040 0019 0021 0011 0065 0033

2012	Corsa-C	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065
2012	Corsa-C	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2012	Corsa-C	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2012	Corsa-C	Engine	Z13DTJ	√	√	√	√	√	0040
2012	Corsa-C	Engine	Z14XE	√			√	√	0021
2012	Corsa-C	Engine	Z14XEP	√	√	√	√	√	0011
2012	Corsa-C	Engine	Z16SE	√	√	√	√	√	
2012	Corsa-C	Engine	Z16YNG	√	√	√	√	√	0006 0147 0145 0009 0019 0011
2012	Corsa-C	Engine	Y17DT	√	√	√	√	√	
2012	Corsa-C	Engine	Y17DTL	√	√	√	√	√	
2012	Corsa-C	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0148 0022
2012	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2012	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2012	Corsa-C	Transmission	Easytronic(MTA)	√	√	√	√	√	0011 0149
2012	Corsa-D	Body	Exterior Lighting	√	√	√	√		
2012	Corsa-D	Body	Interior Lighting	√	√	√	√		
2012	Corsa-D	Body	Wipers/Washer	√	√	√	√		
2012	Corsa-D	Body	Heating,Ventilation and Air Cond.	√	√	√	√		
2012	Corsa-D	Body	Anti Theft Warning System	√	√	√	√		
2012	Corsa-D	Body	Central Door Lock	√	√	√	√	√	
2012	Corsa-D	Body	Immobiliser	√	√	√	√		
2012	Corsa-D	Body	AFL (Adaptive Forward Lighting)	√	√	√	√		
2012	Corsa-D	Body	EHS (Electrical Heater System)	√	√	√	√		
2012	Corsa-D	Body	IPC ECU (Instrument Control Unit)	√	√	√	√		
2012	Corsa-D	Body	PAS (Park Pilot)	√	√	√	√		
2012	Corsa-D	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2012	Corsa-D	Body	TIM(Trailer Interface Module)	√	√	√	√		

2012	Corsa-D	Body	BCM (Body Control Module)	√	√	√	√		
2012	Corsa-D	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	
2012	Corsa-D	Chassis	Electronic Power Steering	√	√	√	√		
2012	Corsa-D	Chassis	Fuel injector control module	√			√		
2012	Corsa-D	Engine	Z10XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2012	Corsa-D	Engine	A10XEP	√	√	√	√	√	0006 0015 0016 0017 0018
2012	Corsa-D	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2012	Corsa-D	Engine	A12XER	√	√	√	√	√	0006 0018
2012	Corsa-D	Engine	A12XEL	√	√	√	√	√	0006 0018
2012	Corsa-D	Engine	Z13DTH	√	√	√	√	√	0019 0010 0011 0014 0020
2012	Corsa-D	Engine	Z13DTE	√	√	√	√	√	0006
2012	Corsa-D	Engine	Z13DTJ	√	√	√	√	√	0019 0010 0011 0014 0020
2012	Corsa-D	Engine	A13DTC	√	√	√	√	√	0019
2012	Corsa-D	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2012	Corsa-D	Engine	A14XEL	√	√	√	√	√	0006 0015 0016 0017 0018
2012	Corsa-D	Engine	A14XER	√	√	√	√	√	0006 0015 0016 0017 0018
2012	Corsa-D	Engine	Z16LEL	√	√	√	√	√	
2012	Corsa-D	Engine	Z16LER	√	√	√	√	√	
2012	Corsa-D	Engine	A16LEL	√	√	√	√	√	
2012	Corsa-D	Engine	A16LER	√	√	√	√	√	

2012	Corsa-D	Engine	Z17DTR	√	√	√	√	√	0019 0021 0011 0014 0022 0023 0024 0012 0025 0026 0027 0028
2012	Corsa-D	Engine	Engine(default)	√	√	√			
2012	Corsa-D	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2012	Corsa-D	Transmission	AF 13-4	√	√	√	√	√	0030 0031 0032
2012	Corsa-D	Transmission	MTA(Easytronic)	√	√	√	√	√	0034 0035
2012	Meriva-B	Body	Front Seat Heating Control Module	√	√	√	√		
2012	Meriva-B	Body	BCM (Body Control Module)	√	√	√	√		
2012	Meriva-B	Body	Headlamp Control Module	√	√	√	√		
2012	Meriva-B	Body	Inflatable Restraint Sensing&Diag.Module	√	√	√	√		
2012	Meriva-B	Body	Parking Assist Control Module	√	√	√	√	√	0107 0039
2012	Meriva-B	Body	Remote Heater & A/C Control Module	√	√	√	√		
2012	Meriva-B	Body	Instrument	√	√	√	√	√	0039
2012	Meriva-B	Body	Trailer Interface Control Module	√	√	√	√		
2012	Meriva-B	Chassis	Electronic Brake Control Module	√	√	√	√		
2012	Meriva-B	Chassis	Electric Power Steering Control Module	√	√	√	√		
2012	Meriva-B	Chassis	Parking Brake Control Module	√	√	√	√	√	0108 0109
2012	Meriva-B	Chassis	Steering Wheel Angle Sensor Module	√	√	√			0081
2012	Meriva-B	Chassis	Fuel injector control module	√			√		
2012	Meriva-B	Engine	A 13 DTC 1.3(LDV)	√	√	√	√	√	0083 0110 0111 0023 0024 0028 0025 0069 0112 0113 0114 0115
2012	Meriva-B	Engine	A 13 DTE 1.3(LSF)	√	√	√	√	√	0083 0118 0111 0023 0024 0028 0025 0069 0112 0113 0114 0115
2012	Meriva-B	Engine	A 14 NEL (LUH)	√	√	√	√	√	0018
2012	Meriva-B	Engine	A 14 NET (LUJ)	√	√	√	√	√	0018
2012	Meriva-B	Engine	A 14 XER (LDD)	√	√	√	√	√	0018

2012	Meriva-B	Engine	A 17 DTC 1.7(LUE)	√	√	√	√	√	0120 0103 0018
2012	Meriva-B	Engine	A 17 DTS 1.7(LUD)	√	√	√	√	√	0120 0103 0018
2012	Meriva-B	Engine	Engine Control Module	√	√	√	√	√	0025 0018
2012	Meriva-B	Transmission	Transmission Control Module	√	√	√	√	√	0078 0121
2012	Vauxhall VXR8	Body	AHL(Automatic Headlamp Levelling)	√	√	√	√		
2012	Vauxhall VXR8	Body	BCM (Body Control Module)	√	√	√	√		
2012	Vauxhall VXR8	Body	HVAC(Heating Ventilation and Cooling)	√	√	√	√		
2012	Vauxhall VXR8	Body	Immobiliser	√	√	√	√		
2012	Vauxhall VXR8	Body	MSM(Memory Seat and Mirrors)	√	√	√	√		
2012	Vauxhall VXR8	Body	Park Assist	√	√	√	√		
2012	Vauxhall VXR8	Body	SDM(Sensing and Diagnostic Module)	√	√	√	√		
2012	Vauxhall VXR8	Body	IPC (Instrument Panel Cluster)	√	√	√	√		
2012	Vauxhall VXR8	Body	RFA (Multipurpose Receiver Module)	√	√	√	√		
2012	Vauxhall VXR8	Chassis	Fuel Pump Control Module	√	√	√	√		
2012	Vauxhall VXR8	Chassis	EBCM(Electronic Brake Control Module)	√	√	√	√		
2012	Vauxhall VXR8	Chassis	ESC(Electronic Suspension Control)	√	√	√	√		
2012	Vauxhall VXR8	Engine	V8 GEN IV	√	√	√	√	√	0150
2012	Vauxhall VXR8	Transmission	Automatic Transmission	√	√	√	√	√	
2012	Vivaro	Body	Airbag		√	√	√		0004
2012	Vivaro	Body	Park Pilot		√	√	√		
2012	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2012	Vivaro	Body	Body Control Module		√	√	√	√	
2012	Vivaro	Body	Airbag		√	√	√		0004
2012	Vivaro	Transmission	MTA(Tecshift)		√	√	√	√	
2012	Zafira-B	Body	AHL/AFL (Headlamp Levelling)	√	√	√	√		
2012	Zafira-B	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2012	Zafira-B	Body	Interior Lighting	√	√	√	√		
2012	Zafira-B	Body	Wipers/Washer	√	√	√	√		
2012	Zafira-B	Body	Central Door Lock	√	√	√	√		
2012	Zafira-B	Body	Instrument	√	√	√	√		
2012	Zafira-B	Body	Immobiliser	√	√	√	√		
2012	Zafira-B	Body	CIM (Steering Column Module)	√	√	√	√	√	

2012	Zafira-B	Body	ECC/SAC (Electronic Climate Control)	√	√	√	√		
2012	Zafira-B	Body	EHS (Electrical Heater System)	√	√	√	√		
2012	Zafira-B	Body	PAS (Park Pilot)	√	√	√	√		
2012	Zafira-B	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2012	Zafira-B	Body	SLM (Shift Lever Module)	√	√	√	√		
2012	Zafira-B	Body	UEC (Underhood Electrical Centre)	√	√	√	√		
2012	Zafira-B	Body	REC (Rear Electrical Centre)	√	√	√	√		
2012	Zafira-B	Body	PEPS (Open&Start)	√	√	√	√		
2012	Zafira-B	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2012	Zafira-B	Body	Anti Theft Warning System	√	√	√	√		
2012	Zafira-B	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2012	Zafira-B	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	0005
2012	Zafira-B	Chassis	TPMS ECU (Tyre Pressure Monitoring)	√	√	√	√		
2012	Zafira-B	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		
2012	Zafira-B	Chassis	EHPS (Electrohydraulic Power Steering)	√	√	√	√		0003
2012	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2012	Zafira-B	Chassis	CDC (Continuous Damping Control)	√	√	√	√		
2012	Zafira-B	Engine	Z16XE1	√	√	√	√	√	0033 0018
2012	Zafira-B	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2012	Zafira-B	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2012	Zafira-B	Engine	Z16YNG	√	√	√	√	√	0033 0018
2012	Zafira-B	Engine	A16XER	√	√	√	√	√	0009 0019 0033
2012	Zafira-B	Engine	Z17DTJ	√	√	√	√	√	0019 0025 0027 0020 0018

2012	Zafira-B	Engine	A17DTJ	√	√	√	√	√	0124 0006 0007 0008 0019 0025
2012	Zafira-B	Engine	A17DTR	√	√	√	√	√	0006 0007 0008 0019 0025 0027
2012	Zafira-B	Engine	Z18XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2012	Zafira-B	Engine	A18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0033
2012	Zafira-B	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2012	Zafira-B	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0032 0010 0011 0066 0023 0024 0028 0025 0026
2012	Zafira-B	Engine	Z20LEH	√	√	√	√	√	0018
2012	Zafira-B	Engine	Z20LER	√	√	√	√	√	0018
2012	Zafira-B	Engine	Z22YH	√	√	√	√	√	0018
2012	Zafira-B	Engine	Engine(default)	√	√	√			
2012	Zafira-B	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0075 0076 0077 0032
2012	Zafira-B	Transmission	MTA(Easytronic)	√	√	√	√	√	0034 0035
2012	Zafira-B	Transmission	AF 22-4	√	√	√	√	√	0032 0033
2011	Antara Captive(Short Body)		Engine Control Module	√	√	√	√	√	0048 0017 0018 0084 0016 0571
2011	Antara Captive(Short Body)		Fuel Pump Control Module	√	√	√	√	√	0016
2011	Antara Captive(Short Body)		Transmission Control Module	√	√	√	√	√	

2011	Antara Captive(Short Body)		Rear Differential Clutch Control Module	√	√	√	√	√	0328
2011	Antara Captive(Short Body)		Electronic Brake Control Module	√	√	√	√	√	0083 0086
2011	Antara Captive(Short Body)		Parking Brake Control Module	√	√	√	√	√	0109
2011	Antara Captive(Short Body)		Variable Power Steering Control Module	√	√	√		√	
2011	Antara Captive(Short Body)		Body Control Module	√	√	√	√	√	0048 0442
2011	Antara Captive(Short Body)		Auxiliary Body Control Module	√	√	√	√	√	0236
2011	Antara Captive(Short Body)		Inflatable Restraint Sensing and Diagnostic Module	√	√	√	√	√	0442
2011	Antara Captive(Short Body)		Instrument Cluster	√	√	√	√	√	
2011	Antara Captive(Short Body)		Headlamp Control Module	√	√	√	√	√	0366
2011	Antara Captive(Short Body)		Radio	√	√	√	√	√	0344 0583
2011	Antara Captive(Short Body)		Mobile Telephone Control Module	√	√	√	√	√	0040
2011	Antara Captive(Short Body)		HVAC Control Module	√	√	√		√	
2011	Antara Captive(Short Body)		Info Display Module	√	√	√			0344
2011	Antara Captive(Short Body)		Remote Control Door Lock Receiver	√	√	√	√	√	0374 0413 0335 0336 0337 0338 0332 0334 0403
2011	Antara Captive(Short Body)		Parking Assist Control Module	√	√	√	√	√	

2011	Antara Captive(Short Body)		Theft Deterrent Module	√	√	√	√		
2011	Astra-J		Engine Control Module	√	√	√	√	√	0313 0306
2011	Astra-J		Fuel Injector Control Module	√			√	√	
2011	Astra-J		Fuel Pump Control Module	√	√	√	√	√	0016
2011	Astra-J		Transmission Control Module	√	√	√	√	√	0223 0122
2011	Astra-J		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2011	Astra-J		Parking Brake Control Module	√	√	√	√	√	0109
2011	Astra-J		Multi-Axis Acceleration Sensor Module	√	√	√			0350
2011	Astra-J		Power Steering Control Module	√	√	√	√		0090
2011	Astra-J		Steering Wheel Angle Sensor Module	√	√	√			
2011	Astra-J		Suspension Control Module	√	√	√	√	√	
2011	Astra-J		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2011	Astra-J		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2011	Astra-J		Instrument Cluster	√	√	√	√	√	0040
2011	Astra-J		Chime Alarm Control Module	√	√	√		√	
2011	Astra-J		Headlamp Control Module	√	√	√	√	√	0366
2011	Astra-J		Trailer Interface Control Module	√	√	√	√	√	0040
2011	Astra-J		Radio	√	√	√	√	√	
2011	Astra-J		Digital Radio Receiver Control Module	√	√	√	√	√	
2011	Astra-J		Multimedia Player Interface Module	√	√	√	√		
2011	Astra-J		Mobile Telephone Control Module	√	√	√	√	√	
2011	Astra-J		Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0211 0040
2011	Astra-J		Front Seat Heating Control Module	√	√	√	√	√	
2011	Astra-J		Parking Assist Control Module	√	√	√	√	√	0040
2011	Astra-J		Vehicle Direction Camera Control Module	√	√	√	√	√	
2011	Insignia		Engine Control Module	√	√	√	√	√	0084 0018 0016
2011	Insignia		Fuel Injector Control Module	√			√	√	
2011	Insignia		Fuel Pump Control Module	√	√	√	√	√	0016

2011	Insignia		Transmission Control Module	√	√	√	√	√	0223 0122
2011	Insignia		Rear Differential Clutch Control Module	√	√	√	√	√	
2011	Insignia		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2011	Insignia		Parking Brake Control Module	√	√	√	√	√	0109
2011	Insignia		Multi-Axis Acceleration Sensor Module	√	√	√			0350
2011	Insignia		Power Steering Control Module	√	√	√	√		0090
2011	Insignia		Steering Wheel Angle Sensor Module	√	√	√			
2011	Insignia		Suspension Control Module	√	√	√	√	√	
2011	Insignia		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2011	Insignia		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2011	Insignia		Instrument Cluster	√	√	√	√	√	0040
2011	Insignia		Chime Alarm Control Module	√	√	√		√	
2011	Insignia		Headlamp Control Module	√	√	√	√	√	0366
2011	Insignia		Trailer Interface Control Module	√	√	√	√	√	0040
2011	Insignia		Radio	√	√	√	√	√	
2011	Insignia		Digital Radio Receiver Control Module	√	√	√	√	√	
2011	Insignia		Multimedia Player Interface Module	√	√	√	√		0040
2011	Insignia		Mobile Telephone Control Module	√	√	√	√	√	
2011	Insignia		Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0211 0040
2011	Insignia		Liftgate Control Module	√	√	√	√	√	0323
2011	Insignia		Seat Memory Control Module	√	√	√	√	√	0581
2011	Insignia		Front Seat Heating Control Module	√	√	√	√	√	
2011	Insignia		Parking Assist Control Module	√	√	√	√	√	0040
2011	Insignia		Vehicle Direction Camera Control Module	√	√	√	√	√	
2011	Insignia		Distance Sensing Cruise Control Module	√	√	√	√		0231
2011	Agila-B	Body	BCM (Body Control Module)		√	√	√	√	
2011	Agila-B	Body	Immobiliser		√	√	√		
2011	Agila-B	Body	SDM (Airbag)		√	√	√		

2011	Agila-B	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√		0005
2011	Agila-B	Chassis	Electronic Power Steering		√	√	√		
2011	Agila-B	Engine	K10B	√	√	√	√	√	0015
2011	Agila-B	Engine	K12B	√	√	√	√	√	0015
2011	Agila-B	Engine	D13A / Z 13 DTJ	√	√	√	√	√	0040 0019 0011 0021 0020 0018 0028 0025 0041
2011	Agila-B	Transmission	TCM (Transmission Control Module)	√	√	√	√		0033
2011	Astra-G	Body	Instrument	√	√	√	√		
2011	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2011	Astra-G	Engine	Z 12 XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2011	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2011	Astra-H	Body	AHL/AFL (Headlamp Levelling)	√	√	√	√		
2011	Astra-H	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2011	Astra-H	Body	Interior Lighting	√	√	√	√		
2011	Astra-H	Body	Wipers/Washer	√	√	√	√		
2011	Astra-H	Body	Central Door Lock	√	√	√	√		
2011	Astra-H	Body	Instrument	√	√	√	√	√	0055 0056 0057
2011	Astra-H	Body	Immobiliser	√	√	√	√		
2011	Astra-H	Body	CIM (Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2011	Astra-H	Body	Anti Theft Warning System	√	√	√	√	√	
2011	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√	√	0001 0004
2011	Astra-H	Body	ECC/SAC (Electronic Climate Control)	√	√	√	√	√	0150 0159 0160 0032 0001 0004
2011	Astra-H	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2011	Astra-H	Body	EHS (Electrical Heater System)	√	√	√	√		0032 0001 0004

2011	Astra-H	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2011	Astra-H	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2011	Astra-H	Body	SLM (Shift Lever Module)	√	√	√	√		
2011	Astra-H	Body	UEC (Underhood Electrical Centre)	√	√	√	√		
2011	Astra-H	Body	REC (Rear Electrical Centre)	√	√	√	√		
2011	Astra-H	Body	PEPS (Open&Start)	√	√	√	√		
2011	Astra-H	Chassis	TPMS ECT(Tyre Pressure Monitoring)	√	√	√	√		
2011	Astra-H	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		
2011	Astra-H	Chassis	EHPS (Electrohydraulic Power Steering)	√	√	√	√		0003
2011	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2011	Astra-H	Chassis	CDC (Continuous Damping Control)	√	√	√	√		
2011	Astra-H	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2011	Astra-H	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2011	Astra-H	Engine	A16XER	√	√	√	√	√	0019 0009 0063 0067 0064 0033 0012 0006 0007
2011	Astra-H	Engine	A16LET	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2011	Astra-H	Engine	A17DTJ	√	√	√	√	√	0019 0063 0011 0064 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0006 0007 0008 0007
2011	Astra-H	Engine	A17DTR	√	√	√	√	√	0019 0063 0011 0064 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0006 0007 0008 0007
2011	Astra-H	Engine	Y13DTH	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008

2011	Astra-H	Engine	Z12XEP	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2011	Astra-H	Engine	Z13DTH	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0020 0029 0028 0025 0026
2011	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2011	Astra-H	Engine	Z14XEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2011	Astra-H	Engine	Z16LET	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2011	Astra-H	Engine	Z16XE1	√	√	√	√	√	0019 0009 0063 0067 0064 0012 0065 0068 0006
2011	Astra-H	Engine	Z16XEP	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2011	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012
2011	Astra-H	Engine	Z17DTL	√	√	√	√	√	0063 0011 0064 0020 0024 0012 0029 0032 0018
2011	Astra-H	Engine	Z18XE	√	√	√	√	√	0019 0006 0007 0008 0009 0010 0011 0066 0012

2011	Astra-H	Engine	Z18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2011	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2011	Astra-H	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2011	Astra-H	Engine	Z20LEH	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2011	Astra-H	Engine	Z20LEL	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2011	Astra-H	Engine	Z20LER	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2011	Astra-H	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2011	Astra-H	Engine	Engine(default)	√	√	√			
2011	Astra-H	Engine	Z 16 XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033

2011	Astra-H	Engine	Z 17 DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030
2011	Astra-H	Engine	Z 17 DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030
2011	Astra-H	Engine	A 18 XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2011	Astra-H	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2011	Astra-H	Transmission	AF 17-4	√	√	√	√	√	0032 0079 0033 0030 0031
2011	Astra-H	Transmission	AF 22-4	√	√	√	√	√	0032 0079 0033
2011	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0079 0034 0035
2011	Astra-H	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	0079 0004 0061
2011	Meriva-B	Body	Front Seat Heating Control Module	√	√	√	√		
2011	Meriva-B	Body	BCM (Body Control Module)	√	√	√	√		
2011	Meriva-B	Body	Headlamp Control Module	√	√	√	√		
2011	Meriva-B	Body	Inflatable Restraint Sensing&Diag.Module	√	√	√	√		
2011	Meriva-B	Body	Parking Assist Control Module	√	√	√	√	√	0107 0039
2011	Meriva-B	Body	Remote Heater & A/C Control Module	√	√	√	√		
2011	Meriva-B	Body	Instrument	√	√	√	√	√	0039
2011	Meriva-B	Body	Trailer Interface Control Module	√	√	√	√		
2011	Meriva-B	Chassis	Electronic Brake Control Module	√	√	√	√	√	
2011	Meriva-B	Chassis	Electric Power Steering Control Module	√	√	√	√		
2011	Meriva-B	Chassis	Parking Brake Control Module	√	√	√	√	√	0108 0109

2011	Meriva-B	Chassis	Steering Wheel Angle Sensor Module	√	√	√			0081
2011	Meriva-B	Chassis	Fuel injector control module	√			√		
2011	Meriva-B	Engine	A 13 DTC 1.3(LDV)	√	√	√	√	√	0083 0110 0111 0023 0024 0028 0025 0069 0112 0113 0114 0115
2011	Meriva-B	Engine	A 13 DTE 1.3(LSF)	√	√	√	√	√	0083 0118 0111 0023 0024 0028 0025 0069 0112 0113 0114 0115
2011	Meriva-B	Engine	A 14 NET(LUH)	√	√	√	√	√	0083 0162 0163 0015 0018 0083
2011	Meriva-B	Engine	A 14 NET (LUJ)	√	√	√	√	√	0091 0083 0016 0017 0015 0018
2011	Meriva-B	Engine	A 14 XER (LDD)	√	√	√	√	√	0091 0083 0016 0017 0015 0018
2011	Meriva-B	Engine	A 17 DTC 1.7(LUE)	√	√	√	√	√	0120 0103 0083 0118 0084 0018
2011	Meriva-B	Engine	A 17 DTS 1.7(LUD)	√	√	√	√	√	0120 0103 0083 0118 0084 0018
2011	Meriva-B	Engine	Engine Control Module	√	√	√	√	√	0083 0118 0111 0023 0024 0028 0025 0069 0112 0113 0114 0115
2011	Meriva-B	Transmission	Transmission Control Module	√	√	√	√	√	0078 0121
2011	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2011	Astra-G	Body	Airbag	√	√	√	√		
2011	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2011	Astra-G	Body	Central Door Lock	√	√	√	√		
2011	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2011	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2011	Astra-G	Body	HeadLamp Levelling Device	√	√	√	√	√	0141

2011	Astra-G	Body	Immobiliser	√	√	√	√		0165 0166
2011	Astra-G	Body	Instrument	√	√	√	√		
2011	Astra-G	Body	Softtop Controller	√	√	√	√	√	
2011	Astra-G	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2011	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2011	Astra-G	Chassis	ESP (Electronic Stability Program)	√	√	√	√	√	0005
2011	Astra-G	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2011	Astra-G	Engine	Z 14 XEP	√	√	√	√	√	0006 0167 0009 0146 0019 0011 0021 0065 0033
2011	Astra-G	Engine	C 16 SEL	√	√	√	√	√	
2011	Astra-G	Engine	Z 16 XE	√			√	√	
2011	Astra-G	Engine	Z 16 SE	√	√	√	√	√	
2011	Astra-G	Engine	Z 16 XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2011	Astra-G	Engine	Z 16 YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2011	Astra-G	Engine	Y 17 DT	√	√	√	√	√	
2011	Astra-G	Engine	Z 17 DTL	√	√	√	√	√	
2011	Astra-G	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2011	Astra-G	Engine	Z 18 XEL	√	√	√			0011 0021
2011	Astra-G	Engine	Y 20 DTH	√	√	√	√	√	0166 0168 0169
2011	Astra-G	Engine	Z 20 LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2011	Astra-G	Engine	Y 22 DTR	√	√	√	√	√	0011 0021
2011	Astra-G	Engine	Z 22 SE	√	√	√	√	√	0146 0009 0145 0011 0021 0065
2011	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2011	Captiva(Long Body)	Body	BCM (Body Control Module)	√	√	√	√	√	
2011	Captiva(Long Body)	Body	ECC (Electronic Climate Control)	√	√	√		√	0150 0004

2011	Captiva(Long Body)	Body	Immobiliser	√	√	√	√		
2011	Captiva(Long Body)	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	
2011	Captiva(Long Body)	Body	XBCM(Auxiliary Body Control Module)	√	√	√	√	√	
2011	Captiva(Long Body)	Body	RFA (Multipurpose Receiver Module)	√	√	√	√		
2011	Captiva(Long Body)	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2011	Captiva(Long Body)	Engine	2.0 L (Diesel)	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0028 0025 0027
2011	Captiva(Long Body)	Engine	Z32SE	√	√	√	√	√	
2011	Captiva(Long Body)	Transmission	TCCM(Transfer Case Control Module)	√	√	√	√		0152
2011	Captiva(Long Body)	Transmission	Automatic Transmission	√	√	√	√	√	0171 0154 0155 0156 0033
2011	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2011	Corsa-C	Body	Airbag	√	√	√	√	√	
2011	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2011	Corsa-C	Body	Instrument	√	√	√	√		
2011	Corsa-C	Body	Immobiliser	√	√	√	√		0164 0165
2011	Corsa-C	Chassis	ABS8/ESP8 (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0005 0142 0143 0144 0004
2011	Corsa-C	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2011	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2011	Corsa-C	Engine	Z 10 XEP	√	√	√	√	√	0011 0021 0065
2011	Corsa-C	Engine	Z 12 XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2011	Corsa-C	Engine	Z 12 XEP	√	√	√	√	√	0011 0021 0065
2011	Corsa-C	Engine	Y 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2011	Corsa-C	Engine	Z 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020

2011	Corsa-C	Engine	Z 13 DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2011	Corsa-C	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2011	Corsa-C	Engine	Z 14 XEP	√	√	√	√	√	0006 0166 0009 0146 0019 0011 0021 0065 0033
2011	Corsa-C	Engine	Z 16 SE	√	√	√	√	√	
2011	Corsa-C	Engine	Z 16 YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2011	Corsa-C	Engine	Y 17 DT	√	√	√	√	√	
2011	Corsa-C	Engine	Y 17 DTL	√	√	√	√	√	
2011	Corsa-C	Engine	Z 17 DTH		√	√	√		
2011	Corsa-C	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2011	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2011	Corsa-C	Transmission	Easytronic(MTA)	√	√	√	√	√	0011 0148
2011	Corsa-D	Body	Exterior Lighting	√	√	√	√		
2011	Corsa-D	Body	Interior Lighting	√	√	√	√		
2011	Corsa-D	Body	Wipers/Washer	√	√	√	√		
2011	Corsa-D	Body	Heating,Ventilation and Air Cond.	√	√	√	√		
2011	Corsa-D	Body	Anti Theft Warning System	√	√	√	√		
2011	Corsa-D	Body	Central Door Lock	√	√	√	√	√	
2011	Corsa-D	Body	Immobiliser	√	√	√	√		
2011	Corsa-D	Body	AFL (Adaptive Forward Lighting)	√	√	√	√		
2011	Corsa-D	Body	EHS (Electrical Heater System)	√	√	√	√		
2011	Corsa-D	Body	IPC ECU (Instrument Control Unit)	√	√	√	√		
2011	Corsa-D	Body	PAS (Park Pilot)	√	√	√	√		
2011	Corsa-D	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2011	Corsa-D	Body	TIM(Trailer Interface Module)	√	√	√	√		
2011	Corsa-D	Body	BCM (Body Control Module)	√	√	√	√		

2011	Corsa-D	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	
2011	Corsa-D	Chassis	Electronic Power Steering	√	√	√	√		
2011	Corsa-D	Chassis	Fuel injector control module	√			√		
2011	Corsa-D	Engine	Z10XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2011	Corsa-D	Engine	A10XEP	√	√	√	√	√	0006 0015 0016 0017 0018
2011	Corsa-D	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2011	Corsa-D	Engine	A12XER	√	√	√	√	√	0006 0018
2011	Corsa-D	Engine	A12XEL	√	√	√	√	√	0006 0018
2011	Corsa-D	Engine	Z13DTH	√	√	√	√	√	0019 0010 0011 0014 0020
2011	Corsa-D	Engine	Z13DTE	√	√	√	√	√	0006
2011	Corsa-D	Engine	Z13DTJ	√	√	√	√	√	0019 0010 0011 0014 0020
2011	Corsa-D	Engine	A13DTC	√	√	√	√	√	0019
2011	Corsa-D	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2011	Corsa-D	Engine	A14XEL	√	√	√	√	√	0006 0015 0016 0017 0018
2011	Corsa-D	Engine	A14XER	√	√	√	√	√	0006 0015 0016 0017 0018
2011	Corsa-D	Engine	Z16LEL	√	√	√	√	√	
2011	Corsa-D	Engine	Z16LER	√	√	√	√	√	
2011	Corsa-D	Engine	A16LEL	√	√	√	√	√	
2011	Corsa-D	Engine	A16LER	√	√	√	√	√	

2011	Corsa-D	Engine	Z17DTR	√	√	√	√	√	0019 0021 0011 0014 0022 0023 0024 0012 0025 0026 0027 0028
2011	Corsa-D	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2011	Corsa-D	Transmission	AF 13-4	√	√	√	√	√	0030 0031 0032
2011	Corsa-D	Transmission	MTA(Easytronic)	√	√	√	√	√	0034 0035
2011	Vauxhall VXR8	Body	AHL(Automatic Headlamp Levelling)	√	√	√	√		
2011	Vauxhall VXR8	Body	BCM (Body Control Module)	√	√	√	√		
2011	Vauxhall VXR8	Body	HVAC(Heating Ventilation and Cooling)	√	√	√	√		
2011	Vauxhall VXR8	Body	Immobiliser	√	√	√	√		
2011	Vauxhall VXR8	Body	MSM(Memory Seat and Mirrors)	√	√	√	√		
2011	Vauxhall VXR8	Body	Park Assist	√	√	√	√		
2011	Vauxhall VXR8	Body	SDM(Sensing and Diagnostic Module)	√	√	√	√		
2011	Vauxhall VXR8	Body	IPC (Instrument Panel Cluster)	√	√	√	√		
2011	Vauxhall VXR8	Body	RFA (Multipurpose Receiver Module)	√	√	√	√		
2011	Vauxhall VXR8	Chassis	Fuel Pump Control Module	√	√	√	√		
2011	Vauxhall VXR8	Chassis	EBCM(Electronic Brake Control Module)	√	√	√	√	√	
2011	Vauxhall VXR8	Chassis	ESC(Electronic Suspension Control)	√	√	√	√		
2011	Vauxhall VXR8	Engine	V8 GEN IV	√	√	√	√	√	0015 0149 0172
2011	Vauxhall VXR8	Transmission	Automatic Transmission	√	√	√	√	√	
2011	Vivaro	Body	Park Pilot		√	√	√		
2011	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2011	Vivaro	Body	Airbag		√	√	√		0004
2011	Vivaro	Body	Body Control Module		√	√	√	√	
2011	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2011	Vivaro	Transmission	MTA(Tecshift)		√	√	√	√	
2011	Zafira-B	Body	AHL/AFL (Headlamp Levelling)	√	√	√	√		
2011	Zafira-B	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2011	Zafira-B	Body	Interior Lighting	√	√	√	√		
2011	Zafira-B	Body	Wipers/Washer	√	√	√	√		
2011	Zafira-B	Body	Central Door Lock	√	√	√	√		

2011	Zafira-B	Body	Instrument	√	√	√	√	√	0055 0056 0057
2011	Zafira-B	Body	Immobiliser	√	√	√	√		
2011	Zafira-B	Body	CIM (Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2011	Zafira-B	Body	ECC/SAC (Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2011	Zafira-B	Body	EHS (Electrical Heater System)	√	√	√	√		0032 0001 0004
2011	Zafira-B	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2011	Zafira-B	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002
2011	Zafira-B	Body	SLM (Shift Lever Module)	√	√	√	√		
2011	Zafira-B	Body	UEC (Underhood Electrical Centre)	√	√	√	√		
2011	Zafira-B	Body	REC (Rear Electrical Centre)	√	√	√	√		
2011	Zafira-B	Body	PEPS (Open&Start)	√	√	√	√		
2011	Zafira-B	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2011	Zafira-B	Body	Anti Theft Warning System	√	√	√	√	√	
2011	Zafira-B	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	0005
2011	Zafira-B	Chassis	TPMS ECU (Tyre Pressure Monitoring)	√	√	√	√		0001
2011	Zafira-B	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		
2011	Zafira-B	Chassis	EHPS (Electrohydraulic Power Steering)	√	√	√	√		0003
2011	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2011	Zafira-B	Chassis	CDC (Continuous Damping Control)	√	√	√	√		
2011	Zafira-B	Engine	Z 16 XE1	√	√	√	√	√	0006 0007 0008 0009 0174 0010 0011 0066 0012
2011	Zafira-B	Engine	Z 16 XEP	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2011	Zafira-B	Engine	Z 16 XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033

2011	Zafira-B	Engine	Z 16 YNG	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2011	Zafira-B	Engine	A 16 XER	√	√	√	√	√	0009 0019 0010 0011 0066 0033
2011	Zafira-B	Engine	Z 17 DTJ	√	√	√	√	√	0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027
2011	Zafira-B	Engine	A 17 DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0028 0025 0069
2011	Zafira-B	Engine	A 17 DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0028 0025 0069
2011	Zafira-B	Engine	Z 18 XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2011	Zafira-B	Engine	A 18 XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2011	Zafira-B	Engine	Z 19 DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027

2011	Zafira-B	Engine	Z 19 DTH	√	√	√	√	√	0006 0007 0008 0032 0010 0011 0066 0023 0024 0028 0025 0026
2011	Zafira-B	Engine	Z 20 LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2011	Zafira-B	Engine	Z 20 LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2011	Zafira-B	Engine	Z 22 YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2011	Zafira-B	Engine	Engine(default)	√	√	√			
2011	Zafira-B	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2011	Zafira-B	Transmission	MTA(Easytronic)	√	√	√	√	√	0003 0061 0034
2011	Zafira-B	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2010	Astra-J		Engine Control Module	√	√	√	√	√	0313 0306
2010	Astra-J		Fuel Injector Control Module	√			√	√	
2010	Astra-J		Fuel Pump Control Module	√	√	√	√	√	0016
2010	Astra-J		Transmission Control Module	√	√	√	√	√	0223 0122
2010	Astra-J		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2010	Astra-J		Parking Brake Control Module	√	√	√	√	√	0109
2010	Astra-J		Multi-Axis Acceleration Sensor Module	√	√	√			0350
2010	Astra-J		Power Steering Control Module	√	√	√	√		0090
2010	Astra-J		Steering Wheel Angle Sensor Module	√	√	√			
2010	Astra-J		Suspension Control Module	√	√	√	√	√	
2010	Astra-J		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332

2010	Astra-J		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2010	Astra-J		Instrument Cluster	√	√	√	√	√	0040
2010	Astra-J		Chime Alarm Control Module	√	√	√		√	
2010	Astra-J		Headlamp Control Module	√	√	√	√	√	0366
2010	Astra-J		Trailer Interface Control Module	√	√	√	√	√	0040
2010	Astra-J		Radio	√	√	√	√	√	
2010	Astra-J		Digital Radio Receiver Control Module	√	√	√	√	√	
2010	Astra-J		Multimedia Player Interface Module	√	√	√	√		
2010	Astra-J		Mobile Telephone Control Module	√	√	√	√	√	
2010	Astra-J		Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0211 0040
2010	Astra-J		Front Seat Heating Control Module	√	√	√	√	√	
2010	Astra-J		Parking Assist Control Module	√	√	√	√	√	0040
2010	Astra-J		Vehicle Direction Camera Control Module	√	√	√	√	√	
2010	Insignia		Engine Control Module	√	√	√	√	√	0084 0018 0016
2010	Insignia		Fuel Injector Control Module	√			√	√	
2010	Insignia		Fuel Pump Control Module	√	√	√	√	√	0016
2010	Insignia		Transmission Control Module	√	√	√	√	√	0223 0122
2010	Insignia		Rear Differential Clutch Control Module	√	√	√	√	√	
2010	Insignia		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2010	Insignia		Parking Brake Control Module	√	√	√	√	√	0109
2010	Insignia		Multi-Axis Acceleration Sensor Module	√	√	√			0350
2010	Insignia		Power Steering Control Module	√	√	√	√		0090
2010	Insignia		Steering Wheel Angle Sensor Module	√	√	√			
2010	Insignia		Suspension Control Module	√	√	√	√	√	
2010	Insignia		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2010	Insignia		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2010	Insignia		Instrument Cluster	√	√	√	√	√	0040
2010	Insignia		Chime Alarm Control Module	√	√	√		√	
2010	Insignia		Headlamp Control Module	√	√	√	√	√	0366

2010	Insignia		Trailer Interface Control Module	√	√	√	√	√	0040
2010	Insignia		Radio	√	√	√	√	√	
2010	Insignia		Digital Radio Receiver Control Module	√	√	√	√	√	
2010	Insignia		Multimedia Player Interface Module	√	√	√	√		0040
2010	Insignia		Mobile Telephone Control Module	√	√	√	√	√	
2010	Insignia		Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0211 0040
2010	Insignia		Liftgate Control Module	√	√	√	√	√	0323
2010	Insignia		Seat Memory Control Module	√	√	√	√	√	0581
2010	Insignia		Front Seat Heating Control Module	√	√	√	√	√	
2010	Insignia		Parking Assist Control Module	√	√	√	√	√	0040
2010	Insignia		Vehicle Direction Camera Control Module	√	√	√	√	√	
2010	Insignia		Distance Sensing Cruise Control Module	√	√	√	√		0231
2010	Agila-B	Engine	K10B	√	√	√	√	√	0015
2010	Agila-B	Engine	K12B	√	√	√	√	√	0015
2010	Agila-B	Engine	D13A / Z 13 DTJ	√	√	√	√	√	0040 0019 0011 0021 0020 0018 0028 0025 0041
2010	Agila-B	Transmission	TCM (Transmission Control Module)	√	√	√	√		0033
2010	Antara,Captive (Short Body)	Body	AHL(Automatic Headlamp Levelling)	√	√	√	√	√	0141
2010	Antara,Captive (Short Body)	Body	Anti Theft Warning System	√	√	√	√	√	
2010	Antara,Captive (Short Body)	Body	BCM(Body Control Module)	√	√	√	√	√	
2010	Antara,Captive (Short Body)	Body	ECC(Electronic Climate Control)	√	√	√		√	0150 0004
2010	Antara,Captive (Short Body)	Body	Immobiliser	√	√	√	√		
2010	Antara,Captive (Short Body)	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	

2010	Antara,Captive (Short Body)	Body	Wipers/Washer	√	√	√	√		
2010	Antara,Captive (Short Body)	Body	PAS(Park Pilot)	√	√	√	√	√	0057
2010	Antara,Captive (Short Body)	Body	XBCM(Auxiliary Body Control Module)	√	√	√	√	√	
2010	Antara,Captive (Short Body)	Body	Central Door Lock	√	√	√	√	√	
2010	Antara,Captive (Short Body)	Body	RFA(Multipurpose Receiver Module)	√	√	√	√		
2010	Antara,Captive (Short Body)	Body	SLM(Shift Lever Module)	√	√	√	√		
2010	Antara,Captive (Short Body)	Body	HVAC(Heating Ventilation and Cooling)	√	√	√	√		
2010	Antara,Captive (Short Body)	Body	Interior Lighting	√	√	√	√		
2010	Antara,Captive (Short Body)	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2010	Antara,Captive (Short Body)	Body	SDM(Airbag)	√	√	√	√		
2010	Antara,Captive (Short Body)	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2010	Antara,Captive (Short Body)	Engine	2.0 L(Diesel)	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0028 0025 0027
2010	Antara,Captive (Short Body)	Engine	Z 24 XE	√	√	√	√	√	0010 0033 0015
2010	Antara,Captive (Short Body)	Engine	Z 32 SE	√	√	√	√	√	0015 0018 0172
2010	Antara,Captive (Short Body)	Transmission	TCCM(Transfer Case Control Module)	√	√	√	√		0152

2010	Antara,Captive (Short Body)	Transmission	Automatic Transmission	√	√	√	√	√	0153 0154 0155 0156 0157
2010	Astra-H	Body	SDM(Airbag)	√	√	√	√		
2010	Astra-H	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2010	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2010	Astra-H	Body	REC(Rear Electrical Centre)	√	√	√	√		
2010	Astra-H	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2010	Astra-H	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2010	Astra-H	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2010	Astra-H	Body	Interior Lighting	√	√	√	√		
2010	Astra-H	Body	Wipers/Washer	√	√	√	√		
2010	Astra-H	Body	Central Door Lock	√	√	√	√		
2010	Astra-H	Body	Instrument	√	√	√	√	√	0055 0056 0057
2010	Astra-H	Body	Immobiliser	√	√	√	√		
2010	Astra-H	Body	Anti Theft Warning System	√	√	√	√	√	
2010	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√	√	0001 0004
2010	Astra-H	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0032 0001 0004
2010	Astra-H	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2010	Astra-H	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2010	Astra-H	Body	SLM(Shift Lever Module)	√	√	√	√		
2010	Astra-H	Body	PEPS(Open&Start)	√	√	√	√		
2010	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2010	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2010	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2010	Astra-H	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2010	Astra-H	Chassis	TPMS(Tyre Pressure Monitoring System)	√	√	√	√		
2010	Astra-H	Chassis	CDC(Continuous Damping Control)	√	√	√	√		
2010	Astra-H	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	

2010	Astra-H	Engine	A16LET	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2010	Astra-H	Engine	A17DTJ	√	√	√	√	√	0019 0063 0011 0064 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0006 0007 0008 0008
2010	Astra-H	Engine	A17DTR	√	√	√	√	√	0019 0063 0011 0064 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0006 0007 0008 0008
2010	Astra-H	Engine	Y13DTH	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2010	Astra-H	Engine	Z12XEP	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2010	Astra-H	Engine	Z13DTH	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0020 0029 0028 0025 0026
2010	Astra-H	Engine	Z14XEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2010	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2010	Astra-H	Engine	Z16XE1	√	√	√	√	√	0019 0009 0063 0067 0064 0012 0065 0068 0006

2010	Astra-H	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2010	Astra-H	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2010	Astra-H	Engine	Z16LET	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2010	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012
2010	Astra-H	Engine	Z17DTR	√	√	√	√	√	0011
2010	Astra-H	Engine	Z17DTJ	√	√	√	√	√	0064
2010	Astra-H	Engine	Z17DTL	√	√	√	√	√	0063 0011 0064 0020 0024 0012 0029 0032 0018
2010	Astra-H	Engine	Z18XE	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0012
2010	Astra-H	Engine	Z18XER	√	√	√	√	√	0006
2010	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2010	Astra-H	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018

2010	Astra-H	Engine	Z20LEH	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2010	Astra-H	Engine	Z20LEL	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2010	Astra-H	Engine	Z20LER	√	√	√	√	√	0009 0063 0011 0064 0012 0065 0006 0007 0008
2010	Astra-H	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2010	Astra-H	Engine	Engine(default)	√	√	√			
2010	Astra-H	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2010	Astra-H	Transmission	AF 17-4	√	√	√	√	√	0030 0031 0032 0003 0033
2010	Astra-H	Transmission	AF 22-4	√	√	√	√	√	0032 0079 0033
2010	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0079 0034 0035
2010	Astra-H	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	0079 0004 0061
2010	Meriva-B	Body	Front Seat Heating Control Module	√	√	√	√		
2010	Meriva-B	Body	BCM (Body Control Module)	√	√	√	√		
2010	Meriva-B	Body	Headlamp Control Module	√	√	√	√		
2010	Meriva-B	Body	Inflatable Restraint Sensing&Diag.Module	√	√	√	√		
2010	Meriva-B	Body	Parking Assist Control Module	√	√	√	√	√	0107 0039
2010	Meriva-B	Body	Remote Heater & A/C Control Module	√	√	√	√		
2010	Meriva-B	Body	Instrument	√	√	√	√	√	0039
2010	Meriva-B	Body	Trailer Interface Control Module	√	√	√	√		
2010	Meriva-B	Chassis	Electronic Brake Control Module	√	√	√	√	√	
2010	Meriva-B	Chassis	Electric Power Steering Control Module	√	√	√	√		
2010	Meriva-B	Chassis	Parking Brake Control Module	√	√	√	√	√	0108 0109

2010	Meriva-B	Chassis	Steering Wheel Angle Sensor Module	√	√	√			0081
2010	Meriva-B	Engine	A 13 DTC 1.3(LDV)	√	√	√	√	√	0083 0110 0111 0023 0024 0028 0025 0069 0112 0113 0114 0115
2010	Meriva-B	Engine	A 13 DTE 1.3(LSF)	√	√	√	√	√	0083 0118 0111 0023 0024 0028 0025 0069 0112 0113 0114 0115
2010	Meriva-B	Engine	A 14 NET(LUH)	√	√	√	√	√	0083 0161 0162 0015 0018 0083
2010	Meriva-B	Engine	A 14 NET (LUJ)	√	√	√	√	√	0091 0083 0016 0017 0015 0018
2010	Meriva-B	Engine	A 14 XER (LDD)	√	√	√	√	√	0091 0083 0016 0017 0015 0018
2010	Meriva-B	Engine	A 17 DTC 1.7(LUE)	√	√	√	√	√	0120 0103 0083 0118 0084 0018
2010	Meriva-B	Engine	A 17 DTS 1.7(LUD)	√	√	√	√	√	0120 0103 0083 0118 0084 0018
2010	Meriva-B	Engine	Engine Control Module	√	√	√	√	√	0083 0118 0111 0023 0024 0028 0025 0069 0112 0113 0114 0115
2010	Meriva-B	Transmission	Transmission Control Module	√	√	√	√	√	0078 0121
2010	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2010	Astra-G	Body	Airbag	√	√	√	√		
2010	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2010	Astra-G	Body	Central Door Lock	√	√	√	√		
2010	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2010	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2010	Astra-G	Body	HeadLamp Levelling Device	√	√	√	√	√	0141
2010	Astra-G	Body	Immobiliser	√	√	√	√		0164 0165

2010	Astra-G	Body	Instrument	√	√	√	√		
2010	Astra-G	Body	Softtop Controller	√	√	√	√	√	
2010	Astra-G	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2010	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2010	Astra-G	Chassis	ESP (Electronic Stability Program)	√	√	√	√	√	0005
2010	Astra-G	Engine	Z 12 XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2010	Astra-G	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2010	Astra-G	Engine	Z 14 XEP	√	√	√	√	√	0006 0166 0009 0146 0019 0011 0021 0065 0033
2010	Astra-G	Engine	C 16 SEL	√	√	√	√	√	
2010	Astra-G	Engine	Z 16 XE	√			√	√	
2010	Astra-G	Engine	Z 16 SE	√	√	√	√	√	
2010	Astra-G	Engine	Z 16 XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2010	Astra-G	Engine	Z 16 YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2010	Astra-G	Engine	Y 17 DT	√	√	√	√	√	
2010	Astra-G	Engine	Z 17 DTL	√	√	√	√	√	
2010	Astra-G	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2010	Astra-G	Engine	Z 18 XEL	√	√	√			0011 0021
2010	Astra-G	Engine	Y 20 DTH	√	√	√	√	√	0166 0167 0168
2010	Astra-G	Engine	Z 20 LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2010	Astra-G	Engine	Y 22 DTR	√	√	√	√	√	0011 0021
2010	Astra-G	Engine	Z 22 SE	√	√	√	√	√	0146 0009 0145 0011 0021 0065
2010	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	

2010	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2010	Captiva(Long Body)	Body	BCM (Body Control Module)	√	√	√	√	√	
2010	Captiva(Long Body)	Body	ECC (Electronic Climate Control)	√	√	√		√	0150 0004
2010	Captiva(Long Body)	Body	Immobiliser	√	√	√	√		
2010	Captiva(Long Body)	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	
2010	Captiva(Long Body)	Body	XBCM(Auxiliary Body Control Module)	√	√	√	√	√	
2010	Captiva(Long Body)	Body	RFA (Multipurpose Receiver Module)	√	√	√	√		
2010	Captiva(Long Body)	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2010	Captiva(Long Body)	Engine	2.0 L (Diesel)	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0028 0025 0027
2010	Captiva(Long Body)	Engine	Z32SE	√	√	√	√	√	
2010	Captiva(Long Body)	Transmission	TCCM(Transfer Case Control Module)	√	√	√	√		0152
2010	Captiva(Long Body)	Transmission	Automatic Transmission	√	√	√	√	√	0170 0154 0155 0156 0033
2010	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2010	Corsa-C	Body	Airbag	√	√	√	√	√	
2010	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2010	Corsa-C	Body	HeadLamp Levelling Device		√	√	√	√	0141
2010	Corsa-C	Body	Instrument	√	√	√	√		
2010	Corsa-C	Body	Immobiliser	√	√	√	√		0164 0165
2010	Corsa-C	Chassis	ABS8/ESP8 (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0005 0142 0143 0144 0004
2010	Corsa-C	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2010	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2010	Corsa-C	Engine	Z 10 XEP	√	√	√	√	√	0011 0021 0065
2010	Corsa-C	Engine	Z 12 XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2010	Corsa-C	Engine	Z 12 XEP	√	√	√	√	√	0011 0021 0065
2010	Corsa-C	Engine	Y 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020

2010	Corsa-C	Engine	Z 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2010	Corsa-C	Engine	Z 13 DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2010	Corsa-C	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2010	Corsa-C	Engine	Z 14 XEP	√	√	√	√	√	0006 0166 0009 0146 0019 0011 0021 0065 0033
2010	Corsa-C	Engine	Z 16 SE	√	√	√	√	√	
2010	Corsa-C	Engine	Z 16 YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2010	Corsa-C	Engine	Y 17 DT	√	√	√	√	√	
2010	Corsa-C	Engine	Y 17 DTL	√	√	√	√	√	
2010	Corsa-C	Engine	Z 17 DTH		√	√	√		
2010	Corsa-C	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2010	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2010	Corsa-C	Transmission	Easytronic(MTA)	√	√	√	√	√	0011 0148
2010	Corsa-D	Body	Exterior Lighting	√	√	√	√		
2010	Corsa-D	Body	Interior Lighting	√	√	√	√		
2010	Corsa-D	Body	Wipers/Washer	√	√	√	√		
2010	Corsa-D	Body	Heating,Ventilation and Air Cond.	√	√	√	√		
2010	Corsa-D	Body	Anti Theft Warning System	√	√	√	√		
2010	Corsa-D	Body	Central Door Lock	√	√	√	√	√	
2010	Corsa-D	Body	Immobiliser	√	√	√	√		
2010	Corsa-D	Body	AFL (Adaptive Forward Lighting)	√	√	√	√		
2010	Corsa-D	Body	EHS (Electrical Heater System)	√	√	√	√		
2010	Corsa-D	Body	IPC ECU (Instrument Control Unit)	√	√	√	√		
2010	Corsa-D	Body	PAS (Park Pilot)	√	√	√	√		
2010	Corsa-D	Body	SDM (Airbag)	√	√	√	√		0000 0001 0002

2010	Corsa-D	Body	TIM(Trailer Interface Module)	√	√	√	√		
2010	Corsa-D	Body	BCM (Body Control Module)	√	√	√	√		
2010	Corsa-D	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	
2010	Corsa-D	Chassis	Electronic Power Steering	√	√	√	√		
2010	Corsa-D	Chassis	Fuel injector control module	√			√		
2010	Corsa-D	Engine	Z10XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2010	Corsa-D	Engine	A10XEP	√	√	√	√	√	0006 0015 0016 0017 0018
2010	Corsa-D	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2010	Corsa-D	Engine	A12XER	√	√	√	√	√	0006 0018
2010	Corsa-D	Engine	A12XEL	√	√	√	√	√	0006 0018
2010	Corsa-D	Engine	Z13DTH	√	√	√	√	√	0019 0010 0011 0014 0020
2010	Corsa-D	Engine	Z13DTE	√	√	√	√	√	0006
2010	Corsa-D	Engine	Z13DTJ	√	√	√	√	√	0019 0010 0011 0014 0020
2010	Corsa-D	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2010	Corsa-D	Engine	A14XEL	√	√	√	√	√	0006 0015 0016 0017 0018
2010	Corsa-D	Engine	A14XER	√	√	√	√	√	0006 0015 0016 0017 0018
2010	Corsa-D	Engine	Z16LEL	√	√	√	√	√	
2010	Corsa-D	Engine	Z16LER	√	√	√	√	√	
2010	Corsa-D	Engine	A16LEL	√	√	√	√	√	
2010	Corsa-D	Engine	A16LER	√	√	√	√	√	

2010	Corsa-D	Engine	Z17DTR	√	√	√	√	√	0019 0021 0011 0014 0022 0023 0024 0012 0025 0026 0027 0028
2010	Corsa-D	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2010	Corsa-D	Transmission	AF 13-4	√	√	√	√	√	0030 0031 0032
2010	Corsa-D	Transmission	MTA(Easytronic)	√	√	√	√	√	0034 0035
2010	Corsa-D		Engine(default)	√	√	√			
2010	Meriva	Body	EHS (Electrical Heater System)	√	√	√	√	√	
2010	Meriva	Body	Add On Heater	√	√	√	√	√	0122 0123
2010	Meriva	Body	Airbag	√	√	√	√	√	
2010	Meriva	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2010	Meriva	Body	Electronic Climate Control	√	√	√	√		
2010	Meriva	Body	HeadLamp Levelling Device		√	√	√	√	0141
2010	Meriva	Body	Immobiliser	√	√	√	√		0164 0165
2010	Meriva	Body	Instrument	√	√	√	√		
2010	Meriva	Chassis	ABS8/ESP8 (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0005 0142 0143 0144 0004
2010	Meriva	Chassis	Electronic Power Steering	√	√	√	√		0141
2010	Meriva	Engine	Y 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2010	Meriva	Engine	Z 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2010	Meriva	Engine	Z 13 DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2010	Meriva	Engine	Z 14 XEP	√	√	√	√	√	0006 0166 0009 0146 0019 0011 0021 0065 0033
2010	Meriva	Engine	Z 16 LET	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2010	Meriva	Engine	Z 16 SE	√	√	√	√	√	

2010	Meriva	Engine	Z 16 XE	√			√	√	
2010	Meriva	Engine	Z 16 XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2010	Meriva	Engine	Z 16 YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2010	Meriva	Engine	C 16 SEL	√	√	√	√	√	
2010	Meriva	Engine	Y 17 DT	√	√	√	√	√	
2010	Meriva	Engine	Z 17 DT	√	√	√	√	√	0006 0146 0019 0022 0011 0021
2010	Meriva	Engine	Z 17 DTR	√	√	√	√		
2010	Meriva	Engine	Z 17 DTH		√	√	√		
2010	Meriva	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2010	Meriva	Transmission	Easytronic(MTA)	√	√	√	√	√	0011 0148
2010	Movano	Body	Airbag	√	√	√	√		
2010	Movano	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2010	Movano	Body	Park Pilot		√	√	√		
2010	Movano	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0164 0165
2010	Movano	Chassis	Pneumatic Suspension		√	√	√	√	
2010	Movano	Transmission	MTA(Tecshift)		√	√	√	√	
2010	Vivaro	Body	Park Pilot		√	√	√		
2010	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2010	Vivaro	Body	Airbag		√	√	√		0004
2010	Vivaro	Body	Body Control Module		√	√	√	√	
2010	Vivaro	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	0175 0176
2010	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2010	Vivaro	Transmission	MTA(Tecshift)		√	√	√	√	
2010	Zafira-B	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2010	Zafira-B	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2010	Zafira-B	Body	Interior Lighting	√	√	√	√		

2010	Zafira-B	Body	Wipers/Washer	√	√	√	√		
2010	Zafira-B	Body	Central Door Lock	√	√	√	√		
2010	Zafira-B	Body	Instrument	√	√	√	√	√	0055 0056 0057
2010	Zafira-B	Body	Immobiliser	√	√	√	√		
2010	Zafira-B	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2010	Zafira-B	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2010	Zafira-B	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2010	Zafira-B	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2010	Zafira-B	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2010	Zafira-B	Body	SLM(Shift Lever Module)	√	√	√	√		
2010	Zafira-B	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2010	Zafira-B	Body	REC(Rear Electrical Centre)	√	√	√	√		
2010	Zafira-B	Body	PEPS (Open&Start)	√	√	√	√		
2010	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2010	Zafira-B	Body	Anti Theft Warning System	√	√	√	√	√	
2010	Zafira-B	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	0005
2010	Zafira-B	Chassis	TPMS ECU (Tyre Pressure Monitoring)	√	√	√	√		0001
2010	Zafira-B	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		
2010	Zafira-B	Chassis	EHPS (Electrohydraulic Power Steering)	√	√	√	√		0003
2010	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2010	Zafira-B	Chassis	CDC (Continuous Damping Control)	√	√	√	√		
2010	Zafira-B	Engine	Z 19 DTH	√	√	√	√	√	0006 0007 0008 0032 0010 0011 0066 0023 0024 0028 0025 0026
2010	Zafira-B	Engine	Z 16 XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033

2010	Zafira-B	Engine	Z 16 YNG	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2010	Zafira-B	Engine	Z 18 XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2010	Zafira-B	Engine	Z 22 YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2010	Zafira-B	Engine	Z 20 LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2010	Zafira-B	Engine	Z 20 LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2010	Zafira-B	Engine	Z 19 DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0010
2010	Zafira-B	Engine	Z 16 XE1	√	√	√	√	√	0006 0007 0008 0009 0173 0010 0011 0066 0012
2010	Zafira-B	Engine	Z 16 XEP	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2010	Zafira-B	Engine	A 17 DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0028 0025 0069 0026 0020 0027

2010	Zafira-B	Engine	A 17 DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0027
2010	Zafira-B	Engine	Z 17 DTJ	√	√	√	√	√	0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027
2010	Zafira-B	Engine	Engine(default)	√	√	√			
2010	Zafira-B	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2010	Zafira-B	Transmission	MTA(Easytronic)	√	√	√	√	√	0003 0061 0034
2010	Zafira-B	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2009	Insignia		Engine Control Module	√	√	√	√	√	0084 0018 0016
2009	Insignia		Fuel Injector Control Module	√			√	√	
2009	Insignia		Fuel Pump Control Module	√	√	√	√	√	0016
2009	Insignia		Transmission Control Module	√	√	√	√	√	0223 0122
2009	Insignia		Rear Differential Clutch Control Module	√	√	√	√	√	
2009	Insignia		Electronic Brake Control Module	√	√	√	√	√	0394 0083 0086
2009	Insignia		Parking Brake Control Module	√	√	√	√	√	0109
2009	Insignia		Multi-Axis Acceleration Sensor Module	√	√	√			0350
2009	Insignia		Power Steering Control Module	√	√	√	√		0090
2009	Insignia		Steering Wheel Angle Sensor Module	√	√	√			
2009	Insignia		Suspension Control Module	√	√	√	√	√	
2009	Insignia		Body Control Module	√	√	√	√	√	0047 0048 0045 0378 0372 0376 0046 0334 0332
2009	Insignia		Inflatable Restraint Sensing and Diagnostic	√	√	√	√	√	0311
2009	Insignia		Instrument Cluster	√	√	√	√	√	0040
2009	Insignia		Chime Alarm Control Module	√	√	√		√	

2009	Insignia		Headlamp Control Module	√	√	√	√	√	0366
2009	Insignia		Trailer Interface Control Module	√	√	√	√	√	0040
2009	Insignia		Radio	√	√	√	√	√	
2009	Insignia		Digital Radio Receiver Control Module	√	√	√	√	√	
2009	Insignia		Multimedia Player Interface Module	√	√	√	√	√	0040
2009	Insignia		Mobile Telephone Control Module	√	√	√	√	√	
2009	Insignia		Remote Heater and Air Conditioning Control Module	√	√	√	√	√	0211 0040
2009	Insignia		Liftgate Control Module	√	√	√	√	√	0323
2009	Insignia		Seat Memory Control Module	√	√	√	√	√	0581
2009	Insignia		Front Seat Heating Control Module	√	√	√	√	√	
2009	Insignia		Parking Assist Control Module	√	√	√	√	√	0040
2009	Insignia		Vehicle Direction Camera Control Module	√	√	√	√	√	
2009	Insignia		Distance Sensing Cruise Control Module	√	√	√	√	√	0231
2009	Agila-B	Body	BCM (Body Control Module)		√	√	√	√	
2009	Agila-B	Body	Immobiliser		√	√	√	√	
2009	Agila-B	Body	SDM (Airbag)		√	√	√	√	
2009	Agila-B	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	0005
2009	Agila-B	Chassis	Electronic Power Steering		√	√	√	√	
2009	Agila-B	Engine	K10B	√	√	√	√	√	0015
2009	Agila-B	Engine	K12B	√	√	√	√	√	0015
2009	Agila-B	Engine	D13A / Z 13 DTJ	√	√	√	√	√	0040 0019 0011 0021 0020 0018 0028 0025 0041
2009	Agila-B	Transmission	TCM (Transmission Control Module)	√	√	√	√	√	0033
2009	Antara,Captiva (Short Body)	Body	AHL(Automatic Headlamp Levelling)	√	√	√	√	√	0141
2009	Antara,Captiva (Short Body)	Body	Anti Theft Warning System	√	√	√	√	√	
2009	Antara,Captiva (Short Body)	Body	BCM (Body Control Module)	√	√	√	√	√	

2009	Antara,Captiva (Short Body)	Body	ECC (Electronic Climate Control)	√	√	√		√	0150 0004
2009	Antara,Captiva (Short Body)	Body	Immobiliser	√	√	√	√		
2009	Antara,Captiva (Short Body)	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	
2009	Antara,Captiva (Short Body)	Body	Wipers/Washer	√	√	√	√		
2009	Antara,Captiva (Short Body)	Body	PAS (Park Pilot)	√	√	√	√	√	0057
2009	Antara,Captiva (Short Body)	Body	XBCM(Auxiliary Body Control Module)	√	√	√	√	√	
2009	Antara,Captiva (Short Body)	Body	Central Door Lock	√	√	√	√	√	
2009	Antara,Captiva (Short Body)	Body	RFA (Multipurpose Receiver Module)	√	√	√	√		
2009	Antara,Captiva (Short Body)	Body	SLM (Shift Lever Module)	√	√	√	√		
2009	Antara,Captiva (Short Body)	Body	HVAC(Heating Ventilation and Cooling)	√	√	√	√		
2009	Antara,Captiva (Short Body)	Body	Interior Lighting	√	√	√	√		
2009	Antara,Captiva (Short Body)	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2009	Antara,Captiva (Short Body)	Body	SDM (Airbag)	√	√	√	√		
2009	Antara,Captiva (Short Body)	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2009	Antara,Captiva (Short Body)	Engine	2.0 L (Diesel)	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0028 0025 0027

2009	Antara,Captiva (Short Body)	Engine	Z 24 XE	√	√	√	√	√	0010 0033 0015
2009	Antara,Captiva (Short Body)	Engine	Z 32 SE	√	√	√	√	√	0015 0018 0172
2009	Antara,Captiva (Short Body)	Transmission	TCCM(Transfer Case Control Module)	√	√	√	√		0152
2009	Antara,Captiva (Short Body)	Transmission	Automatic Transmission	√	√	√	√	√	0170 0154 0155 0156 0033
2009	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2009	Astra-G	Body	Instrument	√	√	√	√		
2009	Astra-G	Body	Airbag	√	√	√	√		
2009	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2009	Astra-G	Body	Central Door Lock	√	√	√	√		
2009	Astra-G	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2009	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2009	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2009	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2009	Astra-G	Body	Softtop Controller	√	√	√	√	√	
2009	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2009	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2009	Astra-G	Chassis	Cruise Control	√	√	√	√		
2009	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2009	Astra-G	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2009	Astra-G	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2009	Astra-G	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2009	Astra-G	Engine	C16SEL	√	√	√	√	√	
2009	Astra-G	Engine	Z16SE	√	√	√	√	√	

2009	Astra-G	Engine	Z16XE	√			√	√	
2009	Astra-G	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2009	Astra-G	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2009	Astra-G	Engine	Y17DT	√	√	√	√	√	
2009	Astra-G	Engine	Z17DTL	√	√	√	√	√	
2009	Astra-G	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2009	Astra-G	Engine	Z18XEL	√	√	√			0011 0021
2009	Astra-G	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2009	Astra-G	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2009	Astra-G	Engine	Y22DTR	√	√	√	√	√	0011 0021
2009	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2009	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2009	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2009	Astra-H	Body	SDM(Airbag)	√	√	√	√		
2009	Astra-H	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2009	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2009	Astra-H	Body	REC(Rear Electrical Centre)	√	√	√	√		
2009	Astra-H	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2009	Astra-H	Body	AHL/AFL (Headlamp Levelling)	√	√	√	√		
2009	Astra-H	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2009	Astra-H	Body	Interior Lighting	√	√	√	√		
2009	Astra-H	Body	Wipers/Washer	√	√	√	√		
2009	Astra-H	Body	Central Door Lock	√	√	√	√		
2009	Astra-H	Body	Instrument	√	√	√	√	√	0055 0056 0057
2009	Astra-H	Body	Immobiliser	√	√	√	√		
2009	Astra-H	Body	Anti Theft Warning System	√	√	√	√	√	

2009	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√	√	0001 0004
2009	Astra-H	Body	ECC/SAC (Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0032 0001 0004
2009	Astra-H	Body	EHS (Electrical Heater System)	√	√	√	√		0032 0001 0004
2009	Astra-H	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2009	Astra-H	Body	SLM (Shift Lever Module)	√	√	√	√		
2009	Astra-H	Body	PEPS (Open&Start)	√	√	√	√		
2009	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2009	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2009	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2009	Astra-H	Chassis	TPMS ECU (Tyre Pressure Monitoring)	√	√	√	√		0001
2009	Astra-H	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		
2009	Astra-H	Chassis	CDC (Continuous Damping Control)	√	√	√	√		
2009	Astra-H	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2009	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003
2009	Astra-H	Engine	Z13DTH	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0020 0029 0028 0025 0026
2009	Astra-H	Engine	Z14XEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2009	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2009	Astra-H	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012

2009	Astra-H	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2009	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012
2009	Astra-H	Engine	Z17DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030
2009	Astra-H	Engine	Z17DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030
2009	Astra-H	Engine	Z18XE	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0012
2009	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2009	Astra-H	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2009	Astra-H	Engine	Z 12 XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013

2009	Astra-H	Engine	Y 13 DTH	√	√	√	√	√	0019 0010 0011 0066 0020 0029 0028 0025 0026
2009	Astra-H	Engine	A 16 LET	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2009	Astra-H	Engine	Z 16 XE1	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2009	Astra-H	Engine	Z 16 LET	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2009	Astra-H	Engine	A 17 DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0037
2009	Astra-H	Engine	A 17 DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0028 0025 0069 0026 0070 0037
2009	Astra-H	Engine	Z 17 DTL	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0029 0032 0018
2009	Astra-H	Engine	Z 18 XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2009	Astra-H	Engine	Z 20 LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013

2009	Astra-H	Engine	Z 20 LEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2009	Astra-H	Engine	Z 20 LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2009	Astra-H	Engine	Z 22 YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2009	Astra-H	Engine	Engine(default)	√	√	√			
2009	Astra-H	Transmission	AF 17-4	√	√	√	√	√	0030 0031 0032 0003 0033
2009	Astra-H	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2009	Astra-H	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2009	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0003 0061 0034
2009	Astra-H	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2009	Astra-J	Electronic Brake Control Module		√	√	√	√		0000 0085 0086
2009	Astra-J	Electronic Power Steering		√	√	√	√		0087 0088 0089
2009	Astra-J	Engine Control	A13DTE	√	√	√	√	√	0037 0038 0080 0020
2009	Astra-J	Engine Control	A17DTJ	√	√	√	√	√	0037 0038 0080 0020
2009	Astra-J	Front Seet Heating Control		√	√	√	√		

2009	Astra-J	Fuel Pump Control		√	√	√	√		
2009	Astra-J	Keyless Entry Control		√	√	√	√		
2009	Astra-J	Steering Column Lock Control		√	√	√	√		
2009	Astra-J	Steering Wheel Angle Sensor		√	√	√	√	√	0081 0082
2009	Astra-J	Trailer Interface Control		√	√	√	√		
2009	Astra-J	Transmission Control		√	√	√	√	√	
2009	Captiva(Long Body)	Body	BCM (Body Control Module)	√	√	√	√	√	
2009	Captiva(Long Body)	Body	ECC (Electronic Climate Control)	√	√	√		√	0150 0004
2009	Captiva(Long Body)	Body	Immobiliser	√	√	√	√		
2009	Captiva(Long Body)	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	
2009	Captiva(Long Body)	Body	XBCM(Auxiliary Body Control Module)	√	√	√	√	√	
2009	Captiva(Long Body)	Body	RFA (Multipurpose Receiver Module)	√	√	√	√		
2009	Captiva(Long Body)	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2009	Captiva(Long Body)	Engine	2.0 L (Diesel)	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0028 0025 0027
2009	Captiva(Long Body)	Engine	Z32SE	√	√	√	√	√	
2009	Captiva(Long Body)	Transmission	TCCM(Transfer Case Control Module)	√	√	√	√		0152
2009	Captiva(Long Body)	Transmission	Automatic Transmission	√	√	√	√	√	0170 0154 0155 0156 0033
2009	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2009	Corsa-C	Body	Immobiliser	√	√	√	√		0139 0140
2009	Corsa-C	Body	Airbag	√	√	√	√	√	

2009	Corsa-C	Body	Instrument	√	√	√	√	√	0177 0178
2009	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2009	Corsa-C	Body	HeadLamp Levelling Device		√	√	√	√	0141
2009	Corsa-C	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2009	Corsa-C	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2009	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2009	Corsa-C	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2009	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2009	Corsa-C	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065
2009	Corsa-C	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2009	Corsa-C	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2009	Corsa-C	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2009	Corsa-C	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2009	Corsa-C	Engine	Z16SE	√	√	√	√	√	
2009	Corsa-C	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2009	Corsa-C	Engine	Y17DT	√	√	√	√	√	
2009	Corsa-C	Engine	Y17DTL	√	√	√	√	√	
2009	Corsa-C	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2009	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021

2009	Corsa-C	Engine	Z13DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2009	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2009	Corsa-C	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2009	Corsa-D	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2009	Corsa-D	Body	IPC(Instrument)	√	√	√	√	√	0006 0055 0056 0057 0001 0004
2009	Corsa-D	Body	Central Door Lock	√	√	√	√	√	
2009	Corsa-D	Body	Exterior Lighting	√	√	√	√		
2009	Corsa-D	Body	Interior Lighting	√	√	√	√		
2009	Corsa-D	Body	Wipers/Washer	√	√	√	√		
2009	Corsa-D	Body	Anti Theft Warning System	√	√	√	√		
2009	Corsa-D	Body	Immobiliser	√	√	√	√		
2009	Corsa-D	Body	AFL (Adaptive Forward Lighting)	√	√	√	√		
2009	Corsa-D	Body	EHS (Electrical Heater System)	√	√	√	√		
2009	Corsa-D	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0001 0004
2009	Corsa-D	Body	PAS (Park Pilot)	√	√	√	√		
2009	Corsa-D	Body	TIM(Trailer Interface Module)	√	√	√	√		
2009	Corsa-D	Body	BCM (Body Control Module)	√	√	√	√		
2009	Corsa-D	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2009	Corsa-D	Chassis	ABS/ESP	√	√	√	√	√	0003 0004 0179
2009	Corsa-D	Chassis	Electronic Power Steering	√	√	√	√		
2009	Corsa-D	Engine	Z10XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2009	Corsa-D	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2009	Corsa-D	Engine	Z13DTJ	√	√	√	√	√	0019 0010 0011 0014 0020

2009	Corsa-D	Engine	Z13DTH	√	√	√	√	√	0019 0010 0011 0014 0020
2009	Corsa-D	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2009	Corsa-D	Engine	Z17DTR	√	√	√	√	√	0019 0021 0011 0014 0022 0023 0024 0012 0025 0026 0027 0028
2009	Corsa-D	Engine	Z16LEL	√	√	√	√	√	0009 0010 0011 0066 0012 0013
2009	Corsa-D	Engine	Z16LER	√	√	√	√	√	0009 0010 0011 0066 0012 0013
2009	Corsa-D	Engine	Engine(default)	√	√	√			
2009	Corsa-D	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2009	Corsa-D	Transmission	AF 13-4	√	√	√	√	√	0030 0031 0032
2009	Corsa-D	Transmission	MTA(Easytronic)	√	√	√	√	√	0034 0035
2009	Meriva	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2009	Meriva	Body	Immobiliser	√	√	√	√		0139 0140
2009	Meriva	Body	Airbag	√	√	√	√	√	
2009	Meriva	Body	Instrument	√	√	√	√	√	0176 0177
2009	Meriva	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2009	Meriva	Body	Electronic Climate Control	√	√	√	√	√	
2009	Meriva	Body	EHS (Electrical Heater System)	√	√	√	√	√	
2009	Meriva	Body	Add On Heater	√	√	√	√	√	0122 0123
2009	Meriva	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2009	Meriva	Chassis	Electronic Power Steering	√	√	√	√		0141
2009	Meriva	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020

2009	Meriva	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2009	Meriva	Engine	Z16SE	√	√	√	√	√	
2009	Meriva	Engine	Z16XE	√			√	√	
2009	Meriva	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2009	Meriva	Engine	Y17DT	√	√	√	√	√	
2009	Meriva	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2009	Meriva	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2009	Meriva	Engine	Z13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2009	Meriva	Engine	Z13DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2009	Meriva	Engine	Z16LET	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2009	Meriva	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2009	Meriva	Engine	C16SEL	√	√	√	√	√	
2009	Meriva	Engine	Z17DT	√	√	√	√	√	0006 0146 0019 0022 0011 0021
2009	Meriva	Engine	Z17DTR	√	√	√	√		
2009	Meriva	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2009	Movano	Body	Airbag	√	√	√	√		
2009	Movano	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2009	Movano	Body	Park Pilot		√	√	√		
2009	Movano	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0164 0165
2009	Movano	Chassis	Pneumatic Suspension		√	√	√	√	

2009	Movano	Transmission	MTA(Tecshift)		√	√	√	√	
2009	Tigra-B	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2009	Tigra-B	Body	Immobiliser	√	√	√	√		0139 0140
2009	Tigra-B	Body	Airbag	√	√	√	√	√	
2009	Tigra-B	Body	Instrument	√	√	√	√	√	0176 0177
2009	Tigra-B	Body	Electrohydraulic HardTop	√	√	√	√	√	
2009	Tigra-B	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2009	Tigra-B	Chassis	Electronic Power Steering	√	√	√	√		0141
2009	Tigra-B	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2009	Tigra-B	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2009	Tigra-B	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2009	Tigra-B	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2009	Vauxhall VXR8	Body	AHL(Automatic Headlamp Levelling)	√	√	√	√		
2009	Vauxhall VXR8	Body	BCM (Body Control Module)	√	√	√	√		
2009	Vauxhall VXR8	Body	HVAC(Heating Ventilation and Cooling)	√	√	√	√		
2009	Vauxhall VXR8	Body	Immobiliser	√	√	√	√		
2009	Vauxhall VXR8	Body	MSM(Memory Seat and Mirrors)	√	√	√	√		
2009	Vauxhall VXR8	Body	Park Assist	√	√	√	√		
2009	Vauxhall VXR8	Body	SDM(Sensing and Diagnostic Module)	√	√	√	√		
2009	Vauxhall VXR8	Body	IPC (Instrument Panel Cluster)	√	√	√	√		
2009	Vauxhall VXR8	Body	RFA (Multipurpose Receiver Module)	√	√	√	√		
2009	Vauxhall VXR8	Chassis	EBCM(Electronic Brake Control Module)	√	√	√	√	√	
2009	Vauxhall VXR8	Chassis	ESC(Electronic Suspension Control)	√	√	√	√		
2009	Vauxhall VXR8	Engine	V8 GEN IV	√	√	√	√	√	0015 0149 0171
2009	Vauxhall VXR8	Transmission	Automatic Transmission	√	√	√	√	√	
2009	Vivaro	Body	Airbag		√	√	√		0004
2009	Vivaro	Body	Park Pilot		√	√	√		

2009	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2009	Vivaro	Body	Body Control Module		√	√	√	√	
2009	Vivaro	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	0174 0175
2009	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2009	Vivaro	Transmission	MTA(Tecshift)		√	√	√	√	
2009	Zafira-B	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2009	Zafira-B	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2009	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2009	Zafira-B	Body	REC(Rear Electrical Centre)	√	√	√	√		
2009	Zafira-B	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2009	Zafira-B	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2009	Zafira-B	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2009	Zafira-B	Body	Interior Lighting	√	√	√	√		
2009	Zafira-B	Body	Wipers/Washer	√	√	√	√		
2009	Zafira-B	Body	Central Door Lock	√	√	√	√		
2009	Zafira-B	Body	Instrument	√	√	√	√	√	0055 0056 0057
2009	Zafira-B	Body	Immobiliser	√	√	√	√		
2009	Zafira-B	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2009	Zafira-B	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2009	Zafira-B	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2009	Zafira-B	Body	SLM(Shift Lever Module)	√	√	√	√		
2009	Zafira-B	Body	PEPS(Open&Start)	√	√	√	√		
2009	Zafira-B	Body	Anti Theft Warning System	√	√	√	√	√	
2009	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2009	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2009	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2009	Zafira-B	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	0005

2009	Zafira-B	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2009	Zafira-B	Chassis	TPMS(Tyre Pressure Monitoring System)	√	√	√	√		
2009	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2009	Zafira-B	Chassis	CDC(Continuous Damping Control)	√	√	√	√		
2009	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003
2009	Zafira-B	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2009	Zafira-B	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2009	Zafira-B	Engine	Z18XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2009	Zafira-B	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2009	Zafira-B	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0032 0010 0011 0066 0023 0024 0028 0025 0026
2009	Zafira-B	Engine	Z16YNG	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2009	Zafira-B	Engine	Z16XE1	√	√	√	√	√	0006 0007 0008 0009 0173 0010 0011 0066 0012

2009	Zafira-B	Engine	A17DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0028 0025 0069 0006 0007 0008
2009	Zafira-B	Engine	A17DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0028 0025 0069 0006 0007 0008
2009	Zafira-B	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2009	Zafira-B	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2009	Zafira-B	Engine	Z20LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2009	Zafira-B	Engine	Engine(default)	√	√	√			
2009	Zafira-B	Transmission	MTA(Easutronic)	√	√	√	√	√	0003 0061 0034
2009	Zafira-B	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2009	Zafira-B	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2008	Agila-B	Body	BCM(Body Control Module)		√	√	√	√	
2008	Agila-B	Body	Immobiliser		√	√	√		
2008	Agila-B	Body	SDM(Airbag)		√	√	√		
2008	Agila-B	Chassis	ABS/ESP(Anti-lock Braking System/Electronic Stability Program)	√	√	√	√		0005
2008	Agila-B	Chassis	Electronic Power Steering		√	√	√		
2008	Agila-B	Engine	K10B	√	√	√	√	√	0015

2008	Agila-B	Engine	K12B	√	√	√	√	√	0015
2008	Agila-B	Engine	D13A / Z 13 DTJ	√	√	√	√	√	0040 0019 0011 0021 0020 0018 0028 0025 0041
2008	Agila-B	Transmission	TCM(Transmission Control Module)	√	√	√	√		0033
2008	Antara,Captiva (Short Body)	Body	AHL(Automatic Headlamp Levelling)	√	√	√	√	√	0141
2008	Antara,Captiva (Short Body)	Body	Anti Theft Warning System	√	√	√	√	√	
2008	Antara,Captiva (Short Body)	Body	BCM(Body Control Module)	√	√	√	√	√	
2008	Antara,Captiva (Short Body)	Body	ECC(Electronic Climate Control)	√	√	√		√	0150 0004
2008	Antara,Captiva (Short Body)	Body	Immobiliser	√	√	√	√		
2008	Antara,Captiva (Short Body)	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	
2008	Antara,Captiva (Short Body)	Body	Wipers/Washer	√	√	√	√		
2008	Antara,Captiva (Short Body)	Body	PAS(Park Pilot)	√	√	√	√	√	0057
2008	Antara,Captiva (Short Body)	Body	XBCM(Auxiliary Body Control Module)	√	√	√	√	√	
2008	Antara,Captiva (Short Body)	Body	Central Door Lock	√	√	√	√	√	
2008	Antara,Captiva (Short Body)	Body	RFA(Multipurpose Receiver Module)	√	√	√	√		
2008	Antara,Captiva (Short Body)	Body	SLM(Shift Lever Module)	√	√	√	√		
2008	Antara,Captiva (Short Body)	Body	HVAC(Heating Ventilation and Cooling)	√	√	√	√		

2008	Antara,Captiva (Short Body)	Body	Interior Lighting	√	√	√	√		
2008	Antara,Captiva (Short Body)	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2008	Antara,Captiva (Short Body)	Body	SDM(Airbag)	√	√	√	√		
2008	Antara,Captiva (Short Body)	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2008	Antara,Captiva (Short Body)	Engine	2.0 L (Diesel)	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0028 0025 0027
2008	Antara,Captiva (Short Body)	Engine	Z 24 XE	√	√	√	√	√	0010 0033 0015
2008	Antara,Captiva (Short Body)	Engine	Z 32 SE	√	√	√	√	√	0015 0018 0172
2008	Antara,Captiva (Short Body)	Transmission	TCCM(Transfer Case Control Module)	√	√	√	√		0152
2008	Antara,Captiva (Short Body)	Transmission	Automatic Transmission	√	√	√	√	√	0170 0154 0155 0156 0033
2008	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2008	Astra-G	Body	Instrument	√	√	√	√		
2008	Astra-G	Body	Airbag	√	√	√	√		
2008	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2008	Astra-G	Body	Central Door Lock	√	√	√	√		
2008	Astra-G	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2008	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2008	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2008	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2008	Astra-G	Body	Softtop Controller	√	√	√	√	√	
2008	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2008	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2008	Astra-G	Chassis	Cruise Control	√	√	√	√		

2008	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2008	Astra-G	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2008	Astra-G	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2008	Astra-G	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2008	Astra-G	Engine	C16SEL	√	√	√	√	√	
2008	Astra-G	Engine	Z16SE	√	√	√	√	√	
2008	Astra-G	Engine	Z16XE	√			√	√	
2008	Astra-G	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2008	Astra-G	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2008	Astra-G	Engine	Y17DT	√	√	√	√	√	
2008	Astra-G	Engine	Z17DTL	√	√	√	√	√	
2008	Astra-G	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2008	Astra-G	Engine	Z18XEL	√	√	√			0011 0021
2008	Astra-G	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2008	Astra-G	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2008	Astra-G	Engine	Y22DTR	√	√	√	√	√	0011 0021
2008	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2008	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2008	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2008	Astra-H	Body	SDM(Airbag)	√	√	√	√		
2008	Astra-H	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053

2008	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2008	Astra-H	Body	REC(Rear Electrical Centre)	√	√	√	√		
2008	Astra-H	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2008	Astra-H	Body	AHL/AFL (Headlamp Levelling)	√	√	√	√		
2008	Astra-H	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2008	Astra-H	Body	Interior Lighting	√	√	√	√		
2008	Astra-H	Body	Wipers/Washer	√	√	√	√		
2008	Astra-H	Body	Central Door Lock	√	√	√	√		
2008	Astra-H	Body	Instrument	√	√	√	√	√	0055 0056 0057
2008	Astra-H	Body	Immobiliser	√	√	√	√		
2008	Astra-H	Body	Anti Theft Warning System	√	√	√	√	√	
2008	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√	√	0001 0004
2008	Astra-H	Body	ECC/SAC (Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0032 0001 0004
2008	Astra-H	Body	EHS (Electrical Heater System)	√	√	√	√		0032 0001 0004
2008	Astra-H	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2008	Astra-H	Body	SLM (Shift Lever Module)	√	√	√	√		
2008	Astra-H	Body	PEPS (Open&Start)	√	√	√	√		
2008	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2008	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2008	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2008	Astra-H	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2008	Astra-H	Chassis	TPMS(Tyre Pressure Monitoring System)	√	√	√	√		
2008	Astra-H	Chassis	CDC(Continuous Damping Control)	√	√	√	√		
2008	Astra-H	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	
2008	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003
2008	Astra-H	Engine	Z13DTH	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0020 0029 0028 0025 0026

2008	Astra-H	Engine	Z14XEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2008	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2008	Astra-H	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2008	Astra-H	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2008	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012
2008	Astra-H	Engine	Z17DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030
2008	Astra-H	Engine	Z17DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030
2008	Astra-H	Engine	Z18XE	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0012
2008	Astra-H	Engine	Z18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033

2008	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0005 0028 0018
2008	Astra-H	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0005 0028 0018
2008	Astra-H	Engine	Z16LET	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2008	Astra-H	Engine	Z20LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2008	Astra-H	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2008	Astra-H	Engine	Z17DTL	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0029 0032 0018
2008	Astra-H	Engine	Z16XE1	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2008	Astra-H	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2008	Astra-H	Engine	Y13DTH	√	√	√	√	√	0019 0010 0011 0066 0020 0029 0028 0025 0026

2008	Astra-H	Engine	Z19DTJ	√	√	√		√	0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027
2008	Astra-H	Engine	Z20LEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2008	Astra-H	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2008	Astra-H	Engine	Engine(default)	√	√	√			
2008	Astra-H	Transmission	AF 17-4	√	√	√	√	√	0030 0031 0032 0003 0033
2008	Astra-H	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2008	Astra-H	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2008	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0003 0061 0034
2008	Astra-H	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2008	Captiva(Long Body)	Body	BCM (Body Control Module)	√	√	√	√	√	
2008	Captiva(Long Body)	Body	ECC (Electronic Climate Control)	√	√	√		√	0150 0004
2008	Captiva(Long Body)	Body	Immobiliser	√	√	√	√		
2008	Captiva(Long Body)	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	
2008	Captiva(Long Body)	Body	XBCM(Auxiliary Body Control Module)	√	√	√	√	√	
2008	Captiva(Long Body)	Body	RFA (Multipurpose Receiver Module)	√	√	√	√		
2008	Captiva(Long Body)	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2008	Captiva(Long Body)	Engine	2.0L(Diesel)	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0028 0025 0027
2008	Captiva(Long Body)	Engine	Z32SE	√	√	√	√	√	
2008	Captiva(Long Body)	Transmission	TCCM(Transfer Case Control Module)	√	√	√	√		0152

2008	Captiva(Long Body)	Transmission	Automatic Transmission	√	√	√	√	√	0170 0154 0155 0156 0033
2008	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2008	Corsa-C	Body	Immobiliser	√	√	√	√		0139 0140
2008	Corsa-C	Body	Airbag	√	√	√	√	√	
2008	Corsa-C	Body	Instrument	√	√	√	√	√	0176 0177
2008	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2008	Corsa-C	Body	HeadLamp Levelling Device		√	√	√	√	0141
2008	Corsa-C	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2008	Corsa-C	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2008	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2008	Corsa-C	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2008	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2008	Corsa-C	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065
2008	Corsa-C	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2008	Corsa-C	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2008	Corsa-C	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2008	Corsa-C	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2008	Corsa-C	Engine	Z16SE	√	√	√	√	√	
2008	Corsa-C	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2008	Corsa-C	Engine	Y17DT	√	√	√	√	√	
2008	Corsa-C	Engine	Y17DTL	√	√	√	√	√	

2008	Corsa-C	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2008	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2008	Corsa-C	Engine	Z13DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2008	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2008	Corsa-C	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2008	Corsa-D	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2008	Corsa-D	Body	IPC(Instrument)	√	√	√	√	√	0006 0055 0056 0057 0001 0004
2008	Corsa-D	Body	Central Door Lock	√	√	√	√	√	
2008	Corsa-D	Body	Exterior Lighting	√	√	√	√		
2008	Corsa-D	Body	Interior Lighting	√	√	√	√		
2008	Corsa-D	Body	Wipers/Washer	√	√	√	√		
2008	Corsa-D	Body	Anti Theft Warning System	√	√	√	√		
2008	Corsa-D	Body	Immobiliser	√	√	√	√		
2008	Corsa-D	Body	AFL (Adaptive Forward Lighting)	√	√	√	√		
2008	Corsa-D	Body	EHS (Electrical Heater System)	√	√	√	√		
2008	Corsa-D	Body	IPC ECU (Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0001 0004
2008	Corsa-D	Body	PAS (Park Pilot)	√	√	√	√		
2008	Corsa-D	Body	TIM(Trailer Interface Module)	√	√	√	√		
2008	Corsa-D	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2008	Corsa-D	Chassis	ABS/ESP	√	√	√	√	√	0003 0004 0178
2008	Corsa-D	Chassis	Electronic Power Steering	√	√	√	√		
2008	Corsa-D	Engine	Z10XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014

2008	Corsa-D	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2008	Corsa-D	Engine	Z13DTJ	√	√	√	√	√	0019 0010 0011 0014 0020
2008	Corsa-D	Engine	Z13DTH	√	√	√	√	√	0019 0010 0011 0014 0020
2008	Corsa-D	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2008	Corsa-D	Engine	Z17DTR	√	√	√	√	√	0019 0021 0011 0014 0022 0023 0024 0012 0025 0026 0027 0028
2008	Corsa-D	Engine	Z16LEL	√	√	√	√	√	0009 0010 0011 0066 0012 0013
2008	Corsa-D	Engine	Z16LER	√	√	√	√	√	0009 0010 0011 0066 0012 0013
2008	Corsa-D	Engine	Engine(default)	√	√	√			
2008	Corsa-D	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2008	Corsa-D	Transmission	AF 13-4	√	√	√	√	√	0030 0031 0032
2008	Corsa-D	Transmission	MTA(Easytronic)	√	√	√	√	√	0034 0035
2008	Meriva	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2008	Meriva	Body	Immobiliser	√	√	√	√		0139 0140
2008	Meriva	Body	Airbag	√	√	√	√	√	
2008	Meriva	Body	Instrument	√	√	√	√	√	0176 0177
2008	Meriva	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2008	Meriva	Body	Electronic Climate Control	√	√	√	√	√	
2008	Meriva	Body	EHS (Electrical Heater System)	√	√	√	√	√	
2008	Meriva	Body	Add On Heater	√	√	√	√	√	0122 0123
2008	Meriva	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004

2008	Meriva	Chassis	Electronic Power Steering	√	√	√	√		0141
2008	Meriva	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2008	Meriva	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2008	Meriva	Engine	Z16SE	√	√	√	√	√	
2008	Meriva	Engine	Z16XE	√			√	√	
2008	Meriva	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2008	Meriva	Engine	Y17DT	√	√	√	√	√	
2008	Meriva	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2008	Meriva	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2008	Meriva	Engine	Z13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2008	Meriva	Engine	Z13DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2008	Meriva	Engine	Z16LET	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2008	Meriva	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2008	Meriva	Engine	C16SEL	√	√	√	√	√	
2008	Meriva	Engine	Z17DT	√	√	√	√	√	0006 0146 0019 0022 0011 0021
2008	Meriva	Engine	Z17DTR	√	√	√	√		
2008	Meriva	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2008	Movano	Body	Airbag	√	√	√	√		
2008	Movano	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2008	Movano	Body	Park Pilot		√	√	√		

2008	Movano	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0164 0165
2008	Movano	Chassis	Pneumatic Suspension		√	√	√	√	
2008	Movano	Transmission	MTA(Tecshift)		√	√	√	√	
2008	Tigra-B	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2008	Tigra-B	Body	Immobiliser	√	√	√	√		0139 0140
2008	Tigra-B	Body	Airbag	√	√	√	√	√	
2008	Tigra-B	Body	Instrument	√	√	√	√	√	0176 0177
2008	Tigra-B	Body	Electrohydraulic HardTop	√	√	√	√	√	
2008	Tigra-B	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2008	Tigra-B	Chassis	Electronic Power Steering	√	√	√	√		0141
2008	Tigra-B	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2008	Tigra-B	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2008	Tigra-B	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2008	Tigra-B	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2008	Vauxhall VXR8	Body	AHL(Automatic Headlamp Levelling)	√	√	√	√		
2008	Vauxhall VXR8	Body	BCM(Body Control Module)	√	√	√	√		
2008	Vauxhall VXR8	Body	HVAC(Heating Ventilation and Cooling)	√	√	√	√		
2008	Vauxhall VXR8	Body	Immobiliser	√	√	√	√		
2008	Vauxhall VXR8	Body	MSM(Memory Seat and Mirrors)	√	√	√	√		
2008	Vauxhall VXR8	Body	Park Assist	√	√	√	√		
2008	Vauxhall VXR8	Body	SDM(Sensing and Diagnostic Module)	√	√	√	√		
2008	Vauxhall VXR8	Body	IPC(Instrument Panel Cluster)	√	√	√	√		
2008	Vauxhall VXR8	Body	RFA(Multipurpose Receiver Module)	√	√	√	√		
2008	Vauxhall VXR8	Chassis	EBCM(Electronic Brake Control Module)	√	√	√	√	√	
2008	Vauxhall VXR8	Chassis	ESC(Electronic Suspension Control)	√	√	√	√		
2008	Vauxhall VXR8	Engine	V8 GEN IV	√	√	√	√	√	0015 0149 0171

2008	Vauxhall VXR8	Transmission	Automatic Transmission	√	√	√	√	√	
2008	Vectra- C/Signum	Body	SDM(Airbag,Sensing&Diagnostic Module)	√	√	√	√		0000 0001 0002
2008	Vectra- C/Signum	Body	Instrument	√	√	√	√	√	0169 0056 0057 0180 0001
2008	Vectra- C/Signum	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2008	Vectra- C/Signum	Body	BCM(Body Control Module)	√	√	√			0181 0182
2008	Vectra- C/Signum	Body	DDM(Driver Door Module)	√	√	√			
2008	Vectra- C/Signum	Body	PDM(Passenger Door Module)	√	√	√			
2008	Vectra- C/Signum	Body	REC(Rear Electrical Centre)	√	√	√	√		
2008	Vectra- C/Signum	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2008	Vectra- C/Signum	Body	SLM(Shift Lever Module)	√	√	√			
2008	Vectra- C/Signum	Body	SRM(Sun Roof Module)	√	√	√			
2008	Vectra- C/Signum	Body	AHL/AFL(Headlamp Levelling)	√	√	√			
2008	Vectra- C/Signum	Body	Electrical Horn	√	√	√	√	√	
2008	Vectra- C/Signum	Body	SAC (Automatic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2008	Vectra- C/Signum	Body	Interior Lighting	√	√	√	√	√	0183 0059
2008	Vectra- C/Signum	Body	Electronic Seat Memory/Seat Heating	√	√	√	√		
2008	Vectra- C/Signum	Body	Anti Theft Warning System	√	√	√	√	√	
2008	Vectra- C/Signum	Body	Central Door Lock	√	√	√	√		
2008	Vectra- C/Signum	Body	EHS (Electrical Heater System)	√	√	√	√	√	0032 0001 0004
2008	Vectra- C/Signum	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2008	Vectra- C/Signum	Chassis	ABS/TC/ESP	√	√	√	√	√	0025
2008	Vectra- C/Signum	Chassis	EHPS(Electronic Power Steering)	√	√	√	√		0026
2008	Vectra- C/Signum	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		0020
2008	Vectra- C/Signum	Chassis	CDC(Continuous Damping Control)	√	√	√			0012
2008	Vectra- C/Signum	Chassis	Electronic Cruise Control	√	√	√			
2008	Vectra- C/Signum	Engine	Engine Cooling	√	√	√	√		
2008	Vectra- C/Signum	Engine	Z16XEP	√	√	√	√	√	0010 0011 0066 0013 0149

2008	Vectra- C/Signum	Engine	Z18XE	√	√	√	√	√	0019 0010 0011 0066 0149 0012
2008	Vectra- C/Signum	Engine	Z18XER	√	√	√	√	√	0019 0009 0010 0011 0066 0149
2008	Vectra- C/Signum	Engine	Z19DT	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0069 0020 0012
2008	Vectra- C/Signum	Engine	Z19DTH	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0028 0025 0026 0020 0012 0027
2008	Vectra- C/Signum	Engine	Y20DTH	√	√	√	√	√	0010 0011 0066
2008	Vectra- C/Signum	Engine	Y22DTR	√	√	√	√	√	0010 0011 0066
2008	Vectra- C/Signum	Engine	Z22SE	√	√	√	√	√	0010 0011 0066
2008	Vectra- C/Signum	Engine	Z22YH	√	√	√	√	√	0023
2008	Vectra- C/Signum	Engine	Z32SE	√	√	√	√	√	0019 0010 0011 0066 0149
2008	Vectra- C/Signum	Engine	Z30DT	√	√	√	√	√	0019 0010 0066
2008	Vectra- C/Signum	Engine	Z28NEH	√	√	√	√	√	0009 0019 0040 0184 0185 0186 0011 0066 0149
2008	Vectra- C/Signum	Engine	Z28NEL	√	√	√	√	√	0009 0019 0040 0183 0184 0185 0011 0066 0149
2008	Vectra- C/Signum	Engine	Z28NET	√	√	√	√	√	0009 0019 0040 0183 0184 0185 0011 0066 0149
2008	Vectra- C/Signum	Engine	Z16XE	√	√	√	√	√	0010 0011 0066 0149 0012
2008	Vectra- C/Signum	Engine	Z20NET	√	√	√	√	√	0010 0011 0066
2008	Vectra- C/Signum	Engine	Engine(default)	√	√	√			
2008	Vectra- C/Signum	Transmission	AF 23-5/33-5/40-6	√	√	√	√	√	0032 0033

2008	Vectra- C/Signum	Transmission	CVTronic	√	√	√	√	√	0187 0188 0189 0032 0003 0033
2008	Vectra- C/Signum	Transmission	MTA(Easytronic)	√	√	√	√	√	
2008	Vivaro	Body	Airbag		√	√	√		0004
2008	Vivaro	Body	Park Pilot		√	√	√		
2008	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2008	Vivaro	Body	Body Control Module		√	√	√	√	
2008	Vivaro	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	0174 0175
2008	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2008	Vivaro	Transmission	MTA(Tecshift)		√	√	√	√	
2008	Zafira-B	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2008	Zafira-B	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2008	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2008	Zafira-B	Body	REC(Rear Electrical Centre)	√	√	√	√		
2008	Zafira-B	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2008	Zafira-B	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2008	Zafira-B	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2008	Zafira-B	Body	Interior Lighting	√	√	√	√		
2008	Zafira-B	Body	Wipers/Washer	√	√	√	√		
2008	Zafira-B	Body	Central Door Lock	√	√	√	√		
2008	Zafira-B	Body	Instrument	√	√	√	√	√	0055 0056 0057
2008	Zafira-B	Body	Immobiliser	√	√	√	√		
2008	Zafira-B	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2008	Zafira-B	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2008	Zafira-B	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2008	Zafira-B	Body	SLM(Shift Lever Module)	√	√	√	√		
2008	Zafira-B	Body	PEPS(Open&Start)	√	√	√	√		
2008	Zafira-B	Body	Anti Theft Warning System	√	√	√	√	√	

2008	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2008	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2008	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2008	Zafira-B	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2008	Zafira-B	Chassis	TPMS(Tyre Pressure Monitoring System)	√	√	√	√		
2008	Zafira-B	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	
2008	Zafira-B	Chassis	CDC(Continuous Damping Control)	√	√	√	√		
2008	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003
2008	Zafira-B	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2008	Zafira-B	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2008	Zafira-B	Engine	Z18XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2008	Zafira-B	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2008	Zafira-B	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0032 0010 0011 0066 0023 0024 0028 0025 0026 0027
2008	Zafira-B	Engine	Z16YNG	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012

2008	Zafira-B	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2008	Zafira-B	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2008	Zafira-B	Engine	Z20LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2008	Zafira-B	Engine	Z16XE1	√	√	√	√	√	0006 0007 0008 0009 0173 0010 0011 0066 0012
2008	Zafira-B	Engine	Engine(default)	√	√	√			
2008	Zafira-B	Transmission	MTA(Easutronic)	√	√	√	√	√	0003 0061 0034
2008	Zafira-B	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2008	Zafira-B	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2007	Agila	Body	Immobiliser	√	√	√	√		0139 0140
2007	Agila	Body	Airbag	√	√	√	√		
2007	Agila	Body	Instrument	√	√	√	√		
2007	Agila	Chassis	ABS	√	√	√	√		
2007	Agila	Chassis	Electronic Power Steering	√	√	√	√		
2007	Agila	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2007	Agila	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2007	Agila	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065
2007	Agila	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2007	Antara,Captiva (Short Body)	Body	AHL(Automatic Headlamp Levelling)	√	√	√	√	√	0141

2007	Antara,Captiva (Short Body)	Body	Anti Theft Warning System	√	√	√	√	√	
2007	Antara,Captiva (Short Body)	Body	BCM(Body Control Module)	√	√	√	√	√	
2007	Antara,Captiva (Short Body)	Body	ECC(Electronic Climate Control)	√	√	√		√	0150 0004
2007	Antara,Captiva (Short Body)	Body	Immobiliser	√	√	√	√		
2007	Antara,Captiva (Short Body)	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	
2007	Antara,Captiva (Short Body)	Body	Wipers/Washer	√	√	√	√		
2007	Antara,Captiva (Short Body)	Body	PAS(Park Pilot)	√	√	√	√	√	0057
2007	Antara,Captiva (Short Body)	Body	XBCM(Auxiliary Body Control Module)	√	√	√	√	√	
2007	Antara,Captiva (Short Body)	Body	Central Door Lock	√	√	√	√	√	
2007	Antara,Captiva (Short Body)	Body	RFA(Multipurpose Receiver Module)	√	√	√	√		
2007	Antara,Captiva (Short Body)	Body	SLM(Shift Lever Module)	√	√	√	√		
2007	Antara,Captiva (Short Body)	Body	HVAC(Heating Ventilation and Cooling)	√	√	√	√		
2007	Antara,Captiva (Short Body)	Body	Interior Lighting	√	√	√	√		
2007	Antara,Captiva (Short Body)	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2007	Antara,Captiva (Short Body)	Body	SDM(Airbag)	√	√	√	√		
2007	Antara,Captiva (Short Body)	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	

2007	Antara,Captiva (Short Body)	Engine	2.0L(Diesel)	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0028 0025 0027
2007	Antara,Captiva (Short Body)	Engine	Z24XE	√	√	√	√	√	0010 0033 0015
2007	Antara,Captiva (Short Body)	Engine	Z32SE	√	√	√	√	√	0015 0018 0172
2007	Antara,Captiva (Short Body)	Transmission	TCCM(Transfer Case Control Module)	√	√	√	√		0152
2007	Antara,Captiva (Short Body)	Transmission	Automatic Transmission	√	√	√	√	√	0170 0154 0155 0156 0033
2007	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2007	Astra-G	Body	Instrument	√	√	√	√		
2007	Astra-G	Body	Airbag	√	√	√	√		
2007	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2007	Astra-G	Body	Central Door Lock	√	√	√	√		
2007	Astra-G	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2007	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2007	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2007	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2007	Astra-G	Body	Softtop Controller	√	√	√	√	√	
2007	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2007	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2007	Astra-G	Chassis	Cruise Control	√	√	√	√		
2007	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2007	Astra-G	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2007	Astra-G	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011

2007	Astra-G	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2007	Astra-G	Engine	C16SEL	√	√	√	√	√	
2007	Astra-G	Engine	Z16SE	√	√	√	√	√	
2007	Astra-G	Engine	Z16XE	√			√	√	
2007	Astra-G	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2007	Astra-G	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2007	Astra-G	Engine	Y17DT	√	√	√	√	√	
2007	Astra-G	Engine	Z17DTL	√	√	√	√	√	
2007	Astra-G	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2007	Astra-G	Engine	Z18XEL	√	√	√			0011 0021
2007	Astra-G	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2007	Astra-G	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2007	Astra-G	Engine	Y22DTR	√	√	√	√	√	0011 0021
2007	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2007	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2007	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2007	Astra-H	Body	SDM(Airbag)	√	√	√	√		
2007	Astra-H	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2007	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2007	Astra-H	Body	REC(Rear Electrical Centre)	√	√	√	√		
2007	Astra-H	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2007	Astra-H	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2007	Astra-H	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2007	Astra-H	Body	Interior Lighting	√	√	√	√		

2007	Astra-H	Body	Wipers/Washer	√	√	√	√		
2007	Astra-H	Body	Central Door Lock	√	√	√	√		
2007	Astra-H	Body	Instrument	√	√	√	√	√	0055 0056 0057
2007	Astra-H	Body	Immobiliser	√	√	√	√		
2007	Astra-H	Body	Anti Theft Warning System	√	√	√	√	√	
2007	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√	√	0001 0004
2007	Astra-H	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0032 0001 0004
2007	Astra-H	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2007	Astra-H	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2007	Astra-H	Body	SLM(Shift Lever Module)	√	√	√	√		
2007	Astra-H	Body	PEPS(Open&Start)	√	√	√	√		
2007	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2007	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2007	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2007	Astra-H	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2007	Astra-H	Chassis	TPMS(Tyre Pressure Monitoring System)	√	√	√	√		
2007	Astra-H	Chassis	CDC(Continuous Damping Control)	√	√	√	√		
2007	Astra-H	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	
2007	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003
2007	Astra-H	Engine	Z13DTH	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0020 0029 0028 0025 0026
2007	Astra-H	Engine	Z14XEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2007	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013

2007	Astra-H	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2007	Astra-H	Engine	Z16XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2007	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012
2007	Astra-H	Engine	Z17DTR	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030
2007	Astra-H	Engine	Z17DTJ	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0014 0022 0023 0024 0012 0025 0026 0027 0028 0029 0030
2007	Astra-H	Engine	Z18XE	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0012
2007	Astra-H	Engine	Z18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2007	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018

2007	Astra-H	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0005 0008 0010
2007	Astra-H	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2007	Astra-H	Engine	Y13DTH	√	√	√	√	√	0019 0010 0011 0066 0020 0029 0028 0025 0026
2007	Astra-H	Engine	Z16XE1	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2007	Astra-H	Engine	Z16LET	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2007	Astra-H	Engine	Z17DTL	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0029 0032 0018
2007	Astra-H	Engine	Z19DTJ	√	√	√		√	0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0005 0008 0010
2007	Astra-H	Engine	Z20LEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2007	Astra-H	Engine	Z20LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013

2007	Astra-H	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2007	Astra-H	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2007	Astra-H	Engine	Engine(default)	√	√	√			
2007	Astra-H	Infotainment System	EHU(Entertainment Head Unit)	√	√	√			
2007	Astra-H	Infotainment System	DIS(Info Display TID,BID,GID,CID)	√	√	√			
2007	Astra-H	Transmission	AF 17-4	√	√	√	√	√	0030 0031 0032 0003 0033
2007	Astra-H	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2007	Astra-H	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2007	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0003 0061 0034
2007	Astra-H	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2007	Captiva(Long Body)	Body	BCM(Body Control Module)	√	√	√	√	√	
2007	Captiva(Long Body)	Body	ECC(Electronic Climate Control)	√	√	√		√	0150 0004
2007	Captiva(Long Body)	Body	Immobiliser	√	√	√	√		
2007	Captiva(Long Body)	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	
2007	Captiva(Long Body)	Body	XBCM(Auxiliary Body Control Module)	√	√	√	√	√	
2007	Captiva(Long Body)	Body	RFA(Multipurpose Receiver Module)	√	√	√	√		
2007	Captiva(Long Body)	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	
2007	Captiva(Long Body)	Engine	2.0L(Diesel)	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0028 0025 0027
2007	Captiva(Long Body)	Engine	Z32SE	√	√	√	√	√	
2007	Captiva(Long Body)	Transmission	TCCM(Transfer Case Control Module)	√	√	√	√		0152

2007	Captiva(Long Body)	Transmission	Automatic Transmission	√	√	√	√	√	0170 0154 0155 0156 0033
2007	Combo	Body	Add On Heater	√	√	√	√	√	0122 0123
2007	Combo	Body	Airbag	√	√	√	√	√	
2007	Combo	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2007	Combo	Body	HeadLamp Levelling Device		√	√	√	√	0141
2007	Combo	Body	Instrument	√	√	√	√		
2007	Combo	Body	Immobiliser	√	√	√	√		0164 0165
2007	Combo	Chassis	ABS8/ESP8(Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0005 0142 0143 0144 0004
2007	Combo	Chassis	ABS-5.3/5.4 (+TC)(Anti-lock Braking System)	√	√	√	√	√	
2007	Combo	Chassis	Electronic Power Steering	√	√	√	√		0141
2007	Combo	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2007	Combo	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2007	Combo	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065
2007	Combo	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2007	Combo	Engine	Z13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2007	Combo	Engine	Z13DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2007	Combo	Engine	Z14XE						
2007	Combo	Engine	Z14XEP	√	√	√	√	√	0006 0166 0009 0146 0019 0011 0021 0065 0033
2007	Combo	Engine	Z16SE	√	√	√	√	√	
2007	Combo	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2007	Combo	Engine	Y17DT	√	√	√	√	√	

2007	Combo	Engine	Y17DTL	√	√	√	√	√	
2007	Combo	Engine	Z17DTH		√	√	√		
2007	Combo	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2007	Combo	Infotainment System	Trip Info Display TID	√	√	√			
2007	Combo	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2007	Combo	Transmission	Easytronic(MTA)	√	√	√	√	√	0011 0148
2007	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2007	Corsa-C	Body	Immobiliser	√	√	√	√		0139 0140
2007	Corsa-C	Body	Airbag	√	√	√	√	√	
2007	Corsa-C	Body	Instrument	√	√	√	√	√	0176 0177
2007	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2007	Corsa-C	Body	HeadLamp Levelling Device		√	√	√	√	0141
2007	Corsa-C	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2007	Corsa-C	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2007	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2007	Corsa-C	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2007	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2007	Corsa-C	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065
2007	Corsa-C	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2007	Corsa-C	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2007	Corsa-C	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2007	Corsa-C	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021

2007	Corsa-C	Engine	Z16SE	√	√	√	√	√	
2007	Corsa-C	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2007	Corsa-C	Engine	Y17DT	√	√	√	√	√	
2007	Corsa-C	Engine	Y17DTL	√	√	√	√	√	
2007	Corsa-C	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2007	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2007	Corsa-C	Engine	Z13DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2007	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2007	Corsa-C	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2007	Corsa-D	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2007	Corsa-D	Body	IPC(Instrument)	√	√	√	√	√	0006 0055 0056 0057 0001 0004
2007	Corsa-D	Body	Central Door Lock	√	√	√	√	√	
2007	Corsa-D	Body	Exterior Lighting	√	√	√	√		
2007	Corsa-D	Body	Interior Lighting	√	√	√	√		
2007	Corsa-D	Body	Wipers/Washer	√	√	√	√		
2007	Corsa-D	Body	Anti Theft Warning System	√	√	√	√		
2007	Corsa-D	Body	Immobiliser	√	√	√	√		
2007	Corsa-D	Body	AFL(Adaptive Forward Lighting)	√	√	√	√		
2007	Corsa-D	Body	EHS(Electrical Heater System)	√	√	√	√		
2007	Corsa-D	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0001 0004
2007	Corsa-D	Body	PAS(Park Pilot)	√	√	√	√		
2007	Corsa-D	Body	TIM(Trailer Interface Module)	√	√	√	√		
2007	Corsa-D	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2007	Corsa-D	Chassis	ABS/ESP	√	√	√	√	√	0003 0004 0178
2007	Corsa-D	Chassis	Electronic Power Steering	√	√	√	√		

2007	Corsa-D	Engine	Z10XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2007	Corsa-D	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2007	Corsa-D	Engine	Z13DTJ	√	√	√	√	√	0019 0010 0011 0014 0020
2007	Corsa-D	Engine	Z13DTH	√	√	√	√	√	0019 0010 0011 0014 0020
2007	Corsa-D	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0012 0013 0014
2007	Corsa-D	Engine	Z17DTR	√	√	√	√	√	0019 0021 0011 0014 0022 0023 0024 0012 0025 0026 0027 0028
2007	Corsa-D	Engine	Z16LEL	√	√	√	√	√	0009 0010 0011 0066 0012 0013
2007	Corsa-D	Engine	Z16LER	√	√	√	√	√	0009 0010 0011 0066 0012 0013
2007	Corsa-D	Engine	Engine(default)	√	√	√			
2007	Corsa-D	Transmission	AF 13-4	√	√	√	√	√	0030 0031 0032
2007	Corsa-D	Transmission	MTA(Easytronic)	√	√	√	√	√	0034 0035
2007	Meriva	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2007	Meriva	Body	Immobiliser	√	√	√	√		0139 0140
2007	Meriva	Body	Airbag	√	√	√	√	√	
2007	Meriva	Body	Instrument	√	√	√	√	√	0176 0177
2007	Meriva	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2007	Meriva	Body	Electronic Climate Control	√	√	√	√	√	
2007	Meriva	Body	EHS(Electrical Heater System)	√	√	√	√	√	
2007	Meriva	Body	Add On Heater	√	√	√	√	√	0122 0123

2007	Meriva	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2007	Meriva	Chassis	Electronic Power Steering	√	√	√	√		0141
2007	Meriva	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2007	Meriva	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2007	Meriva	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2007	Meriva	Engine	Z16SE	√	√	√	√	√	
2007	Meriva	Engine	Z16XE	√			√	√	
2007	Meriva	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2007	Meriva	Engine	Y17DT	√	√	√	√	√	
2007	Meriva	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2007	Meriva	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2007	Meriva	Engine	Z13DTJ	√	√	√	√	√	0040 0019 0028 0025 0041 0021 0011 0020 0042
2007	Meriva	Engine	Z16LET	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2007	Meriva	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2007	Meriva	Engine	C16SEL	√	√	√	√	√	
2007	Meriva	Engine	Z17DT	√	√	√	√	√	0006 0146 0019 0022 0011 0021
2007	Meriva	Engine	Z17DTR	√	√	√	√		
2007	Meriva	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2007	Movano	Body	Airbag	√	√	√	√		

2007	Movano	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2007	Movano	Body	Park Pilot		√	√	√		
2007	Movano	Chassis	ABS/ESP(Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0164 0165
2007	Movano	Chassis	Pneumatic Suspension		√	√	√	√	
2007	Movano	Transmission	MTA(Tecshift)		√	√	√	√	
2007	Speedster/VX22 0	Body	Immobiliser	√	√	√	√		0139 0140
2007	Speedster/VX22 0	Body	Airbag	√	√	√	√		
2007	Speedster/VX22 0	Chassis	ABS 430	√	√	√	√		
2007	Speedster/VX22 0	Engine	Z20LET	√	√	√	√		
2007	Speedster/VX22 0	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2007	Tigra-B	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2007	Tigra-B	Body	Immobiliser	√	√	√	√		0139 0140
2007	Tigra-B	Body	Airbag	√	√	√	√	√	
2007	Tigra-B	Body	Instrument	√	√	√	√	√	0176 0177
2007	Tigra-B	Body	Electrohydraulic HardTop	√	√	√	√	√	
2007	Tigra-B	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2007	Tigra-B	Chassis	Electronic Power Steering	√	√	√	√		0141
2007	Tigra-B	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2007	Tigra-B	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2007	Tigra-B	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2007	Tigra-B	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2007	Vauxhall VXR8	Body	AHL(Automatic Headlamp Levelling)	√	√	√	√		
2007	Vauxhall VXR8	Body	BCM(Body Control Module)	√	√	√	√		
2007	Vauxhall VXR8	Body	HVAC(Heating Ventilation and Cooling)	√	√	√	√		
2007	Vauxhall VXR8	Body	Immobiliser	√	√	√	√		

2007	Vauxhall VXR8	Body	MSM(Memory Seat and Mirrors)	√	√	√	√		
2007	Vauxhall VXR8	Body	Park Assist	√	√	√	√		
2007	Vauxhall VXR8	Body	SDM(Sensing and Diagnostic Module)	√	√	√	√		
2007	Vauxhall VXR8	Body	IPC(Instrument Panel Cluster)	√	√	√	√		
2007	Vauxhall VXR8	Body	RFA(Multipurpose Receiver Module)	√	√	√	√		
2007	Vauxhall VXR8	Chassis	EBCM(Electronic Brake Control Module)	√	√	√	√	√	
2007	Vauxhall VXR8	Chassis	ESC(Electronic Suspension Control)	√	√	√	√		
2007	Vauxhall VXR8	Engine	V8 GEN IV	√	√	√	√	√	0015 0149 0171
2007	Vauxhall VXR8	Transmission	Automatic Transmission	√	√	√	√	√	
2007	Vectra- C/Signum	Body	SDM(Airbag,Sensing&Diagnostic Module)	√	√	√	√		0000 0001 0002
2007	Vectra- C/Signum	Body	Instrument	√	√	√	√	√	0169 0056 0057 0179 0001
2007	Vectra- C/Signum	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2007	Vectra- C/Signum	Body	BCM(Body Control Module)	√	√	√			0180 0181
2007	Vectra- C/Signum	Body	DDM(Driver Door Module)	√	√	√			
2007	Vectra- C/Signum	Body	PDM(Passenger Door Module)	√	√	√			
2007	Vectra- C/Signum	Body	REC(Rear Electrical Centre)	√	√	√	√		
2007	Vectra- C/Signum	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2007	Vectra- C/Signum	Body	SLM(Shift Lever Module)	√	√	√			
2007	Vectra- C/Signum	Body	SRM(Sun Roof Module)	√	√	√			
2007	Vectra- C/Signum	Body	AHL/AFL(Headlamp Levelling)	√	√	√			
2007	Vectra- C/Signum	Body	Electrical Horn	√	√	√	√	√	
2007	Vectra- C/Signum	Body	SAC(Automatic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2007	Vectra- C/Signum	Body	Interior Lighting	√	√	√	√	√	0182 0059
2007	Vectra- C/Signum	Body	Electronic Seat Memory/Seat Heating	√	√	√	√		
2007	Vectra- C/Signum	Body	Anti Theft Warning System	√	√	√	√	√	
2007	Vectra- C/Signum	Body	Central Door Lock	√	√	√	√		
2007	Vectra- C/Signum	Body	EHS(Electrical Heater System)	√	√	√	√	√	0032 0001 0004
2007	Vectra- C/Signum	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2007	Vectra- C/Signum	Chassis	ABS/TC/ESP	√	√	√	√	√	

2007	Vectra- C/Signum	Chassis	EHPS(Electronic Power Steering)	√	√	√	√		
2007	Vectra- C/Signum	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		0032
2007	Vectra- C/Signum	Chassis	CDC(Continuous Damping Control)	√	√	√			
2007	Vectra- C/Signum	Chassis	Electronic Cruise Control	√	√	√			
2007	Vectra- C/Signum	Engine	Engine Cooling	√	√	√	√		
2007	Vectra- C/Signum	Engine	Z16XEP	√	√	√	√	√	0010 0011 0066 0013 0149
2007	Vectra- C/Signum	Engine	Z18XE	√	√	√	√	√	0019 0010 0011 0066 0149 0012
2007	Vectra- C/Signum	Engine	Z18XER	√	√	√	√	√	0019 0009 0010 0011 0066 0149
2007	Vectra- C/Signum	Engine	Z19DT	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0069 0020 0012
2007	Vectra- C/Signum	Engine	Z19DTH	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0028 0025 0026 0020 0012 0027
2007	Vectra- C/Signum	Engine	Y20DTH	√	√	√	√	√	0010 0011 0066
2007	Vectra- C/Signum	Engine	Y22DTR	√	√	√	√	√	0010 0011 0066
2007	Vectra- C/Signum	Engine	Z22SE	√	√	√	√	√	0010 0011 0066
2007	Vectra- C/Signum	Engine	Z22YH	√	√	√	√	√	0019 0149
2007	Vectra- C/Signum	Engine	Z32SE	√	√	√	√	√	0019 0149
2007	Vectra- C/Signum	Engine	Engine(default)>	√	√	√			
2007	Vectra- C/Signum	Engine	Z16XE	√	√	√	√	√	0010 0011 0066 0149 0012
2007	Vectra- C/Signum	Engine	Z20NET	√	√	√	√	√	0010 0011 0066
2007	Vectra- C/Signum	Engine	Z28NEH	√	√	√	√	√	0009 0019 0040 0183 0184 0185 0011 0066 0149

2007	Vectra- C/Signum	Engine	Z28NEL	√	√	√	√	√	0009 0019 0040 0183 0184 0185 0011 0066 0149
2007	Vectra- C/Signum	Engine	Z28NET	√	√	√	√	√	0009 0019 0040 0183 0184 0185 0011 0066 0149
2007	Vectra- C/Signum	Engine	Z30DT	√	√	√	√	√	0019 0010 0066
2007	Vectra- C/Signum	Transmission	AF 23-5/33-5/40-6	√	√	√	√	√	0032 0033
2007	Vectra- C/Signum	Transmission	CVTronic	√	√	√	√	√	0186 0187 0188 0032 0003 0033
2007	Vectra- C/Signum	Transmission	MTA(Easytronic)	√	√	√	√	√	
2007	Vivaro	Body	Airbag		√	√	√		0004
2007	Vivaro	Body	Park Pilot		√	√	√		
2007	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2007	Vivaro	Body	Body Control Module		√	√	√	√	
2007	Vivaro	Chassis	ABS/ESP(Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	0174 0175
2007	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2007	Vivaro	Transmission	MTA(Tecshift)		√	√	√	√	
2007	Zafira-B	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2007	Zafira-B	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2007	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2007	Zafira-B	Body	REC(Rear Electrical Centre)	√	√	√	√		
2007	Zafira-B	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2007	Zafira-B	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2007	Zafira-B	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2007	Zafira-B	Body	Interior Lighting	√	√	√	√		
2007	Zafira-B	Body	Wipers/Washer	√	√	√	√		
2007	Zafira-B	Body	Central Door Lock	√	√	√	√		
2007	Zafira-B	Body	Instrument	√	√	√	√	√	0055 0056 0057
2007	Zafira-B	Body	Immobiliser	√	√	√	√		

2007	Zafira-B	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2007	Zafira-B	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2007	Zafira-B	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2007	Zafira-B	Body	SLM(Shift Lever Module)	√	√	√	√		
2007	Zafira-B	Body	PEPS(Open&Start)	√	√	√	√		
2007	Zafira-B	Body	Anti Theft Warning System	√	√	√	√	√	
2007	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2007	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2007	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2007	Zafira-B	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	0005
2007	Zafira-B	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2007	Zafira-B	Chassis	TPMS(Tyre Pressure Monitoring System)	√	√	√	√		
2007	Zafira-B	Chassis	CDC(Continuous Damping Control)	√	√	√	√		
2007	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003
2007	Zafira-B	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2007	Zafira-B	Engine	Z18XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2007	Zafira-B	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2007	Zafira-B	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0032 0010 0011 0066 0023 0024 0028 0025 0026 0025

2007	Zafira-B	Engine	Z16XE1	√	√	√	√	√	0006 0007 0008 0009 0173 0010 0011 0066 0012
2007	Zafira-B	Engine	Z16XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2007	Zafira-B	Engine	Z16YNG	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2007	Zafira-B	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2007	Zafira-B	Engine	Z20LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2007	Zafira-B	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2007	Zafira-B	Engine	Engine(default)	√	√	√			
2007	Zafira-B	Transmission	MTA(Easutronic)	√	√	√	√	√	0003 0061 0034
2007	Zafira-B	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2007	Zafira-B	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2006	Agila	Body	Immobiliser	√	√	√	√		0139 0140
2006	Agila	Body	Airbag	√	√	√	√		
2006	Agila	Body	Instrument	√	√	√	√		
2006	Agila	Chassis	ABS	√	√	√	√	√	0190
2006	Agila	Chassis	Electronic Power Steering	√	√	√	√		
2006	Agila	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065

2006	Agila	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2006	Agila	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065
2006	Agila	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2006	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2006	Astra-G	Body	Instrument	√	√	√	√		
2006	Astra-G	Body	Airbag	√	√	√	√		
2006	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2006	Astra-G	Body	Central Door Lock	√	√	√	√		
2006	Astra-G	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2006	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2006	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2006	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2006	Astra-G	Body	Softtop Controller	√	√	√	√	√	
2006	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2006	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2006	Astra-G	Chassis	Cruise Control	√	√	√	√		
2006	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2006	Astra-G	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2006	Astra-G	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2006	Astra-G	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2006	Astra-G	Engine	C16SEL	√	√	√	√	√	
2006	Astra-G	Engine	Z16SE	√	√	√	√	√	
2006	Astra-G	Engine	Z16XE	√			√	√	

2006	Astra-G	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2006	Astra-G	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2006	Astra-G	Engine	Y17DT	√	√	√	√	√	
2006	Astra-G	Engine	Z17DTL	√	√	√	√	√	
2006	Astra-G	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2006	Astra-G	Engine	Z18XEL	√	√	√			0011 0021
2006	Astra-G	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2006	Astra-G	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2006	Astra-G	Engine	Y22DTR	√	√	√	√	√	0011 0021
2006	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2006	Astra-G	Infotainment System	Trip Info Display TID	√	√	√			
2006	Astra-G	Infotainment System	Multi Info Dispaly MID	√	√	√			
2006	Astra-G	Infotainment System	Radio CAR 300	√	√	√			
2006	Astra-G	Infotainment System	Radio CAR 400	√	√	√	√		
2006	Astra-G	Infotainment System	Radio CDR 500	√	√	√	√		
2006	Astra-G	Infotainment System	Radio CCR 600	√	√	√	√		
2006	Astra-G	Infotainment System	Radio CCRT 700	√	√	√	√		
2006	Astra-G	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2006	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	

2006	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2006	Astra-H	Body	SDM(Airbag)	√	√	√	√		
2006	Astra-H	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2006	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2006	Astra-H	Body	REC(Rear Electrical Centre)	√	√	√	√		
2006	Astra-H	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2006	Astra-H	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2006	Astra-H	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2006	Astra-H	Body	Interior Lighting	√	√	√	√		
2006	Astra-H	Body	Wipers/Washer	√	√	√	√		
2006	Astra-H	Body	Central Door Lock	√	√	√	√		
2006	Astra-H	Body	Instrument	√	√	√	√	√	0055 0056 0057
2006	Astra-H	Body	Immobiliser	√	√	√	√		
2006	Astra-H	Body	Anti Theft Warning System	√	√	√	√	√	
2006	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√	√	0001 0004
2006	Astra-H	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0032 0001 0004
2006	Astra-H	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2006	Astra-H	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2006	Astra-H	Body	SLM(Shift Lever Module)	√	√	√	√		
2006	Astra-H	Body	PEPS(Open&Start)	√	√	√	√		
2006	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2006	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2006	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2006	Astra-H	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2006	Astra-H	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		
2006	Astra-H	Chassis	CDC (Continuous Damping Control)	√	√	√	√		
2006	Astra-H	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	
2006	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003

2006	Astra-H	Engine	Z13DTH	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0020 0029 0028 0025 0026
2006	Astra-H	Engine	Z14XEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2006	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2006	Astra-H	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2006	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012
2006	Astra-H	Engine	Z18XE	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0012
2006	Astra-H	Engine	Z18XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2006	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2006	Astra-H	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018

2006	Astra-H	Engine	Z12XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2006	Astra-H	Engine	Y13DTH	√	√	√	√	√	0019 0010 0011 0066 0020 0029 0028 0025 0026
2006	Astra-H	Engine	Z16XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2006	Astra-H	Engine	Z17DTL	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0029 0032 0018
2006	Astra-H	Engine	Z19DTJ	√	√	√		√	0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027
2006	Astra-H	Engine	Z20LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2006	Astra-H	Engine	Z20LEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2006	Astra-H	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2006	Astra-H	Engine	Engine(default)	√	√	√			
2006	Astra-H	Transmission	AF 17-4	√	√	√	√	√	0030 0031 0032 0003 0033
2006	Astra-H	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2006	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0003 0061 0034

2006	Astra-H	Transmission	MTA(Easytronic Magneti Marelli)	√	√	√	√	√	
2006	Combo	Body	Add On Heater	√	√	√	√	√	0122 0123
2006	Combo	Body	Airbag	√	√	√	√	√	
2006	Combo	Body	Electronic Climate Control	√	√	√	√		
2006	Combo	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2006	Combo	Body	HeadLamp Levelling Device		√	√	√	√	0141
2006	Combo	Body	Immobiliser	√	√	√	√		0164 0165
2006	Combo	Body	Instrument	√	√	√	√		
2006	Combo	Chassis	ABS8/ESP8 (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0005 0142 0143 0144 0004
2006	Combo	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2006	Combo	Chassis	Electronic Power Steering	√	√	√	√		0141
2006	Combo	Engine	Z 10 XEP	√	√	√	√	√	0011 0021 0065
2006	Combo	Engine	Z 12 XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2006	Combo	Engine	Z 12 XEP	√	√	√	√	√	0011 0021 0065
2006	Combo	Engine	Y 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2006	Combo	Engine	Z 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2006	Combo	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2006	Combo	Engine	Z 14 XEP	√	√	√	√	√	0006 0166 0009 0146 0019 0011 0021 0065 0033
2006	Combo	Engine	Z 16 SE	√	√	√	√	√	
2006	Combo	Engine	Z 16 YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2006	Combo	Engine	Y 17 DT	√	√	√	√	√	
2006	Combo	Engine	Y 17 DTL	√	√	√	√	√	
2006	Combo	Engine	Z 17 DTH		√	√	√		

2006	Combo	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2006	Combo	Infotainment System	Trip Info Display TID	√	√	√			
2006	Combo	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2006	Combo	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2006	Combo	Transmission	Easytronic(MTA)	√	√	√	√	√	0011 0148
2006	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2006	Corsa-C	Body	Immobiliser	√	√	√	√		0139 0140
2006	Corsa-C	Body	Airbag	√	√	√	√	√	
2006	Corsa-C	Body	Instrument	√	√	√	√	√	0176 0177
2006	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2006	Corsa-C	Body	Electronic Climate Control	√	√	√	√		
2006	Corsa-C	Body	HeadLamp Levelling Device		√	√	√	√	0141
2006	Corsa-C	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2006	Corsa-C	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2006	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2006	Corsa-C	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2006	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2006	Corsa-C	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065
2006	Corsa-C	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2006	Corsa-C	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2006	Corsa-C	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2006	Corsa-C	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021

2006	Corsa-C	Engine	Z16SE	√	√	√	√	√	
2006	Corsa-C	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2006	Corsa-C	Engine	Y17DT	√	√	√	√	√	
2006	Corsa-C	Engine	Y17DTL	√	√	√	√	√	
2006	Corsa-C	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2006	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2006	Corsa-C	Infotainment System	Trip Info Display TID	√	√	√			
2006	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2006	Corsa-C	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2006	Corsa-C	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2006	Meriva	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2006	Meriva	Body	Immobiliser	√	√	√	√		0139 0140
2006	Meriva	Body	Airbag	√	√	√	√	√	
2006	Meriva	Body	Instrument	√	√	√	√	√	0176 0177
2006	Meriva	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2006	Meriva	Body	Electronic Climate Control	√	√	√	√	√	
2006	Meriva	Body	Add On Heater	√	√	√	√	√	0122 0123
2006	Meriva	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2006	Meriva	Chassis	Electronic Power Steering	√	√	√	√		0141
2006	Meriva	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2006	Meriva	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2006	Meriva	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2006	Meriva	Engine	Z16SE	√	√	√	√	√	

2006	Meriva	Engine	Z16XE	√			√	√	
2006	Meriva	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2006	Meriva	Engine	Y17DT	√	√	√	√	√	
2006	Meriva	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2006	Meriva	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2006	Meriva	Engine	C16SEL	√	√	√	√	√	
2006	Meriva	Engine	Z16LET	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2006	Meriva	Infotainment System	Trip Info Display TID	√	√	√			
2006	Meriva	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2006	Movano	Body	Airbag	√	√	√	√		
2006	Movano	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2006	Movano	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0164 0165
2006	Speedster/VX22 0	Body	Immobiliser	√	√	√	√		0139 0140
2006	Speedster/VX22 0	Body	Airbag	√	√	√	√		
2006	Speedster/VX22 0	Chassis	ABS 430	√	√	√	√		
2006	Speedster/VX22 0	Engine	Z20LET	√	√	√	√		
2006	Speedster/VX22 0	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2006	Tigra-B	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2006	Tigra-B	Body	Immobiliser	√	√	√	√		0139 0140
2006	Tigra-B	Body	Airbag	√	√	√	√	√	
2006	Tigra-B	Body	Instrument	√	√	√	√	√	0176 0177
2006	Tigra-B	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2006	Tigra-B	Chassis	Electronic Power Steering	√	√	√	√		0141

2006	Tigra-B	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2006	Tigra-B	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2006	Tigra-B	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2006	Tigra-B	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2006	Vauxhall Monaro	Engine	V8 GEN IV	√	√	√	√	√	0015 0149 0171
2006	Vectra- C/Signum	Body	SDM(Airbag,Sensing&Diagnostic Module)	√	√	√	√		0000 0001 0002
2006	Vectra- C/Signum	Body	Instrument	√	√	√	√	√	0169 0056 0057 0179 0001
2006	Vectra- C/Signum	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2006	Vectra- C/Signum	Body	BCM(Body Control Module)	√	√	√			0180 0181
2006	Vectra- C/Signum	Body	DDM(Driver Door Module)	√	√	√			
2006	Vectra- C/Signum	Body	PDM(Passenger Door Module)	√	√	√			
2006	Vectra- C/Signum	Body	REC(Rear Electrical Centre)	√	√	√	√		
2006	Vectra- C/Signum	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2006	Vectra- C/Signum	Body	SLM(Shift Lever Module)	√	√	√			
2006	Vectra- C/Signum	Body	SRM(Sun Roof Module)	√	√	√			
2006	Vectra- C/Signum	Body	AHL/AFL(Headlamp Levelling)	√	√	√			
2006	Vectra- C/Signum	Body	Electrical Horn	√	√	√	√	√	
2006	Vectra- C/Signum	Body	SAC (Automatic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2006	Vectra- C/Signum	Body	Interior Lighting	√	√	√	√	√	0182 0059
2006	Vectra- C/Signum	Body	Electronic Seat Memory/Seat Heating	√	√	√	√		
2006	Vectra- C/Signum	Body	Anti Theft Warning System	√	√	√	√	√	
2006	Vectra- C/Signum	Body	Central Door Lock	√	√	√	√		
2006	Vectra- C/Signum	Body	EHS (Electrical Heater System)	√	√	√	√	√	0032 0001 0004
2006	Vectra- C/Signum	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2006	Vectra- C/Signum	Chassis	ABS/TC/ESP	√	√	√	√	√	

2006	Vectra- C/Signum	Chassis	EHPS(Electronic Power Steering)	√	√	√	√		
2006	Vectra- C/Signum	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		0032
2006	Vectra- C/Signum	Chassis	CDC(Continuous Damping Control)	√	√	√			
2006	Vectra- C/Signum	Chassis	Electronic Cruise Control	√	√	√			
2006	Vectra- C/Signum	Engine	Engine Cooling	√	√	√	√		
2006	Vectra- C/Signum	Engine	Z16XEP	√	√	√	√	√	0010 0011 0066 0013 0149
2006	Vectra- C/Signum	Engine	Z18XE	√	√	√	√	√	0019 0010 0011 0066 0149 0012
2006	Vectra- C/Signum	Engine	Z18XER	√	√	√	√	√	0019 0009 0010 0011 0066 0149
2006	Vectra- C/Signum	Engine	Z19DT	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0069 0020 0012
2006	Vectra- C/Signum	Engine	Z19DTH	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0028 0025 0026 0020 0012 0027
2006	Vectra- C/Signum	Engine	Y20DTH	√	√	√	√	√	0010 0011 0066
2006	Vectra- C/Signum	Engine	Y22DTR	√	√	√	√	√	0010 0011 0066
2006	Vectra- C/Signum	Engine	Z22SE	√	√	√	√	√	0010 0011 0066
2006	Vectra- C/Signum	Engine	Z22YH	√	√	√	√	√	0019 0149
2006	Vectra- C/Signum	Engine	Z32SE	√	√	√	√	√	0019 0149
2006	Vectra- C/Signum	Engine	Z16XE	√	√	√	√	√	0010 0011 0066 0149 0012
2006	Vectra- C/Signum	Engine	Z20NET	√	√	√	√	√	0010 0011 0066
2006	Vectra- C/Signum	Engine	Z28NEH	√	√	√	√	√	0009 0019 0040 0183 0184 0185 0011 0066 0149
2006	Vectra- C/Signum	Engine	Z28NEL	√	√	√	√	√	0009 0019 0040 0183 0184 0185 0011 0066 0149

2006	Vectra- C/Signum	Engine	Z28NET	√	√	√	√	√	0009 0019 0040 0183 0184 0185 0011 0066 0149
2006	Vectra- C/Signum	Engine	Z30DT	√	√	√	√	√	0019 0010 0066
2006	Vectra- C/Signum	Engine	Engine(default)	√	√	√			
2006	Vectra- C/Signum	Transmission	AF 23-5/33-5/40-6	√	√	√	√	√	0032 0033
2006	Vectra- C/Signum	Transmission	CVTronic	√	√	√	√	√	0186 0187 0188 0032 0003 0033
2006	Vectra- C/Signum	Transmission	MTA(Easytronic)	√	√	√	√	√	
2006	Vivaro	Body	Airbag		√	√	√		0004
2006	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2006	Vivaro	Body	Body Control Module		√	√	√	√	
2006	Vivaro	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	0174 0175
2006	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2006	Vivaro	Infotainment System	Trip Info Display TID	√	√	√			
2006	Vivaro	Infotainment System	Radio CAR 2003	√	√	√			
2006	Vivaro	Infotainment System	Radio CDR 2005	√	√	√	√		
2006	Vivaro	Infotainment System	Radio CCR 2006	√	√	√	√		
2006	Zafira-B	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2006	Zafira-B	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2006	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2006	Zafira-B	Body	REC(Rear Electrical Centre)	√	√	√	√		
2006	Zafira-B	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2006	Zafira-B	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2006	Zafira-B	Body	Exterior Lighting/Turn Indicator System	√	√	√	√		
2006	Zafira-B	Body	Interior Lighting	√	√	√	√		

2006	Zafira-B	Body	Wipers/Washer	√	√	√	√		
2006	Zafira-B	Body	Central Door Lock	√	√	√	√		
2006	Zafira-B	Body	Instrument	√	√	√	√	√	0055 0056 0057
2006	Zafira-B	Body	Immobiliser	√	√	√	√		
2006	Zafira-B	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2006	Zafira-B	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2006	Zafira-B	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2006	Zafira-B	Body	SLM(Shift Lever Module)	√	√	√	√		
2006	Zafira-B	Body	PEPS(Open&Start)	√	√	√	√		
2006	Zafira-B	Body	Anti Theft Warning System	√	√	√	√	√	
2006	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2006	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2006	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2006	Zafira-B	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	0005
2006	Zafira-B	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2006	Zafira-B	Chassis	TPMS(Tyre Pressure Monitoring System)	√	√	√	√		
2006	Zafira-B	Chassis	CDC(Continuous Damping Control)	√	√	√	√		
2006	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003
2006	Zafira-B	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2006	Zafira-B	Engine	Z18XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2006	Zafira-B	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027

2006	Zafira-B	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0032 0010 0011 0066 0023 0024 0028 0025 0026
2006	Zafira-B	Engine	Z16YNG	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2006	Zafira-B	Engine	Z16XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2006	Zafira-B	Engine	Z16XE1	√	√	√	√	√	0006 0007 0008 0009 0173 0010 0011 0066 0012
2006	Zafira-B	Engine	Z18XE	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2006	Zafira-B	Engine	Z19DTL	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2006	Zafira-B	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2006	Zafira-B	Engine	Z20LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2006	Zafira-B	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2006	Zafira-B	Engine	Engine(default)	√	√	√			
2006	Zafira-B	Transmission	MTA(Easutronic)	√	√	√	√	√	0003 0061 0034

2006	Zafira-B	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2006	Zafira-B	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2005	Agila	Body	Immobiliser	√	√	√	√		0139 0140
2005	Agila	Body	Airbag	√	√	√	√		
2005	Agila	Body	Instrument	√	√	√	√		
2005	Agila	Chassis	ABS	√	√	√	√	√	0189
2005	Agila	Chassis	Electronic Power Steering	√	√	√	√		
2005	Agila	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2005	Agila	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2005	Agila	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065
2005	Agila	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2005	Agila	Infotainment System	Trip Info Display TID	√	√	√			
2005	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2005	Astra-G	Body	Instrument	√	√	√	√		
2005	Astra-G	Body	Airbag	√	√	√	√		
2005	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2005	Astra-G	Body	Central Door Lock	√	√	√	√		
2005	Astra-G	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2005	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2005	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2005	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2005	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2005	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2005	Astra-G	Chassis	Cruise Control	√	√	√	√		
2005	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	

2005	Astra-G	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2005	Astra-G	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2005	Astra-G	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2005	Astra-G	Engine	C16SEL	√	√	√	√	√	
2005	Astra-G	Engine	Z16SE	√	√	√	√	√	
2005	Astra-G	Engine	Z16XE	√			√	√	
2005	Astra-G	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2005	Astra-G	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2005	Astra-G	Engine	Y17DT	√	√	√	√	√	
2005	Astra-G	Engine	Z17DTL	√	√	√	√	√	
2005	Astra-G	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2005	Astra-G	Engine	Z18XEL	√	√	√			0011 0021
2005	Astra-G	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2005	Astra-G	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2005	Astra-G	Engine	Y22DTR	√	√	√	√	√	0011 0021
2005	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2005	Astra-G	Infotainment System	Trip Info Display TID	√	√	√			
2005	Astra-G	Infotainment System	Multi Info Dispaly MID	√	√	√			
2005	Astra-G	Infotainment System	Radio CAR 300	√	√	√			

2005	Astra-G	Infotainment System	Radio CAR 400	√	√	√	√		
2005	Astra-G	Infotainment System	Radio CDR 500	√	√	√	√		
2005	Astra-G	Infotainment System	Radio CCR 600	√	√	√	√		
2005	Astra-G	Infotainment System	Radio CCRT 700	√	√	√	√		
2005	Astra-G	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2005	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2005	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2005	Astra-G(GMSA)	Body	Airbag	√	√	√	√		
2005	Astra-G(GMSA)	Body	Anti Theft Warning	√	√	√	√		
2005	Astra-G(GMSA)	Body	Central Door Lock	√	√	√	√		
2005	Astra-G(GMSA)	Body	Engine Cooling Module	√	√	√	√		
2005	Astra-G(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2005	Astra-G(GMSA)	Body	Instrument	√	√	√	√		
2005	Astra-G(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2005	Astra-G(GMSA)	Chassis	Electronic Power Steering	√	√	√	√		0141
2005	Astra-G(GMSA)	Engine	C 16 SEL	√	√	√	√	√	
2005	Astra-G(GMSA)	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2005	Astra-G(GMSA)	Engine	Z 22 SE	√	√	√	√	√	0146 0009 0145 0011 0021 0065
2005	Astra-G(GMSA)	Infotainment System	Trip Info Display TID	√	√	√			
2005	Astra-H	Body	SDM(Airbag)	√	√	√	√		
2005	Astra-H	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2005	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2005	Astra-H	Body	REC(Rear Electrical Centre)	√	√	√	√		

2005	Astra-H	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2005	Astra-H	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2005	Astra-H	Body	Anti Theft Warning System	√	√	√	√	√	
2005	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√	√	0001 0004
2005	Astra-H	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0032 0001 0004
2005	Astra-H	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2005	Astra-H	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2005	Astra-H	Body	SLM(Shift Lever Module)	√	√	√	√		
2005	Astra-H	Body	PEPS(Open&Start)	√	√	√	√		
2005	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2005	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2005	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2005	Astra-H	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2005	Astra-H	Chassis	TPMS(Tyre Pressure Monitoring System)	√	√	√	√		
2005	Astra-H	Chassis	CDC(Continuous Damping Control)	√	√	√	√		
2005	Astra-H	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	
2005	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003
2005	Astra-H	Engine	Z13DTH	√	√	√	√	√	0006 0007 0008 0019 0010 0011 0066 0020 0029 0028 0025 0026
2005	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2005	Astra-H	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012

2005	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012
2005	Astra-H	Engine	Z18XE	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0012
2005	Astra-H	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2005	Astra-H	Engine	Z16XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2005	Astra-H	Engine	Z17DTL	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0029 0032 0018
2005	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2005	Astra-H	Engine	Z19DTJ	√	√	√		√	0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027
2005	Astra-H	Engine	Z20LEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2005	Astra-H	Engine	Z20LEH	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013

2005	Astra-H	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2005	Astra-H	Engine	Engine(default)	√	√	√			
2005	Astra-H	Transmission	AF 17-4	√	√	√	√	√	0030 0031 0032 0003 0033
2005	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0003 0061 0034
2005	Combo	Body	Add On Heater	√	√	√	√	√	0122 0123
2005	Combo	Body	Airbag	√	√	√	√	√	
2005	Combo	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2005	Combo	Body	Immobiliser	√	√	√	√		0164 0165
2005	Combo	Body	Instrument	√	√	√	√		
2005	Combo	Body	Electronic Climate Control	√	√	√	√		
2005	Combo	Body	HeadLamp Levelling Device		√	√	√	√	0141
2005	Combo	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2005	Combo	Chassis	Electronic Power Steering	√	√	√	√		0141
2005	Combo	Chassis	ABS8/ESP8 (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0005 0142 0143 0144 0004
2005	Combo	Engine	Z 10 XEP	√	√	√	√	√	0011 0021 0065
2005	Combo	Engine	Z 12 XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2005	Combo	Engine	Z 12 XEP	√	√	√	√	√	0011 0021 0065
2005	Combo	Engine	Y 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2005	Combo	Engine	Z 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2005	Combo	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2005	Combo	Engine	Z 14 XEP	√	√	√	√	√	0006 0166 0009 0146 0019 0011 0021 0065 0033

2005	Combo	Engine	Z 16 SE	√	√	√	√	√	
2005	Combo	Engine	Y 17 DT	√	√	√	√	√	
2005	Combo	Engine	Y 17 DTL	√	√	√	√	√	
2005	Combo	Engine	Z 17 DTH	√	√	√	√	√	0006 0146 0019 0022 0011 0021
2005	Combo	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2005	Combo	Infotainment System	Trip Info Display TID	√	√	√			
2005	Combo	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2005	Combo	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2005	Combo	Transmission	Easytronic(MTA)	√	√	√	√	√	0011 0148
2005	Corsa-B(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2005	Corsa-B(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0191 0192 0056 0193
2005	Corsa-B(GMSA)	Engine	16 SE						
2005	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2005	Corsa-C	Body	Immobiliser	√	√	√	√		0139 0140
2005	Corsa-C	Body	Airbag	√	√	√	√	√	
2005	Corsa-C	Body	Instrument	√	√	√	√	√	0176 0177
2005	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2005	Corsa-C	Body	Electronic Climate Control	√	√	√	√		
2005	Corsa-C	Body	HeadLamp Levelling Device		√	√	√	√	0141
2005	Corsa-C	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2005	Corsa-C	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2005	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2005	Corsa-C	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2005	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2005	Corsa-C	Engine	Z12XEP	√	√	√	√	√	0011 0021 0065

2005	Corsa-C	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2005	Corsa-C	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2005	Corsa-C	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2005	Corsa-C	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2005	Corsa-C	Engine	Z16SE	√	√	√	√	√	
2005	Corsa-C	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2005	Corsa-C	Engine	Y17DT	√	√	√	√	√	
2005	Corsa-C	Engine	Y17DTL	√	√	√	√	√	
2005	Corsa-C	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2005	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2005	Corsa-C	Infotainment System	Trip Info Display TID	√	√	√			
2005	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2005	Corsa-C	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2005	Corsa-C	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2005	Corsa-C(GMSA)	Body	Airbag	√	√	√	√	√	
2005	Corsa-C(GMSA)	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2005	Corsa-C(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2005	Corsa-C(GMSA)	Body	Instrument	√	√	√	√		
2005	Corsa-C(GMSA)	Body	Power Window Lifter Front	√	√	√	√		
2005	Corsa-C(GMSA)	Body	Power Window Lifter Rear	√	√	√	√		
2005	Corsa-C(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2005	Corsa-C(GMSA)	Chassis	Electronic Power Steering	√	√	√	√		0141

2005	Corsa-C(GMSA)	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2005	Corsa-C(GMSA)	Engine	C 14 SE	√	√	√	√	√	0145 0019
2005	Corsa-C(GMSA)	Engine	C 16 SE	√	√	√	√	√	0145 0019
2005	Corsa-C(GMSA)	Engine	Y 17 DT	√	√	√	√	√	
2005	Corsa-C(GMSA)	Engine	Y 17 DTL	√	√	√	√	√	
2005	Corsa-C(GMSA)	Engine	C 18 XE	√	√	√	√	√	0145 0019
2005	Corsa-C(GMSA)	Infotainment System	Trip Info Display TID	√	√	√			
2005	Corsa-C(GMSA)	Infotainment System	Radio CDR 2005	√	√	√	√		
2005	Corsa-C(GMSA)	Infotainment System	Radio CCRT 2008	√	√	√			
2005	Meriva	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2005	Meriva	Body	Immobiliser	√	√	√	√		0139 0140
2005	Meriva	Body	Airbag	√	√	√	√	√	
2005	Meriva	Body	Instrument	√	√	√	√	√	0176 0177
2005	Meriva	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2005	Meriva	Body	Electronic Climate Control	√	√	√	√	√	
2005	Meriva	Body	Add On Heater	√	√	√	√	√	0122 0123
2005	Meriva	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2005	Meriva	Chassis	Electronic Power Steering	√	√	√	√		0141
2005	Meriva	Engine	Y13DT	√	√	√	√	√	0040 0019 0021 0011 0020
2005	Meriva	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2005	Meriva	Engine	Z16SE	√	√	√	√	√	
2005	Meriva	Engine	Z16XE	√			√	√	
2005	Meriva	Engine	Y17DT	√	√	√	√	√	

2005	Meriva	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2005	Meriva	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2005	Meriva	Infotainment System	Trip Info Display TID	√	√	√			
2005	Meriva	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2005	Movano	Body	Airbag	√	√	√	√		
2005	Movano	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2005	Movano	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0164 0165
2005	Speedster/VX22 0	Body	Immobiliser	√	√	√	√		0139 0140
2005	Speedster/VX22 0	Body	Airbag	√	√	√	√		
2005	Speedster/VX22 0	Chassis	ABS 430	√	√	√	√		
2005	Speedster/VX22 0	Engine	Z20LET	√	√	√	√		
2005	Speedster/VX22 0	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2005	Tigra-B	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2005	Tigra-B	Body	Immobiliser	√	√	√	√		0139 0140
2005	Tigra-B	Body	Airbag	√	√	√	√	√	
2005	Tigra-B	Body	Instrument	√	√	√	√	√	0176 0177
2005	Tigra-B	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2005	Tigra-B	Chassis	Electronic Power Steering	√	√	√	√		0141
2005	Tigra-B	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2005	Tigra-B	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2005	Tigra-B	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2005	Tigra-B	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148

2005	Vauxhall Monaro	Engine	V8 GEN IV	√	√	√	√	√	0015 0149 0171
2005	Vectra- C/Signum	Body	SDM(Airbag,Sensing&Diagnostic Module)	√	√	√	√		0000 0001 0002
2005	Vectra- C/Signum	Body	Instrument	√	√	√	√	√	0169 0056 0057 0179 0001
2005	Vectra- C/Signum	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2005	Vectra- C/Signum	Body	BCM(Body Control Module)	√	√	√			0180 0181
2005	Vectra- C/Signum	Body	DDM(Driver Door Module)	√	√	√			
2005	Vectra- C/Signum	Body	PDM(Passenger Door Module)	√	√	√			
2005	Vectra- C/Signum	Body	REC(Rear Electrical Centre)	√	√	√	√		
2005	Vectra- C/Signum	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2005	Vectra- C/Signum	Body	SLM(Shift Lever Module)	√	√	√			
2005	Vectra- C/Signum	Body	SRM(Sun Roof Module)	√	√	√			
2005	Vectra- C/Signum	Body	AHL/AFL(Headlamp Levelling)	√	√	√			
2005	Vectra- C/Signum	Body	Electrical Horn	√	√	√	√	√	
2005	Vectra- C/Signum	Body	Electronic Seat Memory/Seat Heating	√	√	√	√		
2005	Vectra- C/Signum	Body	Anti Theft Warning System	√	√	√	√	√	
2005	Vectra- C/Signum	Body	Central Door Lock	√	√	√	√		
2005	Vectra- C/Signum	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2005	Vectra- C/Signum	Chassis	ABS/TC/ESP	√	√	√	√	√	
2005	Vectra- C/Signum	Chassis	EHPS(Electronic Power Steering)	√	√	√	√		
2005	Vectra- C/Signum	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		0032
2005	Vectra- C/Signum	Chassis	CDC(Continuous Damping Control)	√	√	√			
2005	Vectra- C/Signum	Chassis	Electronic Cruise Control	√	√	√			
2005	Vectra- C/Signum	Engine	Engine Cooling	√	√	√	√		
2005	Vectra- C/Signum	Engine	Z18XE	√	√	√	√	√	0019 0010 0011 0066 0149 0012
2005	Vectra- C/Signum	Engine	Z19DT	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0069 0020 0012

2005	Vectra- C/Signum	Engine	Z19DTH	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0028 0025 0026 0020 0012 0027
2005	Vectra- C/Signum	Engine	Y20DTH	√	√	√	√	√	0010 0011 0066
2005	Vectra- C/Signum	Engine	Y22DTR	√	√	√	√	√	0010 0011 0066
2005	Vectra- C/Signum	Engine	Y30DT	√	√	√	√	√	
2005	Vectra- C/Signum	Engine	Z22SE	√	√	√	√	√	0010 0011 0066
2005	Vectra- C/Signum	Engine	Z22YH	√	√	√	√	√	0019 0149
2005	Vectra- C/Signum	Engine	Z32SE	√	√	√	√	√	0019 0149
2005	Vectra- C/Signum	Engine	Z16XE	√	√	√	√	√	0010 0011 0066 0149 0012
2005	Vectra- C/Signum	Engine	Z20NET	√	√	√	√	√	0010 0011 0066
2005	Vectra- C/Signum	Engine	Engine(default)	√	√	√			
2005	Vectra- C/Signum	Transmission	AF 23-5/33-5/40-6	√	√	√	√	√	0032 0033
2005	Vectra- C/Signum	Transmission	CVTronic	√	√	√	√	√	0186 0187 0188 0032 0003 0033
2005	Vivaro	Body	Airbag		√	√	√		0004
2005	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2005	Vivaro	Body	Body Control Module		√	√	√	√	
2005	Vivaro	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	0174 0175
2005	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2005	Vivaro	Infotainment System	Trip Info Display TID	√	√	√			
2005	Vivaro	Infotainment System	Radio CAR 2003	√	√	√			
2005	Vivaro	Infotainment System	Radio CDR 2005	√	√	√	√		
2005	Vivaro	Infotainment System	Radio CCR 2006	√	√	√	√		
2005	Zafira	Body	Immobiliser	√	√	√	√		0139 0140

2005	Zafira	Body	Instrument	√	√	√	√		
2005	Zafira	Body	Airbag	√	√	√	√	√	
2005	Zafira	Body	Anti Theft Warning	√	√	√	√		
2005	Zafira	Body	Central Door Lock	√	√	√	√		
2005	Zafira	Body	Electronic Climate Control	√	√	√	√		
2005	Zafira	Body	Engine Cooling Module	√	√	√	√		
2005	Zafira	Body	Headlamp Adjustment(Left)	√	√	√	√		
2005	Zafira	Body	Headlamp Adjustment(Right)	√	√	√	√		
2005	Zafira	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2005	Zafira	Chassis	ESP	√	√	√	√	√	0005
2005	Zafira	Chassis	Electronic Power Steering	√	√	√	√		0141
2005	Zafira	Engine	Z16XE	√			√	√	
2005	Zafira	Engine	Z16YNG	√	√	√	√	√	
2005	Zafira	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2005	Zafira	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2005	Zafira	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2005	Zafira	Engine	Y22DTR	√	√	√	√	√	0011 0021
2005	Zafira	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2005	Zafira	Engine	Z18XEL	√	√	√	√	√	0145 0009 0040
2005	Zafira	Infotainment System	Radio CAR 300	√	√	√	√		
2005	Zafira	Infotainment System	Trip Info Display TID	√	√	√			
2005	Zafira	Infotainment System	Multi Info Dispaly MID	√	√	√			
2005	Zafira	Infotainment System	Radio CAR 400	√	√	√	√		
2005	Zafira	Infotainment System	Radio CDR 500	√	√	√	√		

2005	Zafira	Infotainment System	Radio CCR 600	√	√	√	√		
2005	Zafira	Infotainment System	Radio CCRT 700	√	√	√	√		
2005	Zafira	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2005	Zafira	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2005	Zafira-B	Body	SDM(Airbag)	√	√	√	√		0000 0001 0002
2005	Zafira-B	Body	CIM(Steering Column Module)	√	√	√	√	√	0066
2005	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		0033
2005	Zafira-B	Body	REC(Rear Electrical Centre)	√	√	√	√		0012
2005	Zafira-B	Body	UEC(Underhood Electrical Centre)	√	√	√	√		0018
2005	Zafira-B	Body	AHL/AFL(Headlamp Levelling)	√	√	√	√		
2005	Zafira-B	Body	ECC/SAC(Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0001 0004 0160
2005	Zafira-B	Body	EHS(Electrical Heater System)	√	√	√	√		0032 0001 0004
2005	Zafira-B	Body	PAS(Park Pilot)	√	√	√	√	√	0001
2005	Zafira-B	Body	SLM(Shift Lever Module)	√	√	√	√		
2005	Zafira-B	Body	PEPS(Open&Start)	√	√	√	√		
2005	Zafira-B	Body	Anti Theft Warning System	√	√	√	√	√	
2005	Zafira-B	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2005	Zafira-B	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2005	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0010
2005	Zafira-B	Chassis	ABS/TC/ESP(Vehicle Dynamic System)	√	√	√	√	√	0005
2005	Zafira-B	Chassis	TPMS ECU(Tyre Pressure Monitoring)	√	√	√	√		0001
2005	Zafira-B	Chassis	TPMS(Tyre Pressure Monitoring System)	√	√	√	√		
2005	Zafira-B	Chassis	CDC(Continuous Damping Control)	√	√	√	√		
2005	Zafira-B	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003

2005	Zafira-B	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2005	Zafira-B	Engine	Z18XER	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0033
2005	Zafira-B	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2005	Zafira-B	Engine	Z19DTH	√	√	√	√	√	0006 0007 0008 0032 0010 0011 0066 0023 0024 0028 0025 0026 0027
2005	Zafira-B	Engine	Z16XE1	√	√	√	√	√	0006 0007 0008 0009 0173 0010 0011 0066 0012
2005	Zafira-B	Engine	Z16XEP	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2005	Zafira-B	Engine	Z18XE	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0012
2005	Zafira-B	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2005	Zafira-B	Engine	Z22YH	√	√	√	√	√	0006 0007 0008 0071 0019 0010 0011 0066 0012
2005	Zafira-B	Engine	Engine(default)	√	√	√			
2005	Zafira-B	Transmission	MTA(Easutronic)	√	√	√	√	√	0003 0061 0034

2005	Zafira-B	Transmission	AF 40-6	√	√	√	√	√	0072 0073 0074 0075 0076 0077 0032 0003 0033
2005	Zafira-B	Transmission	AF 22-4	√	√	√	√	√	0030 0032 0003
2004	Agila	Body	Immobiliser	√	√	√	√		0139 0140
2004	Agila	Body	Airbag	√	√	√	√		
2004	Agila	Body	Instrument	√	√	√	√		
2004	Agila	Chassis	ABS	√	√	√	√	√	0189
2004	Agila	Chassis	Electronic Power Steering	√	√	√	√		
2004	Agila	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2004	Agila	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2004	Agila	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2004	Agila	Infotainment System	Trip Info Display TID	√	√	√			
2004	Agila	Infotainment System	Radio CAR 2003	√	√	√			
2004	Agila	Infotainment System	Radio CDR 2005	√	√	√	√		
2004	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2004	Astra-G	Body	Instrument	√	√	√	√		
2004	Astra-G	Body	Airbag	√	√	√	√		
2004	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2004	Astra-G	Body	Central Door Lock	√	√	√	√		
2004	Astra-G	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2004	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2004	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2004	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2004	Astra-G	Body	Softtop Controller	√	√	√	√	√	
2004	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	

2004	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2004	Astra-G	Chassis	Cruise Control	√	√	√	√		
2004	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2004	Astra-G	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2004	Astra-G	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2004	Astra-G	Engine	C16SEL	√	√	√	√	√	
2004	Astra-G	Engine	Z16SE	√	√	√	√	√	
2004	Astra-G	Engine	Z16XE	√			√	√	
2004	Astra-G	Engine	Z16XEP	√	√	√	√	√	0006 0146 0009 0019 0011 0021
2004	Astra-G	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2004	Astra-G	Engine	Y17DT	√	√	√	√	√	
2004	Astra-G	Engine	Z17DTL	√	√	√	√	√	
2004	Astra-G	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2004	Astra-G	Engine	Z18XEL	√	√	√			0011 0021
2004	Astra-G	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2004	Astra-G	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2004	Astra-G	Engine	Y22DTR	√	√	√	√	√	0011 0021
2004	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2004	Astra-G	Infotainment System	Trip Info Display TID	√	√	√			
2004	Astra-G	Infotainment System	Multi Info Display MID	√	√	√			
2004	Astra-G	Infotainment System	Radio CAR 300	√	√	√			

2004	Astra-G	Infotainment System	Radio CAR 400	√	√	√	√		
2004	Astra-G	Infotainment System	Radio CDR 500	√	√	√	√		
2004	Astra-G	Infotainment System	Radio CCR 600	√	√	√	√		
2004	Astra-G	Infotainment System	Radio CCRT 700	√	√	√	√		
2004	Astra-G	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2004	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2004	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2004	Astra-G(GMSA)	Body	Airbag	√	√	√	√		
2004	Astra-G(GMSA)	Body	Anti Theft Warning	√	√	√	√		
2004	Astra-G(GMSA)	Body	Engine Cooling Module	√	√	√	√		
2004	Astra-G(GMSA)	Body	Central Door Lock	√	√	√	√		
2004	Astra-G(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2004	Astra-G(GMSA)	Body	Instrument	√	√	√	√		
2004	Astra-G(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2004	Astra-G(GMSA)	Chassis	Electronic Power Steering	√	√	√	√	√	
2004	Astra-G(GMSA)	Engine	C 16 SEL	√	√	√	√	√	
2004	Astra-G(GMSA)	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2004	Astra-G(GMSA)	Engine	Z 22 SE	√	√	√	√	√	0146 0009 0145 0011 0021 0065
2004	Astra-G(GMSA)	Infotainment System	Trip Info Display TID	√	√	√			
2004	Astra-H	Body	SDM(Airbag)	√	√	√	√		
2004	Astra-H	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2004	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√		
2004	Astra-H	Body	REC(Rear Electrical Centre)	√	√	√	√		

2004	Astra-H	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2004	Astra-H	Body	AHL/AFL (Headlamp Levelling)	√	√	√	√		
2004	Astra-H	Body	Anti Theft Warning System	√	√	√	√	√	
2004	Astra-H	Body	Electrohydraulic HardTop	√	√	√	√	√	0001 0004
2004	Astra-H	Body	ECC/SAC (Electronic Climate Control)	√	√	√	√	√	0150 0158 0159 0032 0001 0004
2004	Astra-H	Body	EHS (Electrical Heater System)	√	√	√	√		0032 0001 0004
2004	Astra-H	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2004	Astra-H	Body	SLM (Shift Lever Module)	√	√	√	√		
2004	Astra-H	Body	PEPS (Open&Start)	√	√	√	√		
2004	Astra-H	Body	IPC ECU(Instrument Control Unit)	√	√	√	√	√	0006 0055 0056 0057 0058 0059 0060 0001 0004
2004	Astra-H	Chassis	ABS/TC/ESP ECU(Electronic Control Unit)	√	√	√	√	√	
2004	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		
2004	Astra-H	Chassis	CDC (Continuous Damping Control)	√	√	√	√		
2004	Astra-H	Chassis	ABS/TC/ESP (Vehicle Dynamic System)	√	√	√	√	√	
2004	Astra-H	Chassis	EHPS(Electrohydraulic Power Steering)	√	√	√	√		0003
2004	Astra-H	Engine	Z14XEP	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2004	Astra-H	Engine	Z16XEP	√	√	√	√		0006 0007 0008 0009 0019 0010 0011 0066 0012
2004	Astra-H	Engine	Z17DTH	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0020 0024 0012
2004	Astra-H	Engine	Z18XE	√	√	√	√		0019 0006 0007 0008 0009 0010 0011 0066 0012

2004	Astra-H	Engine	Z16XER	√	√	√	√	√	0006 0007 0008 0009 0019 0010 0011 0066 0033
2004	Astra-H	Engine	Z17DTL	√	√	√	√	√	0010 0011 0066 0020 0024 0012 0029 0032 0018
2004	Astra-H	Engine	Z19DT	√	√	√	√	√	0006 0007 0008 0010 0011 0066 0023 0024 0069 0012 0032 0020 0029 0026 0027 0025 0028 0018
2004	Astra-H	Engine	Z20LEL	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2004	Astra-H	Engine	Z20LER	√	√	√	√	√	0006 0007 0008 0009 0010 0011 0066 0012 0013
2004	Astra-H	Engine	Engine(default)	√	√	√			
2004	Astra-H	Transmission	AF 17-4	√	√	√	√	√	0030 0031 0032 0003 0033
2004	Astra-H	Transmission	MTA(Easytronic)	√	√	√	√	√	0003 0061 0034
2004	Combo	Body	Add On Heater	√	√	√	√	√	0122 0123
2004	Combo	Body	Airbag	√	√	√	√	√	
2004	Combo	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2004	Combo	Body	Immobiliser	√	√	√	√		0164 0165
2004	Combo	Body	Instrument	√	√	√	√		
2004	Combo	Body	Electronic Climate Control	√	√	√	√		
2004	Combo	Body	HeadLamp Levelling Device		√	√	√	√	0141
2004	Combo	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2004	Combo	Chassis	Electronic Power Steering	√	√	√	√		0141
2004	Combo	Chassis	ABS8/ESP8 (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0005 0142 0143 0144 0004

2004	Combo	Engine	Z 10 XEP	√	√	√	√	√	0011 0021 0065
2004	Combo	Engine	Z 12 XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2004	Combo	Engine	Z 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2004	Combo	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2004	Combo	Engine	Z 14 XEP	√	√	√	√	√	0006 0166 0009 0146 0019 0011 0021 0065 0033
2004	Combo	Engine	Z 16 SE	√	√	√	√	√	
2004	Combo	Engine	Y 17 DT	√	√	√	√	√	
2004	Combo	Engine	Y 17 DTL	√	√	√	√	√	
2004	Combo	Engine	Z 17 DTH	√	√	√	√	√	0006 0146 0019 0022 0011 0021
2004	Combo	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2004	Combo	Infotainment System	Trip Info Display TID	√	√	√			
2004	Combo	Infotainment System	Radio CAR 2003	√	√	√			
2004	Combo	Infotainment System	Radio CDR 2005	√	√	√	√		
2004	Combo	Infotainment System	Radio CCR 2006	√	√	√	√		
2004	Combo	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2004	Combo	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2004	Combo	Transmission	Easytronic(MTA)	√	√	√	√	√	0011 0148
2004	Corsa-B(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2004	Corsa-B(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192

2004	Corsa-B(GMSA)	Engine	16 SE	√	√	√			
2004	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2004	Corsa-C	Body	Immobiliser	√	√	√	√		0139 0140
2004	Corsa-C	Body	Airbag	√	√	√	√	√	
2004	Corsa-C	Body	Instrument	√	√	√	√	√	0176 0177
2004	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2004	Corsa-C	Body	Electronic Climate Control	√	√	√	√		
2004	Corsa-C	Body	HeadLamp Levelling Device		√	√	√	√	0141
2004	Corsa-C	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2004	Corsa-C	Chassis	ABS8/ESP8		√	√	√	√	0005 0142 0143 0144 0004
2004	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2004	Corsa-C	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2004	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2004	Corsa-C	Engine	Z13DT	√	√	√	√	√	0019 0040 0021 0011 0020
2004	Corsa-C	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2004	Corsa-C	Engine	Z14XEP	√	√	√	√	√	0033 0065 0006 0166 0009 0146 0019 0011 0021
2004	Corsa-C	Engine	Z16SE	√	√	√	√	√	
2004	Corsa-C	Engine	Y17DT	√	√	√	√	√	
2004	Corsa-C	Engine	Y17DTL	√	√	√	√	√	
2004	Corsa-C	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2004	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2004	Corsa-C	Infotainment System	Trip Info Display TID	√	√	√			

2004	Corsa-C	Infotainment System	Radio CAR 2003	√	√	√			
2004	Corsa-C	Infotainment System	Radio CDR 2005	√	√	√	√		
2004	Corsa-C	Infotainment System	Radio CCR 2006	√	√	√	√		
2004	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2004	Corsa-C	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2004	Corsa-C	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2004	Corsa-C(GMSA)	Body	Airbag	√	√	√	√	√	
2004	Corsa-C(GMSA)	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2004	Corsa-C(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2004	Corsa-C(GMSA)	Body	Instrument	√	√	√	√		
2004	Corsa-C(GMSA)	Body	Power Window Lifter Front	√	√	√	√		
2004	Corsa-C(GMSA)	Body	Power Window Lifter Rear	√	√	√	√		
2004	Corsa-C(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2004	Corsa-C(GMSA)	Chassis	Electronic Power Steering	√	√	√	√		0141
2004	Corsa-C(GMSA)	Engine	C 14 SE	√	√	√	√	√	0145 0019
2004	Corsa-C(GMSA)	Engine	C 16 SE	√	√	√	√	√	0145 0019
2004	Corsa-C(GMSA)	Engine	Y 17 DT	√	√	√	√	√	
2004	Corsa-C(GMSA)	Engine	Y 17 DTL	√	√	√	√	√	
2004	Corsa-C(GMSA)	Engine	C 18 XE	√	√	√	√	√	0145 0019
2004	Corsa-C(GMSA)	Infotainment System	Trip Info Display TID	√	√	√			
2004	Corsa-C(GMSA)	Infotainment System	Radio CDR 2005	√	√	√	√		
2004	Corsa-C(GMSA)	Infotainment System	Radio CCRT 2008	√	√	√			
2004	Meriva	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2004	Meriva	Body	Immobiliser	√	√	√	√		0139 0140
2004	Meriva	Body	Airbag	√	√	√	√	√	
2004	Meriva	Body	Instrument	√	√	√	√	√	0176 0177

2004	Meriva	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2004	Meriva	Body	Electronic Climate Control	√	√	√	√	√	
2004	Meriva	Body	Add On Heater	√	√	√	√	√	0122 0123
2004	Meriva	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2004	Meriva	Chassis	ESP	√	√	√	√	√	0005
2004	Meriva	Chassis	Electronic Power Steering	√	√	√	√		0141
2004	Meriva	Engine	Z16SE	√	√	√	√	√	
2004	Meriva	Engine	Z16XE	√			√	√	
2004	Meriva	Engine	Y17DT	√	√	√	√	√	
2004	Meriva	Engine	Z17DTH	√	√	√	√	√	0006 0146 0019 0020 0147 0022
2004	Meriva	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2004	Meriva	Infotainment System	Trip Info Display TID	√	√	√			
2004	Meriva	Infotainment System	Radio CAR 2003	√	√	√			
2004	Meriva	Infotainment System	Radio CDR 2005	√	√	√	√		
2004	Meriva	Infotainment System	Radio CCR 2006	√	√	√	√		
2004	Meriva	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2004	Movano	Body	Airbag	√	√	√	√		
2004	Movano	Body	Immobiliser	√	√	√	√		0164 0165
2004	Movano	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)		√	√	√	√	0164 0165
2004	Speedster/VX22 0	Body	Immobiliser	√	√	√	√		0139 0140
2004	Speedster/VX22 0	Body	Airbag	√	√	√	√		
2004	Speedster/VX22 0	Chassis	ABS 430	√	√	√	√		
2004	Speedster/VX22 0	Engine	Z20LET	√	√	√	√		
2004	Speedster/VX22 0	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021

2004	Vectra- C/Signum	Body	SDM(Airbag,Sensing&Diagnostic Module)	√	√	√	√		0000 0001 0002
2004	Vectra- C/Signum	Body	Instrument	√	√	√	√	√	0169 0056 0057 0179 0001
2004	Vectra- C/Signum	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2004	Vectra- C/Signum	Body	BCM(Body Control Module)	√	√	√			0180 0181
2004	Vectra- C/Signum	Body	DDM(Driver Door Module)	√	√	√			
2004	Vectra- C/Signum	Body	PDM(Passenger Door Module)	√	√	√			
2004	Vectra- C/Signum	Body	REC(Rear Electrical Centre)	√	√	√	√		
2004	Vectra- C/Signum	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2004	Vectra- C/Signum	Body	SLM(Shift Lever Module)	√	√	√			
2004	Vectra- C/Signum	Body	SRM(Sun Roof Module)	√	√	√			
2004	Vectra- C/Signum	Body	AHL/AFL(Headlamp Levelling)	√	√	√			
2004	Vectra- C/Signum	Chassis	ABS/TC/ESP	√	√	√	√	√	
2004	Vectra- C/Signum	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		0032
2004	Vectra- C/Signum	Chassis	EHPS(Electronic Power Steering)	√	√	√	√		
2004	Vectra- C/Signum	Chassis	Electronic Cruise Control	√	√	√			
2004	Vectra- C/Signum	Engine	Engine Cooling	√	√	√	√		
2004	Vectra- C/Signum	Engine	Z18XE	√	√	√	√	√	0019 0010 0011 0066 0149 0012
2004	Vectra- C/Signum	Engine	Z19DT	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0069 0020 0012
2004	Vectra- C/Signum	Engine	Z19DTH	√	√	√	√	√	0149 0010 0011 0066 0023 0024 0028 0025 0026 0020 0012 0027
2004	Vectra- C/Signum	Engine	Y20DTH	√	√	√	√	√	0010 0011 0066
2004	Vectra- C/Signum	Engine	Y22DTR	√	√	√	√	√	0010 0011 0066
2004	Vectra- C/Signum	Engine	Y30DT	√	√	√	√	√	
2004	Vectra- C/Signum	Engine	Z22SE	√	√	√	√	√	0010 0011 0066
2004	Vectra- C/Signum	Engine	Z22YH	√	√	√	√	√	0019 0149

2004	Vectra- C/Signum	Engine	Z32SE	√	√	√	√	√	0019 0149
2004	Vectra- C/Signum	Engine	Z16XE	√	√	√	√	√	0010 0011 0066 0149 0012
2004	Vectra- C/Signum	Engine	Z20NET	√	√	√	√	√	0010 0011 0066
2004	Vectra- C/Signum	Engine	Engine(default)	√	√	√			
2004	Vectra- C/Signum	Transmission	AF 23-5/33-5/40-6	√	√	√	√	√	0032 0033
2004	Vectra- C/Signum	Transmission	CVTronic	√	√	√	√	√	0186 0187 0188 0032 0003 0033
2004	Vectra- C/Signum	Transmission	AF 23-5/33-5	√	√	√	√	√	0032 0033
2004	Vivaro	Body	Airbag		√	√	√		0004
2004	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2004	Vivaro	Body	Body Control Module		√	√	√	√	
2004	Vivaro	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	0174 0175
2004	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2004	Vivaro	Infotainment System	Trip Info Display TID	√	√	√			
2004	Vivaro	Infotainment System	Radio CAR 2003	√	√	√			
2004	Vivaro	Infotainment System	Radio CDR 2005	√	√	√	√		
2004	Vivaro	Infotainment System	Radio CCR 2006	√	√	√	√		
2004	Zafira	Body	Immobiliser	√	√	√	√		0139 0140
2004	Zafira	Body	Instrument	√	√	√	√		
2004	Zafira	Body	Airbag	√	√	√	√	√	
2004	Zafira	Body	Anti Theft Warning	√	√	√	√		
2004	Zafira	Body	Central Door Lock	√	√	√	√		
2004	Zafira	Body	Electronic Climate Control	√	√	√	√		
2004	Zafira	Body	Engine Cooling Module	√	√	√	√		
2004	Zafira	Body	Headlamp Adjustment(Left)	√	√	√	√		
2004	Zafira	Body	Headlamp Adjustment(Right)	√	√	√	√		

2004	Zafira	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2004	Zafira	Chassis	ESP	√	√	√	√	√	0005
2004	Zafira	Chassis	Electronic Power Steering	√	√	√	√		0141
2004	Zafira	Engine	Z16XE	√			√	√	
2004	Zafira	Engine	Z16YNG	√	√	√	√	√	
2004	Zafira	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2004	Zafira	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2004	Zafira	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2004	Zafira	Engine	Y22DTR	√	√	√	√	√	0011 0021
2004	Zafira	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2004	Zafira	Engine	Z18XEL	√	√	√	√	√	0145 0009 0040
2004	Zafira	Infotainment System	Radio CAR 300	√	√	√	√		
2004	Zafira	Infotainment System	Trip Info Display TID	√	√	√			
2004	Zafira	Infotainment System	Multi Info Dispaly MID	√	√	√			
2004	Zafira	Infotainment System	Radio CAR 400	√	√	√	√		
2004	Zafira	Infotainment System	Radio CDR 500	√	√	√	√		
2004	Zafira	Infotainment System	Radio CCR 600	√	√	√	√		
2004	Zafira	Infotainment System	Radio CCRT 700	√	√	√	√		
2004	Zafira	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2004	Zafira	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2003	Agila	Body	Immobiliser	√	√	√	√		0139 0140

2003	Agila	Body	Airbag	√	√	√	√		
2003	Agila	Body	Instrument	√	√	√	√		
2003	Agila	Chassis	ABS	√	√	√	√	√	0189
2003	Agila	Chassis	Electronic Power Steering	√	√	√	√		
2003	Agila	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2003	Agila	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2003	Agila	Infotainment System	Trip Info Display TID	√	√	√			
2003	Agila	Infotainment System	Radio CAR 2003	√	√	√			
2003	Agila	Infotainment System	Radio CDR 2005	√	√	√	√		
2003	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2003	Astra-G	Body	Instrument	√	√	√	√		
2003	Astra-G	Body	Airbag	√	√	√	√		
2003	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2003	Astra-G	Body	Central Door Lock	√	√	√	√		
2003	Astra-G	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2003	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2003	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2003	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2003	Astra-G	Body	Softtop Controller	√	√	√	√	√	
2003	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2003	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2003	Astra-G	Chassis	Cruise Control	√	√	√	√		
2003	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2003	Astra-G	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033

2003	Astra-G	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2003	Astra-G	Engine	C16SEL	√	√	√	√	√	
2003	Astra-G	Engine	Z16SE	√	√	√	√	√	
2003	Astra-G	Engine	Z16XE	√			√	√	
2003	Astra-G	Engine	Z16XEP	√	√	√	√	√	
2003	Astra-G	Engine	Z16YNG	√	√	√	√	√	0006 0146 0145 0009 0019 0011
2003	Astra-G	Engine	Y17DT	√	√	√	√	√	
2003	Astra-G	Engine	Z17DTL	√	√	√	√	√	
2003	Astra-G	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2003	Astra-G	Engine	Z18XEL	√	√	√			0011 0021
2003	Astra-G	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2003	Astra-G	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2003	Astra-G	Engine	Y22DTR	√	√	√	√	√	0011 0021
2003	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2003	Astra-G	Infotainment System	Trip Info Display TID	√	√	√			
2003	Astra-G	Infotainment System	Multi Info Dispaly MID	√	√	√			
2003	Astra-G	Infotainment System	Radio CAR 300	√	√	√			
2003	Astra-G	Infotainment System	Radio CAR 400	√	√	√	√		
2003	Astra-G	Infotainment System	Radio CDR 500	√	√	√	√		
2003	Astra-G	Infotainment System	Radio CCR 600	√	√	√	√		

2003	Astra-G	Infotainment System	Radio CCRT 700	√	√	√	√		
2003	Astra-G	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2003	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2003	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2003	Astra-G(GMSA)	Body	Airbag	√	√	√	√		
2003	Astra-G(GMSA)	Body	Anti Theft Warning	√	√	√	√		
2003	Astra-G(GMSA)	Body	Central Door Lock	√	√	√	√		
2003	Astra-G(GMSA)	Body	Engine Cooling Module	√	√	√	√		
2003	Astra-G(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2003	Astra-G(GMSA)	Body	Instrument	√	√	√	√		
2003	Astra-G(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2003	Astra-G(GMSA)	Chassis	Electronic Power Steering	√	√	√	√	√	
2003	Astra-G(GMSA)	Engine	C 16 SEL	√	√	√	√	√	
2003	Astra-G(GMSA)	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2003	Astra-G(GMSA)	Engine	20 SEL	√	√	√	√	√	0019
2003	Astra-G(GMSA)	Engine	Z 20 LET	√	√	√	√	√	0145 0009 0040
2003	Astra-G(GMSA)	Engine	Z 22 SE	√	√	√	√	√	0146 0009 0145 0011 0021 0065
2003	Astra-G(GMSA)	Infotainment System	Trip Info Display TID	√	√	√			
2003	Combo	Body	Add On Heater	√	√	√	√	√	0122 0123
2003	Combo	Body	Airbag	√	√	√	√	√	
2003	Combo	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2003	Combo	Body	Electronic Climate Control	√	√	√	√		
2003	Combo	Body	Immobiliser	√	√	√	√		0164 0165
2003	Combo	Body	Instrument	√	√	√	√		
2003	Combo	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2003	Combo	Chassis	Electronic Power Steering	√	√	√	√		0141
2003	Combo	Engine	Z 10 XE	√	√	√	√	√	0146 0194 0009

2003	Combo	Engine	Z 12 XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2003	Combo	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2003	Combo	Engine	Z 16 SE	√	√	√	√	√	
2003	Combo	Engine	Y 17 DT	√	√	√	√	√	
2003	Combo	Engine	Y 17 DTL	√	√	√	√	√	
2003	Combo	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2003	Combo	Infotainment System	Radio CCR 2006	√	√	√	√		
2003	Combo	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2003	Combo	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2003	Combo	Transmission	Easytronic(MTA)	√	√	√	√	√	0011 0148
2003	Combo	Transmission	Trip Info Display TID	√	√	√			
2003	Combo	Transmission	Radio CAR 2003	√	√	√			
2003	Combo	Transmission	Radio CDR 2005	√	√	√	√		
2003	Corsa-B	Body	Immobiliser	√	√	√	√		
2003	Corsa-B	Body	Airbag S	√	√	√	√		
2003	Corsa-B	Body	Airbag SAB6	√	√	√	√		
2003	Corsa-B	Body	Anti Theft Warning	√	√	√	√	√	
2003	Corsa-B	Body	Instrument	√	√	√	√	√	0176 0177
2003	Corsa-B	Chassis	ABS-5.3	√	√	√	√		
2003	Corsa-B	Chassis	Electronic Power Steering	√	√	√	√		
2003	Corsa-B	Engine	Z14SZ	√	√	√	√	√	
2003	Corsa-B	Engine	C14SE	√	√	√	√		
2003	Corsa-B	Engine	X14NE	√	√	√	√		
2003	Corsa-B	Engine	X16NE	√	√	√	√		
2003	Corsa-B	Infotainment System	Multi Info Dispaly MID	√	√	√			

2003	Corsa-B	Infotainment System	Radio CAR 300	√	√	√			
2003	Corsa-B	Infotainment System	Radio CAR 400	√	√	√	√		
2003	Corsa-B	Infotainment System	Radio CDR 500	√	√	√	√		
2003	Corsa-B	Infotainment System	Radio CCR 600	√	√	√	√		
2003	Corsa-B	Infotainment System	Radio CCRT 700	√	√	√	√		
2003	Corsa-B	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2003	Corsa-B(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2003	Corsa-B(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
2003	Corsa-B(GMSA)	Engine	16 SE	√	√	√			
2003	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2003	Corsa-C	Body	Immobiliser	√	√	√	√		0139 0140
2003	Corsa-C	Body	Airbag	√	√	√	√	√	
2003	Corsa-C	Body	Instrument	√	√	√	√	√	0176 0177
2003	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2003	Corsa-C	Body	Electronic Climate Control	√	√	√	√		
2003	Corsa-C	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2003	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2003	Corsa-C	Engine	Z10XE	√	√	√	√	√	0146 0193 0009
2003	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2003	Corsa-C	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2003	Corsa-C	Engine	Z16SE	√	√	√	√	√	
2003	Corsa-C	Engine	Y17DT	√	√	√	√	√	

2003	Corsa-C	Engine	Y17DTL	√	√	√	√	√	
2003	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2003	Corsa-C	Infotainment System	Trip Info Display TID	√	√	√			
2003	Corsa-C	Infotainment System	Radio CAR 2003	√	√	√			
2003	Corsa-C	Infotainment System	Radio CDR 2005	√	√	√	√		
2003	Corsa-C	Infotainment System	Radio CCR 2006	√	√	√	√		
2003	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2003	Corsa-C	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2003	Corsa-C	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2003	Corsa-C(GMSA)	Body	Airbag	√	√	√	√	√	
2003	Corsa-C(GMSA)	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2003	Corsa-C(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2003	Corsa-C(GMSA)	Body	Instrument	√	√	√	√		
2003	Corsa-C(GMSA)	Body	Power Window Lifter Front	√	√	√	√		
2003	Corsa-C(GMSA)	Body	Power Window Lifter Rear	√	√	√	√		
2003	Corsa-C(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2003	Corsa-C(GMSA)	Chassis	Electronic Power Steering	√	√	√	√		0141
2003	Corsa-C(GMSA)	Engine	C 14 SE	√	√	√	√	√	0145 0019
2003	Corsa-C(GMSA)	Engine	C 16 SE	√	√	√	√	√	0145 0019
2003	Corsa-C(GMSA)	Engine	Y 17 DT	√	√	√	√	√	
2003	Corsa-C(GMSA)	Engine	Y 17 DTL	√	√	√	√	√	
2003	Corsa-C(GMSA)	Engine	C 18 XE	√	√	√	√	√	0145 0019
2003	Corsa-C(GMSA)	Infotainment System	Trip Info Display TID	√	√	√			
2003	Corsa-C(GMSA)	Infotainment System	Radio CDR 2005	√	√	√	√		

2003	Corsa-C(GMSA)	Infotainment System	Radio CCRT 2008	√	√	√			
2003	Frontera-B	Body	Anti Theft Warning	√	√	√			
2003	Frontera-B	Engine	Y22DTH	√	√	√	√	√	0006
2003	Frontera-B	Infotainment System	Trip Info Display TID	√	√	√			
2003	Frontera-B	Infotainment System	Multi Info Dispaly MID	√	√	√			
2003	Frontera-B	Infotainment System	Radio CAR 300	√	√	√			
2003	Frontera-B	Infotainment System	Radio CAR 400	√	√	√	√		
2003	Frontera-B	Infotainment System	Radio CDR 500	√	√	√	√		
2003	Frontera-B	Infotainment System	Radio CCR 600	√	√	√	√		
2003	Frontera-B	Infotainment System	Radio CCRT 700	√	√	√	√		
2003	Frontera-B	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2003	Frontera-B	Transmission	AR 25/35	√	√	√	√	√	
2003	Frontera-B	Transmission	Airbag	√	√	√	√		
2003	Frontera-B	Transmission	Central Door Lock	√	√	√	√	√	0164 0165
2003	Frontera-B	Transmission	Immobiliser	√	√	√	√		0164 0165
2003	Meriva	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2003	Meriva	Body	Immobiliser	√	√	√	√		0139 0140
2003	Meriva	Body	Airbag	√	√	√	√	√	
2003	Meriva	Body	Instrument	√	√	√	√	√	0176 0177
2003	Meriva	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2003	Meriva	Body	Electronic Climate Control	√	√	√	√	√	
2003	Meriva	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2003	Meriva	Chassis	ESP	√	√	√	√	√	0005

2003	Meriva	Chassis	Electronic Power Steering	√	√	√	√		0141
2003	Meriva	Engine	Z16SE	√	√	√	√	√	
2003	Meriva	Engine	Z16XE	√			√	√	
2003	Meriva	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2003	Meriva	Infotainment System	Trip Info Display TID	√	√	√			
2003	Meriva	Infotainment System	Radio CAR 2003	√	√	√			
2003	Meriva	Infotainment System	Radio CDR 2005	√	√	√	√		
2003	Meriva	Infotainment System	Radio CCR 2006	√	√	√	√		
2003	Meriva	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2003	Movano	Body	Airbag	√	√	√	√		
2003	Movano	Body	Immobiliser	√	√	√	√		0164 0165
2003	Omega-B	Body	Immobiliser	√	√	√	√		0139 0140
2003	Omega-B	Body	Airbag	√	√	√	√	√	
2003	Omega-B	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2003	Omega-B	Body	Add On Heater	√	√	√	√	√	0122 0123
2003	Omega-B	Body	Anti Theft Warning	√	√	√	√	√	
2003	Omega-B	Body	Central Door Lock	√	√	√	√	√	0164 0165
2003	Omega-B	Body	Electronic Climate Control	√	√	√	√		
2003	Omega-B	Body	Instrument	√	√	√	√		
2003	Omega-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2003	Omega-B	Chassis	ESP	√	√	√	√		
2003	Omega-B	Engine	Y22DTH	√	√	√	√	√	0006
2003	Omega-B	Engine	Z22XE	√	√	√	√	√	0146 0145 0009 0040 0019
2003	Omega-B	Engine	Y25DT	√	√	√	√		
2003	Omega-B	Engine	Y26SE	√	√	√	√	√	0145 0009
2003	Omega-B	Engine	X30XE	√	√	√	√		

2003	Omega-B	Engine	Y32SE	√	√	√	√	√	0145 0009
2003	Omega-B	Infotainment System	Trip Info Display TID	√	√	√			
2003	Omega-B	Infotainment System	Multi Info Display MID	√	√	√			
2003	Omega-B	Infotainment System	Radio CAR 2003	√	√	√			
2003	Omega-B	Infotainment System	Radio CDR 2005	√	√	√	√		
2003	Omega-B	Infotainment System	Radio CCR 2006	√	√	√	√		
2003	Omega-B	Transmission	AR 25/35	√	√	√	√	√	
2003	Omega-B	Transmission	5L40-E	√	√	√	√		
2003	Speedster/VX22 0	Body	Immobiliser	√	√	√	√		0139 0140
2003	Speedster/VX22 0	Body	Airbag	√	√	√	√		
2003	Speedster/VX22 0	Body	Anti Theft Warning	√	√	√	√	√	
2003	Speedster/VX22 0	Chassis	ABS 430	√	√	√	√		
2003	Speedster/VX22 0	Engine	Z20LET	√	√	√	√		
2003	Speedster/VX22 0	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2003	Vectra- C/Signum	Body	SDM(Airbag,Sensing&Diagnostic Module)	√	√	√	√		0000 0001 0002
2003	Vectra- C/Signum	Body	Instrument	√	√	√	√	√	0169 0056 0057 0179 0001
2003	Vectra- C/Signum	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2003	Vectra- C/Signum	Body	BCM(Body Control Module)	√	√	√			0180 0181
2003	Vectra- C/Signum	Body	DDM(Driver Door Module)	√	√	√			
2003	Vectra- C/Signum	Body	PDM(Passenger Door Module)	√	√	√			
2003	Vectra- C/Signum	Body	REC(Rear Electrical Centre)	√	√	√	√		
2003	Vectra- C/Signum	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2003	Vectra- C/Signum	Body	SLM(Shift Lever Module)	√	√	√			
2003	Vectra- C/Signum	Body	SRM(Sun Roof Module)	√	√	√			

2003	Vectra- C/Signum	Body	AHL/AFL(Headlamp Levelling)	√	√	√			
2003	Vectra- C/Signum	Body	Electrical Horn	√	√	√	√	√	
2003	Vectra- C/Signum	Body	Electronic Seat Memory/Seat Heating	√	√	√	√		
2003	Vectra- C/Signum	Body	Anti Theft Warning System	√	√	√	√	√	
2003	Vectra- C/Signum	Body	Central Door Lock	√	√	√	√		
2003	Vectra- C/Signum	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2003	Vectra- C/Signum	Chassis	ABS/TC/ESP	√	√	√	√	√	
2003	Vectra- C/Signum	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		0032
2003	Vectra- C/Signum	Chassis	EHPS(Electronic Power Steering)	√	√	√	√		
2003	Vectra- C/Signum	Chassis	Electronic Cruise Control	√	√	√			
2003	Vectra- C/Signum	Engine	Engine Cooling	√	√	√	√		
2003	Vectra- C/Signum	Engine	Z18XE	√	√	√	√	√	0019 0010 0011 0066 0149 0012
2003	Vectra- C/Signum	Engine	Y20DTH	√	√	√	√	√	0010 0011 0066
2003	Vectra- C/Signum	Engine	Y22DTR	√	√	√	√	√	0010 0011 0066
2003	Vectra- C/Signum	Engine	Y30DT	√	√	√	√	√	
2003	Vectra- C/Signum	Engine	Z22SE	√	√	√	√	√	0010 0011 0066
2003	Vectra- C/Signum	Engine	Z22YH	√	√	√	√	√	0019 0149
2003	Vectra- C/Signum	Engine	Z32SE	√	√	√	√	√	0019 0149
2003	Vectra- C/Signum	Engine	Z16XE	√	√	√	√	√	0010 0011 0066 0149 0012
2003	Vectra- C/Signum	Engine	Z20NET	√	√	√	√	√	0010 0011 0066
2003	Vectra- C/Signum	Engine	Engine(default)	√	√	√			
2003	Vectra- C/Signum	Transmission	AF 23-5/33-5/40-6	√	√	√	√	√	0032 0033
2003	Vectra- C/Signum	Transmission	AF 23-5/33-5	√	√	√	√	√	0032 0033
2003	Vivaro	Body	Airbag		√	√	√		0004
2003	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2003	Vivaro	Body	Body Control Module		√	√	√	√	
2003	Vivaro	Chassis	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	√	√	√	√	√	0174 0175
2003	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		

2003	Vivaro	Infotainment System	Trip Info Display TID	√	√	√			
2003	Vivaro	Infotainment System	Radio CDR 2005	√	√	√	√		
2003	Vivaro	Infotainment System	Radio CCR 2006	√	√	√	√		
2003	Zafira	Body	Immobiliser	√	√	√	√		0139 0140
2003	Zafira	Body	Instrument	√	√	√	√		
2003	Zafira	Body	Airbag	√	√	√	√	√	
2003	Zafira	Body	Anti Theft Warning	√	√	√	√		
2003	Zafira	Body	Central Door Lock	√	√	√	√		
2003	Zafira	Body	Electronic Climate Control	√	√	√	√		
2003	Zafira	Body	Engine Cooling Module	√	√	√	√		
2003	Zafira	Body	Headlamp Adjustment(Left)	√	√	√	√		
2003	Zafira	Body	Headlamp Adjustment(Right)	√	√	√	√		
2003	Zafira	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2003	Zafira	Chassis	ESP	√	√	√	√	√	0005
2003	Zafira	Chassis	Electronic Power Steering	√	√	√	√		0141
2003	Zafira	Engine	Z16XE	√			√	√	
2003	Zafira	Engine	Z16YNG	√	√	√	√	√	
2003	Zafira	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2003	Zafira	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2003	Zafira	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2003	Zafira	Engine	Y22DTR	√	√	√	√	√	0011 0021
2003	Zafira	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2003	Zafira	Infotainment System	Radio CAR 300	√	√	√	√		
2003	Zafira	Infotainment System	Trip Info Display TID	√	√	√			

2003	Zafira	Infotainment System	Multi Info Display MID	√	√	√			
2003	Zafira	Infotainment System	Radio CAR 400	√	√	√	√		
2003	Zafira	Infotainment System	Radio CDR 500	√	√	√	√		
2003	Zafira	Infotainment System	Radio CCR 600	√	√	√	√		
2003	Zafira	Infotainment System	Radio CCRT 700	√	√	√	√		
2003	Zafira	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2003	Zafira	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2002	Agila	Body	Immobiliser	√	√	√	√		0139 0140
2002	Agila	Body	Airbag	√	√	√	√		
2002	Agila	Body	Instrument	√	√	√	√		
2002	Agila	Chassis	ABS	√	√	√	√	√	0189
2002	Agila	Chassis	Electronic Power Steering	√	√	√	√		
2002	Agila	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2002	Agila	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2002	Agila	Infotainment System	Trip Info Display TID	√	√	√			
2002	Agila	Infotainment System	Radio CAR 2003	√	√	√			
2002	Agila	Infotainment System	Radio CDR 2005	√	√	√	√		
2002	Astra-F	Body	Immobiliser	√	√	√	√		0139 0140
2002	Astra-F	Body	Airbag S	√	√	√	√		
2002	Astra-F	Body	Instrument	√	√	√	√	√	
2002	Astra-F	Body	Anti Theft Warning	√	√	√	√	√	

2002	Astra-F	Engine	X16SZR	√	√	√	√	√	
2002	Astra-F	Engine	X16XEL	√	√	√	√	√	0166 0195 0196 0197 0198 0019
2002	Astra-F	Infotainment System	Trip Info Display TID	√	√	√			
2002	Astra-F	Infotainment System	Radio CAR 300	√	√	√			
2002	Astra-F	Infotainment System	Radio CAR 400	√	√	√	√		
2002	Astra-F	Infotainment System	Radio CDR 500	√	√	√	√		
2002	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2002	Astra-G	Body	Instrument	√	√	√	√		
2002	Astra-G	Body	Airbag	√	√	√	√		
2002	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2002	Astra-G	Body	Central Door Lock	√	√	√	√		
2002	Astra-G	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2002	Astra-G	Body	Electronic Climate Control	√	√	√	√		
2002	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2002	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2002	Astra-G	Body	Softtop Controller	√	√	√	√	√	
2002	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2002	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2002	Astra-G	Chassis	Cruise Control	√	√	√	√		
2002	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2002	Astra-G	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2002	Astra-G	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2002	Astra-G	Engine	C16SEL	√	√	√	√	√	
2002	Astra-G	Engine	Z16SE	√	√	√	√	√	

2002	Astra-G	Engine	Z16XE	√			√	√	
2002	Astra-G	Engine	Y17DT	√	√	√	√	√	
2002	Astra-G	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2002	Astra-G	Engine	Z18XEL	√	√	√			0011 0021
2002	Astra-G	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2002	Astra-G	Engine	Y20DTL	√	√	√	√		0166
2002	Astra-G	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2002	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2002	Astra-G	Engine	Y22DTR	√	√	√	√	√	0011 0021
2002	Astra-G	Infotainment System	Trip Info Display TID	√	√	√			
2002	Astra-G	Infotainment System	Multi Info Dispaly MID	√	√	√			
2002	Astra-G	Infotainment System	Radio CAR 300	√	√	√			
2002	Astra-G	Infotainment System	Radio CAR 400	√	√	√	√		
2002	Astra-G	Infotainment System	Radio CDR 500	√	√	√	√		
2002	Astra-G	Infotainment System	Radio CCR 600	√	√	√	√		
2002	Astra-G	Infotainment System	Radio CCRT 700	√	√	√	√		
2002	Astra-G	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2002	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2002	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2002	Astra-G(GMSA)	Body	Instrument	√	√	√	√		
2002	Astra-G(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	

2002	Astra-G(GMSA)	Chassis	Electronic Power Steering	√	√	√	√	√	
2002	Astra-G(GMSA)	Chassis	Airbag	√	√	√	√		
2002	Astra-G(GMSA)	Chassis	Anti Theft Warning	√	√	√	√		
2002	Astra-G(GMSA)	Chassis	Engine Cooling Module	√	√	√	√		
2002	Astra-G(GMSA)	Chassis	Central Door Lock	√	√	√	√		
2002	Astra-G(GMSA)	Chassis	Immobiliser	√	√	√	√		0164 0165
2002	Astra-G(GMSA)	Chassis	Trip Info Display TID	√	√	√			
2002	Astra-G(GMSA)	Engine	C 16 SEL	√	√	√	√	√	
2002	Astra-G(GMSA)	Engine	Z 16 XE	√			√	√	
2002	Astra-G(GMSA)	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2002	Astra-G(GMSA)	Engine	X 18 XE1	√	√	√	√	√	0199
2002	Astra-G(GMSA)	Engine	20 SEL	√	√	√	√	√	0019
2002	Astra-G(GMSA)	Engine	Z 20 LET	√	√	√	√	√	0145 0009 0040
2002	Campo	Body	Airbag	√	√	√	√		
2002	Campo	Body	Immobiliser	√	√	√	√		0164 0165
2002	Combo	Body	Airbag	√	√	√	√		
2002	Combo	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2002	Combo	Body	Immobiliser	√	√	√	√		0164 0165
2002	Combo	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2002	Combo	Engine	Z 10 XE	√	√	√	√	√	0146 0193 0009
2002	Combo	Engine	Z 12 XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2002	Combo	Engine	Z 13 DT	√	√	√	√	√	0040 0019 0021 0011 0020
2002	Combo	Engine	Z 14 XE	√			√	√	0146 0145 0009 0019 0021 0011
2002	Combo	Engine	Z 16 SE	√	√	√	√	√	
2002	Combo	Engine	Y 17 DT	√	√	√	√	√	
2002	Combo	Engine	Y 17 DTL	√	√	√	√	√	

2002	Combo	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2002	Combo	Infotainment System	Trip Info Display TID	√	√	√			
2002	Combo	Infotainment System	Radio CDR 2005	√	√	√	√		
2002	Combo	Infotainment System	Radio CCR 2006	√	√	√	√		
2002	Corsa-B	Body	Immobiliser	√	√	√	√		
2002	Corsa-B	Body	Airbag S	√	√	√	√		
2002	Corsa-B	Body	Airbag SAB6	√	√	√	√		
2002	Corsa-B	Body	Anti Theft Warning	√	√	√	√	√	
2002	Corsa-B	Body	Instrument	√	√	√	√		
2002	Corsa-B	Chassis	ABS-5.3	√	√	√	√		
2002	Corsa-B	Chassis	Electronic Power Steering	√	√	√	√		
2002	Corsa-B	Engine	Z14SZ	√	√	√	√	√	
2002	Corsa-B	Engine	X14SZ	√	√	√	√	√	0200 0201 0194 0195 0196 0197
2002	Corsa-B	Engine	X14NE	√	√	√	√		
2002	Corsa-B	Engine	X16NE	√	√	√	√		
2002	Corsa-B	Engine	C14SE	√	√	√	√		
2002	Corsa-B	Infotainment System	Radio CAR 300	√	√	√			
2002	Corsa-B	Infotainment System	Radio CAR 400	√	√	√	√		
2002	Corsa-B	Infotainment System	Radio CDR 500	√	√	√	√		
2002	Corsa-B	Infotainment System	Radio CCR 600	√	√	√	√		
2002	Corsa-B	Infotainment System	Radio CCRT 700	√	√	√	√		

2002	Corsa-B	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2002	Corsa-B(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2002	Corsa-B(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
2002	Corsa-B(GMSA)	Engine	16 SE	√	√	√			
2002	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2002	Corsa-C	Body	Immobiliser	√	√	√	√		0139 0140
2002	Corsa-C	Body	Airbag	√	√	√	√	√	
2002	Corsa-C	Body	Instrument	√	√	√	√	√	0176 0177
2002	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2002	Corsa-C	Body	Electronic Climate Control	√	√	√	√		
2002	Corsa-C	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2002	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2002	Corsa-C	Engine	Z10XE	√	√	√	√	√	0146 0193 0009
2002	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2002	Corsa-C	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2002	Corsa-C	Engine	Z16SE	√	√	√	√	√	
2002	Corsa-C	Engine	Y17DT	√	√	√	√	√	
2002	Corsa-C	Engine	Y17DTL	√	√	√	√	√	
2002	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2002	Corsa-C	Engine	Z16XE	√			√	√	
2002	Corsa-C	Infotainment System	Trip Info Display TID	√	√	√			
2002	Corsa-C	Infotainment System	Radio CAR 2003	√	√	√			
2002	Corsa-C	Infotainment System	Radio CDR 2005	√	√	√	√		

2002	Corsa-C	Infotainment System	Radio CCR 2006	√	√	√	√		
2002	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2002	Corsa-C	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2002	Corsa-C(GMSA)	Body	Airbag	√	√	√	√	√	
2002	Corsa-C(GMSA)	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2002	Corsa-C(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2002	Corsa-C(GMSA)	Body	Instrument	√	√	√	√		
2002	Corsa-C(GMSA)	Body	Power Window Lifter Front	√	√	√	√		
2002	Corsa-C(GMSA)	Body	Power Window Lifter Rear	√	√	√	√		
2002	Corsa-C(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2002	Corsa-C(GMSA)	Chassis	Electronic Power Steering	√	√	√	√		0141
2002	Corsa-C(GMSA)	Engine	C 14 SE	√	√	√	√	√	0145 0019
2002	Corsa-C(GMSA)	Engine	C 16 SE	√	√	√	√	√	0145 0019
2002	Corsa-C(GMSA)	Engine	Y 17 DT	√	√	√	√	√	
2002	Corsa-C(GMSA)	Engine	C 18 XE	√	√	√	√	√	0145 0019
2002	Corsa-C(GMSA)	Infotainment System	Trip Info Display TID	√	√	√			
2002	Corsa-C(GMSA)	Infotainment System	Radio CDR 2005	√	√	√	√		
2002	Corsa-C(GMSA)	Infotainment System	Radio CCRT 2008	√	√	√			
2002	Frontera-B	Body	Airbag	√	√	√	√		
2002	Frontera-B	Body	Anti Theft Warning	√	√	√			
2002	Frontera-B	Body	Central Door Lock	√	√	√	√	√	0164 0165
2002	Frontera-B	Body	Immobiliser	√	√	√	√		0164 0165
2002	Frontera-B	Engine	Y22DTH	√	√	√	√	√	0006
2002	Frontera-B	Infotainment System	Trip Info Display TID	√	√	√			
2002	Frontera-B	Infotainment System	Multi Info Dispaly MID	√	√	√			

2002	Frontera-B	Infotainment System	Radio CAR 300	√	√	√			
2002	Frontera-B	Infotainment System	Radio CAR 400	√	√	√	√		
2002	Frontera-B	Infotainment System	Radio CDR 500	√	√	√	√		
2002	Frontera-B	Infotainment System	Radio CCR 600	√	√	√	√		
2002	Frontera-B	Infotainment System	Radio CCRT 700	√	√	√	√		
2002	Frontera-B	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2002	Frontera-B	Transmission	AR 25/35	√	√	√	√	√	
2002	Movano	Body	Immobiliser	√	√	√	√		0164 0165
2002	Movano	Body	Airbag	√	√	√	√		
2002	Omega-B	Body	Immobiliser	√	√	√	√		0139 0140
2002	Omega-B	Body	Airbag	√	√	√	√	√	
2002	Omega-B	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2002	Omega-B	Body	Add On Heater	√	√	√	√	√	0122 0123
2002	Omega-B	Body	Anti Theft Warning	√	√	√	√	√	
2002	Omega-B	Body	Central Door Lock	√	√	√	√	√	0164 0165
2002	Omega-B	Body	Electronic Climate Control	√	√	√	√		
2002	Omega-B	Body	Instrument	√	√	√	√		
2002	Omega-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2002	Omega-B	Chassis	ESP	√	√	√	√		
2002	Omega-B	Chassis	Servotronic	√	√	√			
2002	Omega-B	Engine	Y22DTH	√	√	√	√	√	0006
2002	Omega-B	Engine	Z22XE	√	√	√	√	√	0146 0145 0009 0040 0019
2002	Omega-B	Engine	Y25DT	√	√	√	√		
2002	Omega-B	Engine	Y26SE	√	√	√	√	√	0145 0009
2002	Omega-B	Engine	X30XE	√	√	√	√		

2002	Omega-B	Engine	Y32SE	√	√	√	√	√	0145 0009
2002	Omega-B	Infotainment System	Trip Info Display TID	√	√	√			
2002	Omega-B	Infotainment System	Multi Info Display MID	√	√	√			
2002	Omega-B	Infotainment System	Radio CAR 2003	√	√	√			
2002	Omega-B	Infotainment System	Radio CDR 2005	√	√	√	√		
2002	Omega-B	Infotainment System	Radio CCR 2006	√	√	√	√		
2002	Omega-B	Transmission	AR 25/35	√	√	√	√	√	
2002	Omega-B	Transmission	5L40-E	√	√	√	√		
2002	Speedster/VX22 0	Body	Immobiliser	√	√	√	√		0139 0140
2002	Speedster/VX22 0	Body	Airbag	√	√	√	√		
2002	Speedster/VX22 0	Body	Anti Theft Warning	√	√	√	√	√	
2002	Speedster/VX22 0	Chassis	ABS 430	√	√	√	√		
2002	Speedster/VX22 0	Engine	Z20LET	√	√	√	√		
2002	Speedster/VX22 0	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2002	Vectra- C/Signum	Body	SDM(Airbag,Sensing&Diagnostic Module)	√	√	√	√		0000 0001 0002
2002	Vectra- C/Signum	Body	Instrument	√	√	√	√	√	0169 0056 0057 0179 0001
2002	Vectra- C/Signum	Body	CIM(Steering Column Module)	√	√	√	√	√	0051 0003 0052 0001 0004 0053
2002	Vectra- C/Signum	Body	BCM(Body Control Module)	√	√	√			0180 0181
2002	Vectra- C/Signum	Body	DDM(Driver Door Module)	√	√	√			
2002	Vectra- C/Signum	Body	PDM(Passenger Door Module)	√	√	√			
2002	Vectra- C/Signum	Body	REC(Rear Electrical Centre)	√	√	√	√		
2002	Vectra- C/Signum	Body	UEC(Underhood Electrical Centre)	√	√	√	√		
2002	Vectra- C/Signum	Body	SLM(Shift Lever Module)	√	√	√			
2002	Vectra- C/Signum	Body	SRM(Sun Roof Module)	√	√	√			

2002	Vectra- C/Signum	Body	AHL/AFL(Headlamp Levelling)	√	√	√			
2002	Vectra- C/Signum	Body	Electrical Horn	√	√	√	√	√	
2002	Vectra- C/Signum	Body	Electronic Seat Memory/Seat Heating	√	√	√	√		
2002	Vectra- C/Signum	Body	Anti Theft Warning System	√	√	√	√	√	
2002	Vectra- C/Signum	Body	Central Door Lock	√	√	√	√		
2002	Vectra- C/Signum	Body	PAS (Park Pilot)	√	√	√	√	√	0001
2002	Vectra- C/Signum	Chassis	ABS/TC/ESP	√	√	√	√	√	
2002	Vectra- C/Signum	Chassis	TPMS (Tyre Pressure Monitoring System)	√	√	√	√		0032
2002	Vectra- C/Signum	Chassis	EHPS(Electronic Power Steering)	√	√	√	√		
2002	Vectra- C/Signum	Chassis	Electronic Cruise Control	√	√	√			
2002	Vectra- C/Signum	Engine	Engine Cooling	√	√	√	√		
2002	Vectra- C/Signum	Engine	Z18XE	√	√	√	√	√	0019 0010 0011 0066 0149 0012
2002	Vectra- C/Signum	Engine	Y20DTH	√	√	√	√	√	0010 0011 0066
2002	Vectra- C/Signum	Engine	Y22DTR	√	√	√	√	√	0010 0011 0066
2002	Vectra- C/Signum	Engine	Z22SE	√	√	√	√	√	0010 0011 0066
2002	Vectra- C/Signum	Engine	Z32SE	√	√	√	√	√	0019 0149
2002	Vectra- C/Signum	Engine	Z16XE	√	√	√	√	√	0010 0011 0066 0149 0012
2002	Vectra- C/Signum	Engine	Engine(default)	√	√	√			
2002	Vectra- C/Signum	Transmission	AF 23-5/33-5/40-6	√	√	√	√	√	0032 0033
2002	Vectra- C/Signum	Transmission	AF 23-5/33-5	√	√	√	√	√	0032 0033
2002	Vivaro	Body	Airbag		√	√	√		0004
2002	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2002	Vivaro	Body	Body Control Module		√	√	√	√	
2002	Vivaro	Chassis	ABS (Anti-lock Braking System)	√	√	√	√	√	0174
2002	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2002	Vivaro	Infotainment System	Trip Info Display TID	√	√	√			
2002	Vivaro	Infotainment System	Radio CDR 2005	√	√	√	√		

2002	Vivaro	Infotainment System	Radio CCR 2006	√	√	√	√		
2002	Zafira	Body	Immobiliser	√	√	√	√		0139 0140
2002	Zafira	Body	Instrument	√	√	√	√		
2002	Zafira	Body	Airbag	√	√	√	√	√	
2002	Zafira	Body	Anti Theft Warning	√	√	√	√		
2002	Zafira	Body	Central Door Lock	√	√	√	√		
2002	Zafira	Body	Electronic Climate Control	√	√	√	√		
2002	Zafira	Body	Engine Cooling Module	√	√	√	√		
2002	Zafira	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2002	Zafira	Chassis	ESP	√	√	√	√	√	0005
2002	Zafira	Chassis	Electronic Power Steering	√	√	√	√		0141
2002	Zafira	Engine	Z16XE	√			√	√	
2002	Zafira	Engine	Z16YNG	√	√	√	√	√	
2002	Zafira	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2002	Zafira	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2002	Zafira	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2002	Zafira	Engine	Y22DTR	√	√	√	√	√	0011 0021
2002	Zafira	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2002	Zafira	Engine	Z18XEL	√	√	√	√	√	0145 0009 0040
2002	Zafira	Infotainment System	Radio CAR 300	√	√	√	√		
2002	Zafira	Infotainment System	Trip Info Display TID	√	√	√			
2002	Zafira	Infotainment System	Multi Info Display MID	√	√	√			
2002	Zafira	Infotainment System	Radio CAR 400	√	√	√	√		

2002	Zafira	Infotainment System	Radio CDR 500	√	√	√	√		
2002	Zafira	Infotainment System	Radio CCR 600	√	√	√	√		
2002	Zafira	Infotainment System	Radio CCRT 700	√	√	√	√		
2002	Zafira	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2002	Zafira	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2002	Zafira	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2001	Agila	Body	Immobiliser	√	√	√	√		0139 0140
2001	Agila	Body	Airbag	√	√	√	√		
2001	Agila	Body	Instrument	√	√	√	√		
2001	Agila	Chassis	ABS	√	√	√	√	√	0189
2001	Agila	Chassis	Electronic Power Steering	√	√	√	√		
2001	Agila	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2001	Agila	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2001	Agila	Infotainment System	Trip Info Display TID	√	√	√			
2001	Agila	Infotainment System	Radio CAR 2003	√	√	√			
2001	Agila	Infotainment System	Radio CDR 2005	√	√	√	√		
2001	Astra-F	Body	Immobiliser	√	√	√	√		0139 0140
2001	Astra-F	Body	Airbag S	√	√	√	√		
2001	Astra-F	Body	Instrument	√	√	√	√	√	
2001	Astra-F	Body	Anti Theft Warning	√	√	√	√	√	
2001	Astra-F	Engine	X16SZR	√	√	√	√	√	
2001	Astra-F	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019

2001	Astra-F	Infotainment System	Trip Info Display TID	√	√	√			
2001	Astra-F	Infotainment System	Radio CAR 300	√	√	√			
2001	Astra-F	Infotainment System	Radio CAR 400	√	√	√	√		
2001	Astra-F	Infotainment System	Radio CDR 500	√	√	√	√		
2001	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2001	Astra-G	Body	Instrument	√	√	√	√		
2001	Astra-G	Body	Airbag	√	√	√	√		
2001	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2001	Astra-G	Body	Central Door Lock	√	√	√	√		
2001	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2001	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2001	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2001	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2001	Astra-G	Chassis	Cruise Control	√	√	√	√		
2001	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2001	Astra-G	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2001	Astra-G	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2001	Astra-G	Engine	C16SEL	√	√	√	√	√	
2001	Astra-G	Engine	Z16SE	√	√	√	√	√	
2001	Astra-G	Engine	Z16XE	√			√	√	
2001	Astra-G	Engine	Y17DT	√	√	√	√	√	
2001	Astra-G	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2001	Astra-G	Engine	Z18XEL	√	√	√			0011 0021
2001	Astra-G	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168

2001	Astra-G	Engine	Y20DTL	√	√	√	√		0166
2001	Astra-G	Engine	Z20LET	√	√	√	√	√	0009 0019 0040 0145 0011 0021
2001	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2001	Astra-G	Engine	X16SZR	√	√	√	√		
2001	Astra-G	Engine	X18XE1	√	√	√	√	√	0198
2001	Astra-G	Infotainment System	Trip Info Display TID	√	√	√			
2001	Astra-G	Infotainment System	Multi Info Dispaly MID	√	√	√			
2001	Astra-G	Infotainment System	Radio CAR 300	√	√	√			
2001	Astra-G	Infotainment System	Radio CAR 400	√	√	√	√		
2001	Astra-G	Infotainment System	Radio CDR 500	√	√	√	√		
2001	Astra-G	Infotainment System	Radio CCR 600	√	√	√	√		
2001	Astra-G	Infotainment System	Radio CCRT 700	√	√	√	√		
2001	Astra-G	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2001	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2001	Astra-G	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2001	Astra-G(GMSA)	Body	Airbag	√	√	√	√		
2001	Astra-G(GMSA)	Body	Anti Theft Warning	√	√	√	√		
2001	Astra-G(GMSA)	Body	Engine Cooling Module	√	√	√	√		
2001	Astra-G(GMSA)	Body	Central Door Lock	√	√	√	√		
2001	Astra-G(GMSA)	Body	Instrument	√	√	√	√		
2001	Astra-G(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2001	Astra-G(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	

2001	Astra-G(GMSA)	Chassis	Electronic Power Steering	√	√	√	√	√	
2001	Astra-G(GMSA)	Engine	C 16 SEL	√	√	√	√	√	
2001	Astra-G(GMSA)	Engine	Z 16 XE	√			√	√	
2001	Astra-G(GMSA)	Engine	Z 18 XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2001	Astra-G(GMSA)	Engine	X 18 XE1	√	√	√	√	√	0198
2001	Astra-G(GMSA)	Engine	20 SEL	√	√	√	√	√	0019
2001	Astra-G(GMSA)	Engine	Z 20 LET	√	√	√	√	√	0145 0009 0040
2001	Astra-G(GMSA)	Infotainment System	Trip Info Display TID	√	√	√			
2001	Campo	Body	Airbag	√	√	√	√		
2001	Campo	Body	Immobiliser	√	√	√	√		0164 0165
2001	Corsa-B	Body	Immobiliser	√	√	√	√		
2001	Corsa-B	Body	Airbag S	√	√	√	√		
2001	Corsa-B	Body	Airbag SAB6	√	√	√	√		
2001	Corsa-B	Body	Anti Theft Warning	√	√	√	√	√	
2001	Corsa-B	Body	Instrument	√	√	√	√		
2001	Corsa-B	Chassis	ABS-5.3	√	√	√	√		
2001	Corsa-B	Chassis	Electronic Power Steering	√	√	√	√		
2001	Corsa-B	Engine	Z14SZ	√	√	√	√	√	
2001	Corsa-B	Engine	X14NE	√	√	√	√		
2001	Corsa-B	Engine	X16NE	√	√	√	√		
2001	Corsa-B	Engine	C14SE	√	√	√	√		
2001	Corsa-B	Infotainment System	Radio CAR 300	√	√	√			
2001	Corsa-B	Infotainment System	Radio CAR 400	√	√	√	√		
2001	Corsa-B	Infotainment System	Radio CDR 500	√	√	√	√		
2001	Corsa-B	Infotainment System	Radio CCR 600	√	√	√	√		

2001	Corsa-B	Infotainment System	Radio CCRT 700	√	√	√	√		
2001	Corsa-B	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2001	Corsa-B(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2001	Corsa-B(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
2001	Corsa-B(GMSA)	Engine	16 SE	√	√	√			
2001	Corsa-C	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
2001	Corsa-C	Body	Immobiliser	√	√	√	√		0139 0140
2001	Corsa-C	Body	Airbag	√	√	√	√	√	
2001	Corsa-C	Body	Instrument	√	√	√	√	√	0176 0177
2001	Corsa-C	Body	Add On Heater	√	√	√	√	√	0122 0123
2001	Corsa-C	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2001	Corsa-C	Chassis	Electronic Power Steering	√	√	√	√		0141
2001	Corsa-C	Engine	Z10XE	√	√	√	√	√	0146 0193 0009
2001	Corsa-C	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2001	Corsa-C	Engine	Z14XE	√			√	√	0146 0145 0009 0019 0021 0011
2001	Corsa-C	Engine	Y17DT	√	√	√	√	√	
2001	Corsa-C	Engine	Y17DTL	√	√	√	√	√	
2001	Corsa-C	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2001	Corsa-C	Infotainment System	Trip Info Display TID	√	√	√			
2001	Corsa-C	Infotainment System	Radio CAR 2003	√	√	√			
2001	Corsa-C	Infotainment System	Radio CDR 2005	√	√	√	√		

2001	Corsa-C	Infotainment System	Radio CCR 2006	√	√	√	√		
2001	Corsa-C	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2001	Corsa-C	Transmission	MTA(Easytronic)	√	√	√	√	√	0011 0148
2001	Frontera-B	Body	Airbag	√	√	√	√		
2001	Frontera-B	Body	Anti Theft Warning	√	√	√			
2001	Frontera-B	Body	Central Door Lock	√	√	√	√	√	0164 0165
2001	Frontera-B	Body	Immobiliser	√	√	√	√		0164 0165
2001	Frontera-B	Engine	Y22DTH	√	√	√	√	√	0006
2001	Frontera-B	Infotainment System	Trip Info Display TID	√	√	√			
2001	Frontera-B	Infotainment System	Multi Info Dispaly MID	√	√	√			
2001	Frontera-B	Infotainment System	Radio CAR 300	√	√	√			
2001	Frontera-B	Infotainment System	Radio CAR 400	√	√	√	√		
2001	Frontera-B	Infotainment System	Radio CDR 500	√	√	√	√		
2001	Frontera-B	Infotainment System	Radio CCR 600	√	√	√	√		
2001	Frontera-B	Infotainment System	Radio CCRT 700	√	√	√	√		
2001	Frontera-B	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2001	Frontera-B	Transmission	AR 25/35	√	√	√	√	√	
2001	Movano	Body	Immobiliser	√	√	√	√		0164 0165
2001	Omega-B	Body	Airbag	√	√	√	√	√	
2001	Omega-B	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2001	Omega-B	Body	Add On Heater	√	√	√	√	√	0122 0123
2001	Omega-B	Body	Anti Theft Warning	√	√	√	√	√	
2001	Omega-B	Body	Central Door Lock	√	√	√	√	√	0164 0165

2001	Omega-B	Body	Electronic Climate Control	√	√	√	√		
2001	Omega-B	Body	Immobiliser	√	√	√	√		0164 0165
2001	Omega-B	Body	Instrument	√	√	√	√		
2001	Omega-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2001	Omega-B	Chassis	Servotronic	√	√	√			
2001	Omega-B	Engine	X20XEV	√	√	√	√	√	
2001	Omega-B	Engine	Y22DTH	√	√	√	√	√	0006
2001	Omega-B	Engine	Z22XE	√	√	√	√	√	0146 0145 0009 0040 0019
2001	Omega-B	Engine	Y26SE	√	√	√	√	√	0145 0009
2001	Omega-B	Engine	X30XE	√	√	√	√		
2001	Omega-B	Engine	Y32SE	√	√	√	√	√	0145 0009
2001	Omega-B	Infotainment System	Trip Info Display TID	√	√	√			
2001	Omega-B	Infotainment System	Multi Info Display MID	√	√	√			
2001	Omega-B	Infotainment System	Radio CAR 2003	√	√	√			
2001	Omega-B	Infotainment System	Radio CDR 2005	√	√	√	√		
2001	Omega-B	Infotainment System	Radio CCR 2006	√	√	√	√		
2001	Omega-B	Transmission	AR 25/35	√	√	√	√	√	
2001	Speedster/VX22 0	Body	Immobiliser	√	√	√	√		0139 0140
2001	Speedster/VX22 0	Body	Airbag	√	√	√	√		
2001	Speedster/VX22 0	Body	Anti Theft Warning	√	√	√	√	√	
2001	Speedster/VX22 0	Chassis	ABS 430	√	√	√	√		
2001	Speedster/VX22 0	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2001	Vectra-B	Body	Immobiliser	√	√	√	√		
2001	Vectra-B	Body	Instrument	√	√	√	√		
2001	Vectra-B	Body	Airbag	√	√	√	√		

2001	Vectra-B	Body	Airbag SAB6	√	√	√	√		
2001	Vectra-B	Body	Add On Heater	√	√	√	√	√	0122 0123
2001	Vectra-B	Body	Anti Theft Warning	√	√	√	√	√	
2001	Vectra-B	Body	Electronic Climate Control	√	√	√	√		
2001	Vectra-B	Body	Headlamp Adjustment(Left)	√	√	√	√		
2001	Vectra-B	Body	Headlamp Adjustment(Right)	√	√	√	√		
2001	Vectra-B	Chassis	ABS 430	√	√	√	√		
2001	Vectra-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2001	Vectra-B	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
2001	Vectra-B	Engine	Y16XE	√	√	√	√	√	
2001	Vectra-B	Engine	Z16XE	√			√	√	
2001	Vectra-B	Engine	X18XE	√	√	√	√		0166 0203 0204 0205 0040
2001	Vectra-B	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2001	Vectra-B	Engine	Z18XEL	√	√	√			0011 0021
2001	Vectra-B	Engine	C20SEL	√	√	√	√	√	0166
2001	Vectra-B	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2001	Vectra-B	Engine	X20XEV	√	√	√	√	√	
2001	Vectra-B	Engine	C22SEL	√	√	√	√		0204 0040 0202
2001	Vectra-B	Engine	Y22DTR	√	√	√	√	√	0011 0021
2001	Vectra-B	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2001	Vectra-B	Engine	Y26SE	√	√	√	√	√	0145 0009
2001	Vectra-B	Engine	Z18XE1	√	√	√	√	√	0145 0009 0040
2001	Vectra-B	Infotainment System	Trip Info Display TID	√	√	√			
2001	Vectra-B	Infotainment System	Multi Info Dispaly MID	√	√	√			
2001	Vectra-B	Infotainment System	Radio CAR 300	√	√	√			

2001	Vectra-B	Infotainment System	Radio CAR 400	√	√	√	√		
2001	Vectra-B	Infotainment System	Radio CDR 500	√	√	√	√		
2001	Vectra-B	Infotainment System	Radio CCR 600	√	√	√	√		
2001	Vectra-B	Infotainment System	Radio CCRT 700	√	√	√	√		
2001	Vectra-B	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2001	Vectra-B	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2001	Vectra-B	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2001	Vivaro	Body	Airbag		√	√	√		0004
2001	Vivaro	Body	Add On Heater	√	√	√	√	√	0122 0123
2001	Vivaro	Body	Body Control Module		√	√	√	√	
2001	Vivaro	Chassis	ABS (Anti-lock Braking System)	√	√	√	√	√	0174
2001	Vivaro	Engine	F9Q 760/762 (1.9L)	√	√	√	√		
2001	Vivaro	Infotainment System	Trip Info Display TID	√	√	√			
2001	Vivaro	Infotainment System	Multi Info Dispaly MID	√	√	√			
2001	Vivaro	Infotainment System	Radio CDR 2005	√	√	√	√		
2001	Vivaro	Infotainment System	Radio CCR 2006	√	√	√	√		
2001	Zafira	Body	Immobiliser	√	√	√	√		0139 0140
2001	Zafira	Body	Instrument	√	√	√	√		
2001	Zafira	Body	Airbag	√	√	√	√	√	
2001	Zafira	Body	Anti Theft Warning	√	√	√	√		
2001	Zafira	Body	Central Door Lock	√	√	√	√		
2001	Zafira	Body	Electronic Climate Control	√	√	√	√		
2001	Zafira	Body	Engine Cooling Module	√	√	√	√		

2001	Zafira	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2001	Zafira	Chassis	ESP	√	√	√	√	√	0005
2001	Zafira	Chassis	Electronic Power Steering	√	√	√	√		0141
2001	Zafira	Engine	Z16XE	√			√	√	
2001	Zafira	Engine	Z16YNG	√	√	√	√	√	
2001	Zafira	Engine	Z18XE	√	√	√	√	√	0145 0009 0040 0019 0011 0021
2001	Zafira	Engine	Y20DTH	√	√	√	√	√	0166 0167 0168
2001	Zafira	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2001	Zafira	Engine	Z18XEL	√	√	√	√	√	0145 0009 0040
2001	Zafira	Infotainment System	Radio CAR 300	√	√	√	√		
2001	Zafira	Infotainment System	Trip Info Display TID	√	√	√			
2001	Zafira	Infotainment System	Multi Info Display MID	√	√	√			
2001	Zafira	Infotainment System	Radio CAR 400	√	√	√	√		
2001	Zafira	Infotainment System	Radio CDR 500	√	√	√	√		
2001	Zafira	Infotainment System	Radio CCR 600	√	√	√	√		
2001	Zafira	Infotainment System	Radio CCRT 700	√	√	√	√		
2001	Zafira	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2001	Zafira	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2000	Agila	Body	Immobiliser	√	√	√	√		0139 0140
2000	Agila	Body	Airbag	√	√	√	√		
2000	Agila	Body	Instrument	√	√	√	√		
2000	Agila	Chassis	ABS	√	√	√	√	√	0189

2000	Agila	Chassis	Electronic Power Steering	√	√	√	√		
2000	Agila	Engine	Z10XEP	√	√	√	√	√	0011 0021 0065
2000	Agila	Engine	Z12XE	√	√	√	√	√	0006 0145 0009 0040 0019 0021 0011 0065 0033
2000	Agila	Engine	Z10XE	√	√	√	√	√	0146 0193 0009
2000	Agila	Infotainment System	Trip Info Display TID	√	√	√			
2000	Agila	Infotainment System	Radio CAR 2003	√	√	√			
2000	Agila	Infotainment System	Radio CDR 2005	√	√	√	√		
2000	Arena	Body	Immobiliser	√	√	√	√		0164 0165
2000	Astra-F	Body	Immobiliser	√	√	√	√		
2000	Astra-F	Body	Airbag S	√	√	√	√		
2000	Astra-F	Body	Instrument	√	√	√	√	√	
2000	Astra-F	Body	Anti Theft Warning	√	√	√	√	√	
2000	Astra-F	Engine	16NZR	√	√	√	√		
2000	Astra-F	Engine	X16SZR	√	√	√	√	√	
2000	Astra-F	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
2000	Astra-F	Infotainment System	Trip Info Display TID	√	√	√			
2000	Astra-F	Infotainment System	Radio CAR 300	√	√	√			
2000	Astra-F	Infotainment System	Radio CAR 400	√	√	√	√		
2000	Astra-F	Infotainment System	Radio CDR 500	√	√	√	√		
2000	Astra-F	Transmission	AF 13II/20/22/30	√	√	√	√		
2000	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
2000	Astra-G	Body	Instrument	√	√	√	√		

2000	Astra-G	Body	Airbag	√	√	√	√		
2000	Astra-G	Body	Airbag SAB6	√	√	√	√		
2000	Astra-G	Body	Anti Theft Warning	√	√	√	√		
2000	Astra-G	Body	Central Door Lock	√	√	√	√		
2000	Astra-G	Body	Engine Cooling Module	√	√	√	√		
2000	Astra-G	Body	Add On Heater	√	√	√	√	√	0122 0123
2000	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2000	Astra-G	Chassis	ESP	√	√	√	√	√	0005
2000	Astra-G	Chassis	Cruise Control	√	√	√	√		
2000	Astra-G	Chassis	Electronic Power Steering	√	√	√	√	√	
2000	Astra-G	Engine	X12XE	√	√	√	√	√	0166 0196 0202
2000	Astra-G	Engine	X14XE	√	√	√	√	√	
2000	Astra-G	Engine	C16SEL	√	√	√	√	√	
2000	Astra-G	Engine	X16SZR	√	√	√	√		
2000	Astra-G	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
2000	Astra-G	Engine	X17DTL	√	√	√	√	√	
2000	Astra-G	Engine	Y17DT	√	√	√	√	√	
2000	Astra-G	Engine	X18XE1	√	√	√	√	√	
2000	Astra-G	Engine	X20DTL	√	√	√	√		
2000	Astra-G	Engine	X20XER	√	√	√	√		
2000	Astra-G	Engine	X20XEV	√	√	√	√		
2000	Astra-G	Engine	Z20LET	√	√	√	√	√	0166
2000	Astra-G	Engine	Z22SE	√	√	√	√	√	0065 0146 0145 0009 0011 0021
2000	Astra-G	Infotainment System	Trip Info Display TID	√	√	√			
2000	Astra-G	Infotainment System	Multi Info Dispaly MID	√	√	√			
2000	Astra-G	Infotainment System	Radio CAR 300	√	√	√			

2000	Astra-G	Infotainment System	Radio CAR 400	√	√	√	√		
2000	Astra-G	Infotainment System	Radio CDR 500	√	√	√	√		
2000	Astra-G	Infotainment System	Radio CCR 600	√	√	√	√		
2000	Astra-G	Infotainment System	Radio CCRT 700	√	√	√	√		
2000	Astra-G	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2000	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2000	Astra-G(GMSA)	Body	Airbag	√	√	√	√		
2000	Astra-G(GMSA)	Body	Anti Theft Warning	√	√	√	√		
2000	Astra-G(GMSA)	Body	Central Door Lock	√	√	√	√		
2000	Astra-G(GMSA)	Body	Engine Cooling Module	√	√	√	√		
2000	Astra-G(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2000	Astra-G(GMSA)	Body	Instrument	√	√	√	√		
2000	Astra-G(GMSA)	Chassis	ABS-5.3/5.4 (+TC) (Anti-lock Braking	√	√	√	√	√	
2000	Astra-G(GMSA)	Chassis	Electronic Power Steering	√	√	√	√	√	
2000	Astra-G(GMSA)	Engine	C 16 SEL	√	√	√	√	√	
2000	Astra-G(GMSA)	Engine	X 18 XE1	√	√	√	√	√	0198
2000	Astra-G(GMSA)	Engine	20 SEL	√	√	√	√	√	0019
2000	Astra-G(GMSA)	Engine	Z 20 LET	√	√	√	√	√	0145 0009 0040
2000	Astra-G(GMSA)	Infotainment System	Trip Info Display TID	√	√	√			
2000	Campo	Body	Airbag	√	√	√	√		
2000	Corsa-B	Body	Immobiliser	√	√	√	√		
2000	Corsa-B	Body	Airbag S	√	√	√	√		
2000	Corsa-B	Body	Airbag SAB6	√	√	√	√		
2000	Corsa-B	Body	Anti Theft Warning	√	√	√	√	√	
2000	Corsa-B	Body	Airbag	√	√	√	√		
2000	Corsa-B	Chassis	ABS-5.3	√	√	√	√		

2000	Corsa-B	Chassis	Electronic Power Steering	√	√	√	√		
2000	Corsa-B	Engine	X10XE	√	√	√	√	√	0166 0196 0202
2000	Corsa-B	Engine	X12XE	√	√	√	√	√	0166 0196 0202
2000	Corsa-B	Engine	C14SEL	√	√	√	√		
2000	Corsa-B	Engine	X14SZ	√	√	√	√	√	
2000	Corsa-B	Engine	X14XE	√	√	√	√	√	
2000	Corsa-B	Engine	C16SEL	√	√	√	√		
2000	Corsa-B	Engine	X16XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
2000	Corsa-B	Engine	X14NE	√	√	√	√		
2000	Corsa-B	Engine	X16NE	√	√	√	√		
2000	Corsa-B	Engine	C14SE	√	√	√	√		
2000	Corsa-B	Infotainment System	Radio CAR 300	√	√	√			
2000	Corsa-B	Infotainment System	Radio CAR 400	√	√	√	√		
2000	Corsa-B	Infotainment System	Radio CDR 500	√	√	√	√		
2000	Corsa-B	Infotainment System	Radio CCR 600	√	√	√	√		
2000	Corsa-B	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2000	Corsa-B	Infotainment System	Radio CCRT 700	√	√	√	√		
2000	Corsa-B	Transmission	AF 13II/20/22/30	√	√	√	√		
2000	Corsa-B	Transmission	AF 13/14/20	√	√	√	√		
2000	Corsa-B(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
2000	Corsa-B(GMSA)	Engine	13 NE	√	√	√	√	√	0166 0190 0191 0056 0192
2000	Corsa-B(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
2000	Corsa-B(GMSA)	Engine	16 SE	√	√	√			

2000	Frontera-B	Body	Airbag	√	√	√	√		
2000	Frontera-B	Body	Anti Theft Warning	√	√	√			
2000	Frontera-B	Body	Central Door Lock	√	√	√	√	√	0164 0165
2000	Frontera-B	Body	Immobiliser	√	√	√	√		0164 0165
2000	Frontera-B	Engine	X22DTH	√	√	√	√		
2000	Frontera-B	Engine	Y22DTH	√	√	√	√	√	0006
2000	Frontera-B	Infotainment System	Trip Info Display TID	√	√	√			
2000	Frontera-B	Infotainment System	Multi Info Dispaly MID	√	√	√			
2000	Frontera-B	Infotainment System	Radio CAR 300	√	√	√			
2000	Frontera-B	Infotainment System	Radio CAR 400	√	√	√	√		
2000	Frontera-B	Infotainment System	Radio CDR 500	√	√	√	√		
2000	Frontera-B	Infotainment System	Radio CCR 600	√	√	√	√		
2000	Frontera-B	Infotainment System	Radio CCRT 700	√	√	√	√		
2000	Frontera-B	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2000	Frontera-B	Transmission	AR 25/35	√	√	√	√	√	
2000	Movano	Body	Immobiliser	√	√	√	√		0164 0165
2000	Omega-B	Body	Airbag	√	√	√	√	√	
2000	Omega-B	Body	Headlamp Levelling Device	√	√	√	√	√	0141
2000	Omega-B	Body	Add On Heater	√	√	√	√	√	0122 0123
2000	Omega-B	Body	Anti Theft Warning	√	√	√	√	√	
2000	Omega-B	Body	Central Door Lock	√	√	√	√	√	0164 0165
2000	Omega-B	Body	Electronic Climate Control	√	√	√	√		
2000	Omega-B	Body	Immobiliser	√	√	√	√		0164 0165
2000	Omega-B	Body	Instrument	√	√	√	√		

2000	Omega-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2000	Omega-B	Chassis	Servotronic	√	√	√			
2000	Omega-B	Engine	X20DTH	√	√	√	√		
2000	Omega-B	Engine	X20XEV	√	√	√	√	√	
2000	Omega-B	Engine	Y22XE	√	√	√	√		
2000	Omega-B	Engine	X25XE	√	√	√	√		
2000	Omega-B	Engine	Y30XE	√	√	√	√		
2000	Omega-B	Infotainment System	Trip Info Display TID	√	√	√			
2000	Omega-B	Infotainment System	Multi Info Dispaly MID	√	√	√			
2000	Omega-B	Infotainment System	Radio CAR 2003	√	√	√			
2000	Omega-B	Infotainment System	Radio CDR 2005	√	√	√	√		
2000	Omega-B	Infotainment System	Radio CCR 2006	√	√	√	√		
2000	Omega-B	Transmission	AR 25/35	√	√	√	√	√	
2000	Vauxhall VXR8	Body	Airbag	√	√	√	√		
2000	Vauxhall VXR8	Body	Airbag-S	√	√	√	√		
2000	Vauxhall VXR8	Body	Airbag SAB6	√	√	√	√		
2000	Vauxhall VXR8	Body	Immobiliser	√	√	√	√		0164 0165
2000	Vauxhall VXR8	Chassis	ABS-5.3 (Anti-lock Braking System)	√	√	√	√		
2000	Vauxhall VXR8	Engine	X 14 XE	√	√	√	√	√	
2000	Vauxhall VXR8	Engine	X 16 XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
2000	Vauxhall VXR8	Engine	C 16 SEL	√	√	√	√	√	
2000	Vauxhall VXR8	Infotainment System	Radio CAR 300	√	√	√			
2000	Vauxhall VXR8	Infotainment System	Radio CAR 400	√	√	√	√		

2000	Vauxhall VXR8	Infotainment System	Radio CDR 500	√	√	√	√		
2000	Vauxhall VXR8	Infotainment System	Radio CCR 600	√	√	√	√		
2000	Vauxhall VXR8	Infotainment System	Radio CCRT 700	√	√	√	√		
2000	Vauxhall VXR8	Transmission	AF 13/14/20	√	√	√	√		
2000	Vectra-B	Body	Immobiliser	√	√	√	√		
2000	Vectra-B	Body	Instrument	√	√	√	√		
2000	Vectra-B	Body	Airbag SAB6	√	√	√	√		
2000	Vectra-B	Body	Add On Heater	√	√	√	√	√	0122 0123
2000	Vectra-B	Body	Anti Theft Warning	√	√	√	√	√	
2000	Vectra-B	Body	Electronic Climate Control	√	√	√	√		
2000	Vectra-B	Body	Headlamp Adjustment(Left)	√	√	√	√		
2000	Vectra-B	Body	Headlamp Adjustment(Right)	√	√	√	√		
2000	Vectra-B	Chassis	ABS 430	√	√	√	√		
2000	Vectra-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2000	Vectra-B	Engine	X16SZR	√	√	√	√	√	
2000	Vectra-B	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
2000	Vectra-B	Engine	Y16XE	√	√	√	√	√	
2000	Vectra-B	Engine	X18XE1	√	√	√	√	√	
2000	Vectra-B	Engine	20NEJ	√	√	√	√		
2000	Vectra-B	Engine	C20SEL	√	√	√	√	√	0166
2000	Vectra-B	Engine	X20DTH	√	√	√	√		
2000	Vectra-B	Engine	X20DTL	√	√	√	√		
2000	Vectra-B	Engine	X20XEV	√	√	√	√	√	
2000	Vectra-B	Engine	C22SEL	√	√	√	√		0204 0040 0202
2000	Vectra-B	Engine	16LZ2	√	√	√	√		
2000	Vectra-B	Engine	X18XE	√	√	√	√		0166 0202 0203 0204 0040
2000	Vectra-B	Engine	X25XE	√	√	√	√		

2000	Vectra-B	Infotainment System	Trip Info Display TID	√	√	√			
2000	Vectra-B	Infotainment System	Multi Info Display MID	√	√	√			
2000	Vectra-B	Infotainment System	Radio CAR 300	√	√	√			
2000	Vectra-B	Infotainment System	Radio CAR 400	√	√	√	√		
2000	Vectra-B	Infotainment System	Radio CDR 500	√	√	√	√		
2000	Vectra-B	Infotainment System	Radio CCRT 700	√	√	√	√		
2000	Vectra-B	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
2000	Vectra-B	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
2000	Zafira	Body	Immobiliser	√	√	√	√		0139 0140
2000	Zafira	Body	Instrument	√	√	√	√		
2000	Zafira	Body	Airbag	√	√	√	√	√	
2000	Zafira	Body	Anti Theft Warning	√	√	√	√		
2000	Zafira	Body	Central Door Lock	√	√	√	√		
2000	Zafira	Body	Electronic Climate Control	√	√	√	√		
2000	Zafira	Body	Engine Cooling Module	√	√	√	√		
2000	Zafira	Body	Airbag SAB6	√	√	√	√		
2000	Zafira	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
2000	Zafira	Chassis	ESP	√	√	√	√	√	0005
2000	Zafira	Chassis	Cruise Control	√	√	√	√		
2000	Zafira	Chassis	Electronic Power Steering	√	√	√	√		0141
2000	Zafira	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
2000	Zafira	Engine	X18XE1	√	√	√	√	√	
2000	Zafira	Engine	X20DTL	√	√	√	√		
2000	Zafira	Infotainment System	Radio CAR 300	√	√	√	√		

2000	Zafira	Infotainment System	Trip Info Display TID	√	√	√			
2000	Zafira	Infotainment System	Multi Info Display MID	√	√	√			
2000	Zafira	Infotainment System	Radio CAR 300	√	√	√	√		
2000	Zafira	Infotainment System	Radio CAR 400	√	√	√	√		
2000	Zafira	Infotainment System	Radio CDR 500	√	√	√	√		
2000	Zafira	Infotainment System	Radio CCR 600	√	√	√	√		
2000	Zafira	Infotainment System	Radio CCRT 700	√	√	√	√		
2000	Zafira	Infotainment System	Radio NCDR 1100/1500	√	√	√	√		
2000	Zafira	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
1999	Astra-F	Body	Immobiliser	√	√	√	√		0164 0165
1999	Astra-F	Body	Immobiliser	√	√	√	√		
1999	Astra-F	Body	Airbag S	√	√	√	√		
1999	Astra-F	Body	Instrument	√	√	√	√	√	
1999	Astra-F	Body	Anti Theft Warning	√	√	√	√	√	
1999	Astra-F	Engine	16NZR	√	√	√	√		
1999	Astra-F	Engine	X16SZR	√	√	√	√	√	
1999	Astra-F	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
1999	Astra-F	Engine	18SE	√	√	√	√		
1999	Astra-F	Engine	C18SEL	√	√	√	√		0166
1999	Astra-F	Engine	C16SE		√	√	√		
1999	Astra-F	Engine	X18XE	√	√	√	√		0166 0202 0203 0204 0040

1999	Astra-F	Infotainment System	Trip Info Display TID	√	√	√			
1999	Astra-F	Infotainment System	Multi Info Display MID	√	√	√			
1999	Astra-F	Infotainment System	Radio CAR 300	√	√	√			
1999	Astra-F	Infotainment System	Radio CAR 400	√	√	√	√		
1999	Astra-F	Infotainment System	Radio CDR 500	√	√	√	√		
1999	Astra-F	Transmission	AF 13II/20/22/30	√	√	√	√		
1999	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
1999	Astra-G	Body	Instrument	√	√	√	√		
1999	Astra-G	Body	Airbag SAB6	√	√	√	√		
1999	Astra-G	Body	Anti Theft Warning	√	√	√	√		
1999	Astra-G	Body	Central Door Lock	√	√	√	√		
1999	Astra-G	Body	Engine Cooling Module	√	√	√	√		
1999	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
1999	Astra-G	Chassis	Cruise Control	√	√	√	√		
1999	Astra-G	Engine	X12XE	√	√	√	√	√	0166 0196 0202
1999	Astra-G	Engine	X14XE	√	√	√	√	√	
1999	Astra-G	Engine	C16SEL	√	√	√	√	√	
1999	Astra-G	Engine	X16SZR	√	√	√	√		
1999	Astra-G	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
1999	Astra-G	Engine	X17DTL	√	√	√	√	√	
1999	Astra-G	Engine	X18XE1	√	√	√	√	√	
1999	Astra-G	Engine	X20DTL	√	√	√	√		
1999	Astra-G	Engine	X20XEV	√	√	√	√		
1999	Astra-G	Infotainment System	Trip Info Display TID	√	√	√			

1999	Astra-G	Infotainment System	Multi Info Dispaly MID	√	√	√			
1999	Astra-G	Infotainment System	Radio CAR 300	√	√	√			
1999	Astra-G	Infotainment System	Radio CAR 400	√	√	√	√		
1999	Astra-G	Infotainment System	Radio CDR 500	√	√	√	√		
1999	Astra-G	Infotainment System	Radio CCRT 700	√	√	√	√		
1999	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
1999	Astra-G(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
1999	Astra-G(GMSA)	Engine	13 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1999	Astra-G(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1999	Astra-G(GMSA)	Engine	16 SE	√	√	√			
1999	Corsa-B	Body	Immobiliser	√	√	√	√		
1999	Corsa-B	Body	Airbag S	√	√	√	√		
1999	Corsa-B	Body	Airbag SAB6	√	√	√	√		
1999	Corsa-B	Body	Anti Theft Warning	√	√	√	√	√	
1999	Corsa-B	Body	Instrument	√	√	√	√		
1999	Corsa-B	Chassis	ABS-5.3	√	√	√	√		
1999	Corsa-B	Chassis	Electronic Power Steering	√	√	√	√		
1999	Corsa-B	Engine	X10XE	√	√	√	√	√	0166 0196 0202
1999	Corsa-B	Engine	X12XE	√	√	√	√	√	0166 0196 0202
1999	Corsa-B	Engine	C14SEL	√	√	√	√		
1999	Corsa-B	Engine	X14SZ	√	√	√	√	√	
1999	Corsa-B	Engine	X14XE	√	√	√	√	√	
1999	Corsa-B	Engine	C16SEL	√	√	√	√		
1999	Corsa-B	Engine	X16XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201

1999	Corsa-B	Engine	C14SE	√	√	√	√		
1999	Corsa-B	Infotainment System	Radio CAR 300	√	√	√			
1999	Corsa-B	Infotainment System	Radio CAR 400	√	√	√	√		
1999	Corsa-B	Infotainment System	Radio CDR 500	√	√	√	√		
1999	Corsa-B	Infotainment System	Radio CCRT 700	√	√	√	√		
1999	Corsa-B	Transmission	AF 13II/20/22/30	√	√	√	√		
1999	Corsa-B	Transmission	AF 13/14/20	√	√	√	√		
1999	Corsa-B (GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
1999	Corsa-B (GMSA)	Engine	13 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1999	Corsa-B (GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1999	Corsa-B (GMSA)	Engine	16 NE	√	√	√			
1999	Corsa-B (GMSA)	Engine	16 SE	√	√	√			
1999	Frontera-B	Body	Airbag	√	√	√	√		
1999	Frontera-B	Body	Anti Theft Warning	√	√	√			
1999	Frontera-B	Body	Central Door Lock	√	√	√	√	√	0164 0165
1999	Frontera-B	Body	Immobiliser	√	√	√	√		0164 0165
1999	Frontera-B	Engine	X22DTH	√	√	√	√		
1999	Frontera-B	Infotainment System	Trip Info Display TID	√	√	√			
1999	Frontera-B	Infotainment System	Multi Info Dispaly MID	√	√	√			
1999	Frontera-B	Infotainment System	Radio CAR 300	√	√	√			
1999	Frontera-B	Infotainment System	Radio CAR 400	√	√	√	√		

1999	Frontera-B	Infotainment System	Radio CDR 500	√	√	√	√		
1999	Frontera-B	Infotainment System	Radio CCRT 700	√	√	√	√		
1999	Frontera-B	Transmission	AR 25/35	√	√	√	√	√	
1999	Monterey	Body	Airbag	√	√	√	√		
1999	Monterey	Body	Immobiliser	√	√	√	√		0164 0165
1999	Monterey	Body	Anti Theft Warning	√	√	√	√	√	
1999	Monterey	Chassis	ABS 5	√	√	√	√		
1999	Monterey	Engine	4JX1(3.0L)		√	√	√		
1999	Monterey	Engine	6VE1(3.5L,V6)	√	√	√			
1999	Movano	Body	Immobiliser	√	√	√	√		0164 0165
1999	Omega-B	Body	Airbag SAB6	√	√	√	√		
1999	Omega-B	Body	Headlamp Levelling Device	√	√	√	√	√	0141
1999	Omega-B	Body	Add On Heater	√	√	√	√	√	0122 0123
1999	Omega-B	Body	Anti Theft Warning	√	√	√	√	√	
1999	Omega-B	Body	Central Door Lock	√	√	√	√	√	0164 0165
1999	Omega-B	Body	Electronic Climate Control	√	√	√	√		
1999	Omega-B	Body	Immobiliser	√	√	√	√		0164 0165
1999	Omega-B	Body	Instrument	√	√	√	√		
1999	Omega-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
1999	Omega-B	Chassis	Servotronic	√	√	√			
1999	Omega-B	Engine	X20DTH	√	√	√	√		
1999	Omega-B	Engine	X20XEV	√	√	√	√	√	
1999	Omega-B	Engine	X25XE	√	√	√	√		
1999	Omega-B	Engine	Y30XE	√	√	√	√		
1999	Omega-B	Engine	20SE	√	√	√	√		
1999	Omega-B	Infotainment System	Trip Info Display TID	√	√	√			
1999	Omega-B	Infotainment System	Multi Info Dispaly MID	√	√	√			

1999	Omega-B	Infotainment System	Radio CAR 300	√	√	√			
1999	Omega-B	Infotainment System	Radio CAR 400	√	√	√	√		
1999	Omega-B	Infotainment System	Radio CDR 500	√	√	√	√		
1999	Omega-B	Infotainment System	Radio CCRT 700	√	√	√	√		
1999	Omega-B	Transmission	AR 25/35	√	√	√	√	√	
1999	Sintra	Body	Airbag	√	√	√	√		
1999	Sintra	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
1999	Sintra	Body	Immobiliser	√	√	√	√		0164 0165
1999	Sintra	Engine	X22DTH	√	√	√	√		
1999	Sintra	Infotainment System	Trip Info Display TID	√	√	√			
1999	Sintra	Infotainment System	Multi Info Display MID	√	√	√			
1999	Sintra	Infotainment System	Radio CAR 300	√	√	√			
1999	Sintra	Infotainment System	Radio CAR 400	√	√	√	√		
1999	Sintra	Infotainment System	Radio CDR 500	√	√	√	√		
1999	Sintra	Transmission	AF 13II/20/22/30	√	√	√	√		
1999	Tigra	Body	Immobiliser	√	√	√	√		
1999	Tigra	Body	Airbag S	√	√	√	√		
1999	Tigra	Body	Airbag SAB6	√	√	√	√		
1999	Tigra	Body	Anti Theft Warning	√	√	√	√	√	
1999	Tigra	Chassis	ABS-5.3	√	√	√	√		
1999	Tigra	Engine	C14SEL	√	√	√	√		
1999	Tigra	Engine	X14XE	√	√	√	√	√	
1999	Tigra	Engine	C16SEL	√	√	√	√		

1999	Tigra	Engine	X16XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
1999	Vauxhall VXR8	Body	Anti Theft Warning	√	√	√	√	√	
1999	Vauxhall VXR8	Body	Airbag-S	√	√	√	√		
1999	Vauxhall VXR8	Body	Airbag SAB6	√	√	√	√		
1999	Vauxhall VXR8	Body	Immobiliser	√	√	√	√		0164 0165
1999	Vauxhall VXR8	Engine	X 14 XE	√	√	√	√	√	
1999	Vauxhall VXR8	Engine	X 16 XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
1999	Vauxhall VXR8	Engine	C 16 SEL	√	√	√	√	√	
1999	Vauxhall VXR8	Infotainment System	Radio CAR 300	√	√	√			
1999	Vauxhall VXR8	Infotainment System	Radio CAR 400	√	√	√	√		
1999	Vauxhall VXR8	Infotainment System	Radio CDR 500	√	√	√	√		
1999	Vauxhall VXR8	Infotainment System	Radio CCRT 700	√	√	√	√		
1999	Vauxhall VXR8	Transmission	AF 13/14/20	√	√	√	√		
1999	Vectra-B	Body	Immobiliser	√	√	√	√		
1999	Vectra-B	Body	Instrument	√	√	√	√		
1999	Vectra-B	Body	Airbag SAB6	√	√	√	√		
1999	Vectra-B	Body	Add On Heater	√	√	√	√	√	0122 0123
1999	Vectra-B	Body	Anti Theft Warning	√	√	√	√	√	
1999	Vectra-B	Body	Electronic Climate Control	√	√	√	√		
1999	Vectra-B	Chassis	ABS 415	√	√	√	√		
1999	Vectra-B	Chassis	ABS 430	√	√	√	√		
1999	Vectra-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
1999	Vectra-B	Chassis	ABS-5-TC (Anti-lock Braking System)	√	√	√	√		
1999	Vectra-B	Engine	X16SZR	√	√	√	√	√	
1999	Vectra-B	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019

1999	Vectra-B	Engine	Y16XE	√	√	√	√	√	
1999	Vectra-B	Engine	X18XE1	√	√	√	√	√	
1999	Vectra-B	Engine	20NEJ	√	√	√	√		
1999	Vectra-B	Engine	C20SEL	√	√	√	√	√	0166
1999	Vectra-B	Engine	X20DTH	√	√	√	√		
1999	Vectra-B	Engine	X20DTL	√	√	√	√		
1999	Vectra-B	Engine	X20XEV	√	√	√	√	√	
1999	Vectra-B	Engine	C22SEL	√	√	√	√		0204 0040 0202
1999	Vectra-B	Engine	16LZ2	√	√	√	√		
1999	Vectra-B	Engine	X18XE	√	√	√	√		0166 0202 0203 0204 0040
1999	Vectra-B	Engine	X25XE	√	√	√	√		
1999	Vectra-B	Infotainment System	Trip Info Display TID	√	√	√			
1999	Vectra-B	Infotainment System	Multi Info Display MID	√	√	√			
1999	Vectra-B	Infotainment System	Radio CAR 300	√	√	√			
1999	Vectra-B	Infotainment System	Radio CAR 400	√	√	√	√		
1999	Vectra-B	Infotainment System	Radio CDR 500	√	√	√	√		
1999	Vectra-B	Infotainment System	Radio CCRT 700	√	√	√	√		
1999	Vectra-B	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
1999	Vectra-B	Transmission	AF 13II/20/22/30	√	√	√	√		
1999	Zafira	Body	Immobiliser	√	√	√	√		0139 0140
1999	Zafira	Body	Instrument	√	√	√	√		
1999	Zafira	Body	Airbag	√	√	√	√	√	
1999	Zafira	Body	Anti Theft Warning	√	√	√	√		
1999	Zafira	Body	Central Door Lock	√	√	√	√		
1999	Zafira	Body	Electronic Climate Control	√	√	√	√		

1999	Zafira	Body	Engine Cooling Module	√	√	√	√		
1999	Zafira	Body	Airbag SAB6	√	√	√	√		
1999	Zafira	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
1999	Zafira	Chassis	Cruise Control	√	√	√	√		
1999	Zafira	Chassis	Electronic Power Steering	√	√	√	√		0141
1999	Zafira	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
1999	Zafira	Engine	X18XE1	√	√	√	√	√	
1999	Zafira	Infotainment System	Radio CAR 300	√	√	√	√		
1999	Zafira	Infotainment System	Trip Info Display TID	√	√	√			
1999	Zafira	Infotainment System	Multi Info Dispaly MID	√	√	√			
1999	Zafira	Infotainment System	Radio CAR 300	√	√	√	√		
1999	Zafira	Infotainment System	Radio CAR 400	√	√	√	√		
1999	Zafira	Infotainment System	Radio CDR 500	√	√	√	√		
1999	Zafira	Infotainment System	Radio CCRT 700	√	√	√	√		
1999	Zafira	Transmission	AF 13-II/17/20/22 CAN	√	√	√	√	√	
1998	Arena	Body	Immobiliser	√	√	√	√		0164 0165
1998	Astra-F	Body	Immobiliser	√	√	√	√		
1998	Astra-F	Body	Airbag S	√	√	√	√		
1998	Astra-F	Body	Instrument	√	√	√	√	√	
1998	Astra-F	Body	Anti Theft Warning	√	√	√	√	√	
1998	Astra-F	Engine	X14XE	√	√	√	√		
1998	Astra-F	Engine	16NZR	√	√	√	√		
1998	Astra-F	Engine	X16SZR	√	√	√	√	√	

1998	Astra-F	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
1998	Astra-F	Engine	18SE	√	√	√	√		
1998	Astra-F	Engine	C18SEL	√	√	√	√		0166
1998	Astra-F	Engine	X18XE	√	√	√	√		0166 0202 0203 0204 0040
1998	Astra-F	Engine	X20XEV	√	√	√	√	√	
1998	Astra-F	Engine	C14SE	√	√	√	√		
1998	Astra-F	Engine	C16SE		√	√	√		
1998	Astra-F	Engine	16LZ2	√	√	√	√		
1998	Astra-F	Infotainment System	Multi Info Display MID	√	√	√			
1998	Astra-F	Infotainment System	Radio CAR 300	√	√	√			
1998	Astra-F	Infotainment System	Radio CAR 400	√	√	√	√		
1998	Astra-F	Infotainment System	Radio CDR 500	√	√	√	√		
1998	Astra-F	Transmission	AF 13II/20/22/30	√	√	√	√		
1998	Astra-F	Transmission	AF 13/14/20	√	√	√	√		
1998	Astra-G	Body	Immobiliser	√	√	√	√		0139 0140
1998	Astra-G	Body	Instrument	√	√	√	√		
1998	Astra-G	Body	Airbag SAB6	√	√	√	√		
1998	Astra-G	Body	Anti Theft Warning	√	√	√	√		
1998	Astra-G	Body	Central Door Lock	√	√	√	√		
1998	Astra-G	Body	Engine Cooling Module	√	√	√	√		
1998	Astra-G	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
1998	Astra-G	Chassis	Cruise Control	√	√	√	√		
1998	Astra-G	Engine	X12XE	√	√	√	√	√	0166 0196 0202
1998	Astra-G	Engine	X14XE	√	√	√	√	√	
1998	Astra-G	Engine	X16SZR	√	√	√	√		

1998	Astra-G	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
1998	Astra-G	Engine	X17DTL	√	√	√	√	√	
1998	Astra-G	Engine	X18XE1	√	√	√	√	√	
1998	Astra-G	Engine	X20DTL	√	√	√	√		
1998	Astra-G	Engine	X20XEV	√	√	√	√		
1998	Astra-G	Infotainment System	Multi Info Dispaly MID	√	√	√			
1998	Astra-G	Infotainment System	Radio CAR 300	√	√	√			
1998	Astra-G	Infotainment System	Radio CAR 400	√	√	√	√		
1998	Astra-G	Infotainment System	Radio CDR 500	√	√	√	√		
1998	Astra-G	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
1998	Astra-G(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
1998	Astra-G(GMSA)	Engine	13 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1998	Astra-G(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1998	Astra-G(GMSA)	Engine	16 SE	√	√	√			
1998	Corsa-B	Body	Immobiliser	√	√	√	√		
1998	Corsa-B	Body	Airbag S	√	√	√	√		
1998	Corsa-B	Body	Anti Theft Warning	√	√	√	√	√	
1998	Corsa-B	Body	Instrument	√	√	√	√		
1998	Corsa-B	Chassis	ABS-5.3	√	√	√	√		
1998	Corsa-B	Chassis	Electronic Power Steering	√	√	√	√		
1998	Corsa-B	Engine	X10XE	√	√	√	√	√	0166 0196 0202
1998	Corsa-B	Engine	X12XE	√	√	√	√	√	0166 0196 0202
1998	Corsa-B	Engine	C14SEL	√	√	√	√		
1998	Corsa-B	Engine	C14NZ	√	√	√	√		
1998	Corsa-B	Engine	X14SZ	√	√	√	√	√	

1998	Corsa-B	Engine	X14XE	√	√	√	√	√	
1998	Corsa-B	Engine	C16SEL	√	√	√	√		
1998	Corsa-B	Engine	X16XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
1998	Corsa-B	Infotainment System	Radio CAR 300	√	√	√			
1998	Corsa-B	Infotainment System	Radio CAR 400	√	√	√	√		
1998	Corsa-B	Infotainment System	Radio CDR 500	√	√	√	√		
1998	Corsa-B	Transmission	AF 13II/20/22/30	√	√	√	√		
1998	Corsa-B	Transmission	AF 13/14/20	√	√	√	√		
1998	Corsa-B(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
1998	Corsa-B(GMSA)	Engine	13 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1998	Corsa-B(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1998	Corsa-B(GMSA)	Engine	16 NE	√	√	√			
1998	Corsa-B(GMSA)	Engine	16 SE	√	√	√			
1998	Frontera	Body	Immobiliser	√	√	√	√		
1998	Frontera	Body	Anti Theft Warning	√	√	√			
1998	Frontera	Body	Central Door Lock	√	√	√	√	√	0164 0165
1998	Frontera	Chassis	ABS 415	√	√	√	√		
1998	Frontera	Engine	25 TDS	√	√	√	√		
1998	Frontera	Infotainment System	Multi Info Dispaly MID	√	√	√			
1998	Frontera	Infotainment System	Radio CDR 500	√	√	√	√		
1998	Monterey	Chassis	ABS 5	√	√	√	√		
1998	Monterey	Chassis	Anti Theft Warning	√	√	√	√	√	
1998	Monterey	Chassis	Body Control Module	√	√	√	√	√	0051 0058 0138
1998	Monterey	Chassis	Immobiliser	√	√	√	√		0164 0165

1998	Omega-B	Body	Immobiliser	√	√	√	√		
1998	Omega-B	Body	Airbag SAB6	√	√	√	√		
1998	Omega-B	Body	Headlamp Levelling Device	√	√	√	√	√	0141
1998	Omega-B	Body	Add On Heater	√	√	√	√	√	0122 0123
1998	Omega-B	Body	Anti Theft Warning	√	√	√	√	√	
1998	Omega-B	Body	Central Door Lock	√	√	√	√	√	0164 0165
1998	Omega-B	Body	Electronic Climate Control	√	√	√	√		
1998	Omega-B	Body	Instrument	√	√	√	√		
1998	Omega-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
1998	Omega-B	Chassis	Servotronic	√	√	√			
1998	Omega-B	Engine	X20DTH	√	√	√	√		
1998	Omega-B	Engine	X20XEV	√	√	√	√	√	
1998	Omega-B	Engine	X25XE	√	√	√	√		
1998	Omega-B	Engine	Y30XE	√	√	√	√		
1998	Omega-B	Engine	20SE	√	√	√	√		
1998	Omega-B	Infotainment System	Trip Info Display TID	√	√	√			
1998	Omega-B	Infotainment System	Multi Info Dispaly MID	√	√	√			
1998	Omega-B	Infotainment System	Radio CAR 300	√	√	√			
1998	Omega-B	Infotainment System	Radio CAR 400	√	√	√	√		
1998	Omega-B	Infotainment System	Radio CDR 500	√	√	√	√		
1998	Omega-B	Transmission	AR 25/35	√	√	√	√	√	
1998	Sintra	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
1998	Sintra	Body	Immobiliser	√	√	√	√		0164 0165
1998	Sintra	Engine	X22DTH	√	√	√	√		
1998	Sintra	Infotainment System	Multi Info Dispaly MID	√	√	√			

1998	Sintra	Infotainment System	Radio CAR 300	√	√	√			
1998	Sintra	Infotainment System	Radio CAR 400	√	√	√	√		
1998	Sintra	Infotainment System	Radio CDR 500	√	√	√	√		
1998	Sintra	Transmission	AF 13II/20/22/30	√	√	√	√		
1998	Tigra	Body	Immobiliser	√	√	√	√		
1998	Tigra	Body	Airbag S	√	√	√	√		
1998	Tigra	Body	Anti Theft Warning	√	√	√	√	√	
1998	Tigra	Chassis	ABS-5.3	√	√	√	√		
1998	Tigra	Engine	C14SEL	√	√	√	√		
1998	Tigra	Engine	X14XE	√	√	√	√	√	
1998	Tigra	Engine	C16SEL	√	√	√	√		
1998	Tigra	Engine	X16XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
1998	Vauxhall VXR8	Body	Airbag-S	√	√	√	√		
1998	Vauxhall VXR8	Body	Immobiliser	√	√	√	√		0164 0165
1998	Vauxhall VXR8	Engine	X 14 XE	√	√	√	√	√	
1998	Vauxhall VXR8	Engine	X 16 XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
1998	Vauxhall VXR8	Infotainment System	Radio CAR 300	√	√	√			
1998	Vauxhall VXR8	Infotainment System	Radio CAR 400	√	√	√	√		
1998	Vauxhall VXR8	Infotainment System	Radio CDR 500	√	√	√	√		
1998	Vauxhall VXR8	Transmission	AF 13/14/20	√	√	√	√		
1998	Vectra-B	Body	Immobiliser	√	√	√	√		
1998	Vectra-B	Body	Instrument	√	√	√	√		
1998	Vectra-B	Body	Airbag SAB6	√	√	√	√		
1998	Vectra-B	Body	Add On Heater	√	√	√	√	√	0122 0123

1998	Vectra-B	Body	Anti Theft Warning	√	√	√	√	√	
1998	Vectra-B	Body	Electronic Climate Control	√	√	√	√		
1998	Vectra-B	Chassis	ABS 415	√	√	√	√		
1998	Vectra-B	Chassis	ABS 430	√	√	√	√		
1998	Vectra-B	Chassis	ABS-5-TC	√	√	√	√		
1998	Vectra-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
1998	Vectra-B	Engine	X16SZR	√	√	√	√	√	
1998	Vectra-B	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
1998	Vectra-B	Engine	Y16XE	√	√	√	√	√	
1998	Vectra-B	Engine	X18XE1	√	√	√	√	√	
1998	Vectra-B	Engine	20NEJ	√	√	√	√		
1998	Vectra-B	Engine	C20SEL	√	√	√	√	√	0166
1998	Vectra-B	Engine	X20DTH	√	√	√	√		
1998	Vectra-B	Engine	X20DTL	√	√	√	√		
1998	Vectra-B	Engine	X20XEV	√	√	√	√	√	
1998	Vectra-B	Engine	C22SEL	√	√	√	√		0204 0040 0202
1998	Vectra-B	Engine	16LZ2	√	√	√	√		
1998	Vectra-B	Engine	X18XE	√	√	√	√		0166 0202 0203 0204 0040
1998	Vectra-B	Engine	X25XE	√	√	√	√		
1998	Vectra-B	Infotainment System	Trip Info Display TID	√	√	√			
1998	Vectra-B	Infotainment System	Multi Info Display MID	√	√	√			
1998	Vectra-B	Infotainment System	Radio CAR 300	√	√	√			
1998	Vectra-B	Infotainment System	Radio CAR 400	√	√	√	√		
1998	Vectra-B	Infotainment System	Radio CDR 500	√	√	√	√		

1998	Vectra-B	Infotainment System	Radio CCRT 700	√	√	√	√		
1998	Vectra-B	Transmission	AF 13-II/17/20/22	√	√	√	√	√	
1998	Vectra-B	Transmission	AF 13II/20/22/30	√	√	√	√		
1997	Astra-F	Body	Immobiliser	√	√	√	√		
1997	Astra-F	Body	Airbag S	√	√	√	√		
1997	Astra-F	Body	Instrument	√	√	√	√	√	
1997	Astra-F	Body	Anti Theft Warning	√	√	√	√	√	
1997	Astra-F	Chassis	Traction Control(TC)	√	√	√	√		
1997	Astra-F	Engine	C14NZ	√	√	√	√		
1997	Astra-F	Engine	X14XE	√	√	√	√		
1997	Astra-F	Engine	16NZR	√	√	√	√		
1997	Astra-F	Engine	X16SZR	√	√	√	√	√	
1997	Astra-F	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
1997	Astra-F	Engine	18SE	√	√	√	√		
1997	Astra-F	Engine	C18SEL	√	√	√	√		0166
1997	Astra-F	Engine	X18XE	√	√	√	√		0166 0202 0203 0204 0040
1997	Astra-F	Engine	X20XEV	√	√	√	√	√	
1997	Astra-F	Engine	C14SE	√	√	√	√		
1997	Astra-F	Engine	C16SE		√	√	√		
1997	Astra-F	Engine	16LZ2	√	√	√	√		
1997	Astra-F	Infotainment System	Multi Info Dispaly MID	√	√	√			
1997	Astra-F	Infotainment System	Radio CAR 300	√	√	√			
1997	Astra-F	Infotainment System	Radio CAR 400	√	√	√	√		
1997	Astra-F	Infotainment System	Radio CDR 500	√	√	√	√		
1997	Astra-F	Transmission	AF 13II/20/22/30	√	√	√	√		

1997	Astra-F	Transmission	AF 13/14/20	√	√	√	√		
1997	Astra-G(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
1997	Astra-G(GMSA)	Engine	13 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1997	Astra-G(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1997	Astra-G(GMSA)	Engine	16 SE	√	√	√			
1997	Calibra	Body	Immobiliser	√	√	√	√		
1997	Calibra	Body	Airbag-S	√	√	√	√		
1997	Calibra	Body	Anti Theft Warning	√	√	√	√	√	
1997	Calibra	Chassis	Traction Control(TC)	√	√	√	√		
1997	Calibra	Engine	X20XEV	√	√	√	√	√	
1997	Calibra	Engine	X25XE	√	√	√	√		
1997	Calibra	Transmission	AF 13II/20/22/30	√	√	√	√		
1997	Calibra	Transmission	AF 13/14/20	√	√	√	√		
1997	Corsa-B	Body	Immobiliser	√	√	√	√		
1997	Corsa-B	Body	Airbag S	√	√	√	√		
1997	Corsa-B	Body	Anti Theft Warning	√	√	√	√	√	
1997	Corsa-B	Body	Instrument	√	√	√	√		
1997	Corsa-B	Chassis	ABS-5.3	√	√	√	√		
1997	Corsa-B	Chassis	Electronic Power Steering	√	√	√	√		
1997	Corsa-B	Engine	X10XE	√	√	√	√	√	0166 0196 0202
1997	Corsa-B	Engine	C14NZ	√	√	√	√		
1997	Corsa-B	Engine	X14SZ	√	√	√	√	√	
1997	Corsa-B	Engine	X14XE	√	√	√	√	√	
1997	Corsa-B	Engine	X16XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
1997	Corsa-B	Infotainment System	Radio CAR 300	√	√	√			
1997	Corsa-B	Infotainment System	Radio CAR 400	√	√	√	√		

1997	Corsa-B	Infotainment System	Radio CDR 500	√	√	√	√		
1997	Corsa-B	Transmission	AF 13/14/20	√	√	√	√		
1997	Corsa-B(GMSA)	Body	Immobiliser	√	√	√	√		0164 0165
1997	Corsa-B(GMSA)	Engine	13 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1997	Corsa-B(GMSA)	Engine	14 NE	√	√	√	√	√	0166 0190 0191 0056 0192
1997	Corsa-B(GMSA)	Engine	16 NE	√	√	√			
1997	Corsa-B(GMSA)	Engine	16 SE	√	√	√			
1997	Frontera	Body	Immobiliser	√	√	√	√		
1997	Frontera	Body	Anti Theft Warning	√	√	√			
1997	Frontera	Chassis	ABS 415	√	√	√	√		
1997	Frontera	Engine	25 TDS	√	√	√	√		
1997	Monterey	Body	Immobiliser	√	√	√	√		0164 0165
1997	Monterey	Chassis	ABS 5	√	√	√	√		
1997	Omega-B	Body	Immobiliser	√	√	√	√		
1997	Omega-B	Body	Airbag S	√	√	√	√		
1997	Omega-B	Body	Airbag SAB6	√	√	√	√		
1997	Omega-B	Body	Anti Theft Warning	√	√	√	√	√	
1997	Omega-B	Body	Electronic Climate Control	√	√	√	√		
1997	Omega-B	Chassis	ABS-5.3/5.4(+TC)	√	√	√	√	√	
1997	Omega-B	Chassis	Cruise Control	√	√	√	√		
1997	Omega-B	Chassis	ABS 2SE(+TC) (Anti-lock Braking System)	√	√	√	√		
1997	Omega-B	Chassis	ABS 2SE(+TC) (Anti-lock Braking System)	√	√	√	√		
1997	Omega-B	Engine	X20XEV	√	√	√	√	√	
1997	Omega-B	Engine	X25XE	√	√	√	√		
1997	Omega-B	Engine	Y30XE	√	√	√	√		
1997	Omega-B	Engine	20SE	√	√	√	√		
1997	Omega-B	Infotainment System	Trip Info Display TID	√	√	√			

1997	Omega-B	Infotainment System	Multi Info Dispaly MID	√	√	√			
1997	Omega-B	Infotainment System	Radio CAR 300	√	√	√			
1997	Omega-B	Infotainment System	Radio CAR 400	√	√	√	√		
1997	Omega-B	Infotainment System	Radio CDR 500	√	√	√	√		
1997	Omega-B	Transmission	AR 25/35	√	√	√			
1997	Sintra	Body	Immobiliser	√	√	√	√		0164 0165
1997	Sintra	Body	Body Control Module	√	√	√	√	√	0051 0058 0138
1997	Sintra	Infotainment System	Multi Info Dispaly MID	√	√	√			
1997	Sintra	Infotainment System	Radio CAR 300	√	√	√			
1997	Sintra	Infotainment System	Radio CAR 400	√	√	√	√		
1997	Sintra	Infotainment System	Radio CDR 500	√	√	√	√		
1997	Sintra	Transmission	AF 13II/20/22/30	√	√	√	√		
1997	Tigra	Body	Immobiliser	√	√	√	√		
1997	Tigra	Body	Airbag S	√	√	√	√		
1997	Tigra	Body	Anti Theft Warning	√	√	√	√	√	
1997	Tigra	Chassis	ABS-5.3	√	√	√	√		
1997	Tigra	Engine	X14XE	√	√	√	√	√	
1997	Tigra	Engine	X16XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
1997	Vauxhall VXR8	Body	Airbag-S	√	√	√	√		
1997	Vauxhall VXR8	Body	Anti Theft Warning	√	√	√	√	√	
1997	Vauxhall VXR8	Body	Immobiliser	√	√	√	√		0164 0165
1997	Vauxhall VXR8	Engine	X 14 XE	√	√	√	√	√	

1997	Vauxhall VXR8	Engine	X 16 XE	√	√	√	√	√	0166 0195 0196 0197 0019 0201
1997	Vauxhall VXR8	Engine	ABS-5.3 (Anti-lock Braking System)	√	√	√	√		
1997	Vauxhall VXR8	Infotainment System	Radio CAR 300	√	√	√			
1997	Vauxhall VXR8	Infotainment System	Radio CAR 400	√	√	√	√		
1997	Vauxhall VXR8	Infotainment System	Radio CDR 500	√	√	√	√		
1997	Vauxhall VXR8	Transmission	AF 13/14/20	√	√	√	√		
1997	Vectra-B	Body	Immobiliser	√	√	√	√		
1997	Vectra-B	Body	Instrument	√	√	√	√		
1997	Vectra-B	Body	Airbag	√	√	√	√		
1997	Vectra-B	Body	Airbag SAB6	√	√	√	√		
1997	Vectra-B	Body	Add On Heater	√	√	√	√	√	0122 0123
1997	Vectra-B	Body	Anti Theft Warning	√	√	√	√	√	
1997	Vectra-B	Body	Electronic Climate Control	√	√	√	√		
1997	Vectra-B	Chassis	ABS 415	√	√	√	√		
1997	Vectra-B	Chassis	ABS-5-TC	√	√	√	√		
1997	Vectra-B	Chassis	Cruise Control	√	√	√	√		
1997	Vectra-B	Engine	X16SZR	√	√	√	√	√	
1997	Vectra-B	Engine	X16XEL	√	√	√	√	√	0166 0194 0195 0196 0197 0019
1997	Vectra-B	Engine	X18XE1	√	√	√	√	√	
1997	Vectra-B	Engine	20NEJ	√	√	√	√		
1997	Vectra-B	Engine	C20SEL	√	√	√	√	√	0166
1997	Vectra-B	Engine	X20DTL	√	√	√	√		
1997	Vectra-B	Engine	X20XEV	√	√	√	√	√	
1997	Vectra-B	Engine	16LZ2	√	√	√	√		
1997	Vectra-B	Engine	X18XE	√	√	√	√		0166 0202 0203 0204 0040
1997	Vectra-B	Engine	X25XE	√	√	√	√		

1997	Vectra-B	Infotainment System	Trip Info Display TID	√	√	√			
1997	Vectra-B	Infotainment System	Multi Info Dispaly MID	√	√	√			
1997	Vectra-B	Infotainment System	Radio CAR 300	√	√	√			
1997	Vectra-B	Infotainment System	Radio CAR 400	√	√	√	√		
1997	Vectra-B	Infotainment System	Radio CDR 500	√	√	√	√		
1997	Vectra-B	Transmission	AF 13II/20/22/30	√	√	√	√		

XTOOL

Special Functions List

No.	Functions Name
SP0000	Seat Belt Reminder Data
SP0001	Clear Deployment Record
SP0002	Program Low Speed CAN-Bus Configuration
SP0003	Program Seat Belt Reminder
SP0004	Program High Speed CAN-Bus Configuration
SP0005	Program Vehicle Identification No.
SP0006	Steering Angle Sensor Calibration
SP0007	Display Immobiliser Status
SP0008	Engine Oil Status
SP0009	Read Odometer Value
SP0010	Electronic Throttle Control
SP0011	Program High Speed CAN-Bus Config
SP0012	Program Variant Configuration
SP0013	Program Idle Speed
SP0014	Reset 02-Loop Block Learn Map
SP0015	Program VIN
SP0016	Fuel Trim Reset
SP0017	HO2S Heater Learn
SP0018	Idle Learn
SP0019	Engine Oil Life Reset
SP0020	Injector Cutoff Test
SP0021	Replace Injector
SP0022	Program CAN Configuration
SP0023	Replace Fuel Pump
SP0024	Replace Mass Air Flow Sensor
SP0025	Replace Rail Pressure Sensor
SP0026	Replace Diesel Particulate Filter
SP0027	Replace Pre-catalyst
SP0028	Regeneration D.Particulate Filter

SP0029	Replace Differential-Press.Sensor
SP0030	Fuel Consumption Correction
SP0031	Pressure Regulator Sol. Valve Test
SP0032	TCC Solenoid Valve Test
SP0033	Reset ECU
SP0034	Reset Learned Values
SP0035	Learn Gearbox Parameters
SP0036	Touch Point Adaption
SP0037	Fuel Injector Balance
SP0038	Learn Functions
SP0039	Reset Functions
SP0040	CAN Bus Configuration Learn
SP0041	RPM Control
SP0042	Replace Precatalyst
SP0043	Regeneration Diesel Particulate Filter
SP0044	Brake Padel Position Sensor Learn
SP0045	Clear Driver Window Learned Values
SP0046	Read LIN Bus Device ID Information
SP0047	Battery Sensor Module Learn
SP0048	Brake Pedal Position Sensor Learn
SP0049	Injector Flow Rate Programming
SP0050	Throttle Sweep
SP0051	Transmission Adaptive Pressure Reset
SP0052	Key Program
SP0053	Program Mid Speed CAN-Bus Configuration
SP0054	Reset CIM Module
SP0055	Program Immobiliser Function
SP0056	Instantaneous Tank Content Control
SP0057	Engine Speed Control
SP0058	Vehicle Speed Control
SP0059	Instrument Dimming Test
SP0060	LED Dimmed Illumination Test

SP0061	LCD Display Dimmed Illumination Test
SP0062	Bleed Clutch Hydraulic
SP0063	Sensor Cluster Calibration
SP0064	Program High Speed CAN-Bus Config
SP0065	Program Tyre Circumference
SP0066	Reset O2-Loop Block Learn Map
SP0067	Program Tyre Circumference
SP0068	Program Variant Configuration
SP0069	Program Learned Values
SP0070	Replace O2 Sensor
SP0071	O2 Sensor Connection Check
SP0072	Swirl Level Control Actuator
SP0073	SLT Test (Solenoid Valve-Load)
SP0074	SLU Test (Solenoid Valve-TCC)
SP0075	SLC1 (Solenoid Valve) Control Test
SP0076	SLC2 (Solenoid Valve) Control Test
SP0077	SLC3 (Solenoid Valve) Control Test
SP0078	SLB1 (Solenoid Valve) Control Test
SP0079	Learn Selector Lever N Position
SP0080	Program High Speed CAN-Bus Configuration
SP0081	DPF Regeneration
SP0082	Steering Wheel Angle Sensor Reset
SP0083	Steering Wheel Angle Sensor Learn
SP0084	Clutch Pedal Position Learn
SP0085	HO2S Learn
SP0086	Yaw Rate Sensor Learn
SP0087	Steering Wheel Angle Sensor
SP0088	Power Steering Softstops Reset
SP0089	Power Steering Softstops Learn
SP0090	Steering Wheel Angle Sensor Centering
SP0091	Crankshaft Position Variation Learn
SP0092	Idle Speed Adjustment

SP0093	Throttle Actuator Reset
SP0094	Fuel Rail Pressure Sensor Or Fuel Rail Learn
SP0095	Remote Vehicle Start Disable History Reset
SP0096	APP Learn
SP0097	Crankshaft Position Reluctor Wheel Learn
SP0098	DPF Pressure Sensor Learn
SP0099	EGR Valve Learn
SP0100	Exhaust Gas Temperature Sensor Learn
SP0101	Flywheel Learn
SP0102	MAF Sensor Learn
SP0103	Turbocharger Learn
SP0104	DPF Reset
SP0105	Glow Plug Control Module Reset
SP0106	DPF Service Regeneration
SP0107	DPF Pressure Learn
SP0108	Clear Disable History Data
SP0109	Park Brake Calibration
SP0110	Park Brake Cable Replacement Procedure
SP0111	Cranksh. Pos. Rel. Wheel Learn
SP0112	Replace EGR
SP0113	Replace Turbo charger
SP0114	Replace Glow Time Relay
SP0115	Replace Flywheel
SP0116	Replace Throttle Actuator
SP0117	Replace Exhaust Gas Temp. Sensor
SP0118	Replace Accel. Pedal Pos.Sensor
SP0119	Cranksh. Pos. Rel. Wheel Learn
SP0120	Replace Accel. Pedal Pos. Sensor
SP0121	DPF Pressure Sensor Reset
SP0122	Learned Values Reset
SP0123	Reset Overheat
SP0124	Reset Start Counter

SP0125	Learn Values Reset
SP0126	SLC1 (Solenoid Valve) Control Test
SP0127	Clutch Padel Position Learn
SP0128	Fuel Injector Learn
SP0129	Catalyst Reset
SP0130	Fuel Pressure Regulator Learn
SP0131	Neutral Position Sensor Learn
SP0132	Exhaust Gas Temperature Sensor Reset
SP0133	Idle Air Control Reset
SP0134	Learn Values Reset
SP0135	NOx Catalyst Reset
SP0136	Reductant Fluid Tank Level Reset
SP0137	Reductant System Data Reset
SP0138	Compression Test
SP0139	Interior Lamp Test
SP0140	Erase Key Set
SP0141	Program Transponder-Keys
SP0142	Calibration
SP0143	Longitudinal Sensor Calibration
SP0144	Learn Partnumber of Sensor
SP0145	Program Variant Coding
SP0146	Fuel Tank Ventilation Control
SP0147	EGR Control
SP0148	Small Injection Quantity Learning
SP0149	Clutch Test
SP0150	Reset Engine Oil Life
SP0151	Blower Fan Test
SP0152	Reset EGR Cooler Running Counter
SP0153	Clutch Calibration Value
SP0154	Line Pressure Solenoid
SP0155	TCC Solenoid Test
SP0156	Shift Pressure Solenoid Test

SP0157	Gear Control
SP0158	Reset Learned Valves
SP0159	Blending Flap Motor Test
SP0160	Distribution Flap Motor Test
SP0161	Calibrate Step Motors
SP0162	HO2S Data
SP0163	Idel Learn
SP0164	Exh. Gas Temp. Sensor Reset
SP0165	Erase Key
SP0166	Programming
SP0167	Adjust Idle Speed
SP0168	Start Fuel Quantity Offset
SP0169	Engine Speed (RPM) Control
SP0170	Coolant Temperature Control
SP0171	Line Pressure Solenoid Test
SP0172	Read crankshaft angle sensor error
SP0173	Read throttle again
SP0174	Injector 1 Cutoff
SP0175	Tyre Size Calibration
SP0176	Programming Variant Configuration
SP0177	Service Light Reset
SP0178	Service Due In
SP0179	Learn DDS(Deflation Detect. System)
SP0180	Instantaneous Tank Content
SP0181	Erase Transponder-Keys And Remote
SP0182	Program Transponder-Keys And Remote
SP0183	Light Cigarette Lighter
SP0184	Canister Purge
SP0185	Intake Camshaft Phasing B1 Test
SP0186	Intake Camshaft Phasing B2 Test
SP0187	Pressure Reg. Sol. Control Test
SP0188	TCC Solenoid Valve Control Test

SP0189	Neutral Control Sol. Valve Test
SP0190	ABS Initialization
SP0191	CO Adjustment
SP0192	RON Adjustment
SP0193	Idle Air Control Test
SP0194	Fuel Tank Ventilation Valve Test
SP0195	Reset Idle Adjust
SP0196	Reset Knockmap
SP0197	Reset O2 BLM
SP0198	Reset IAC BLM
SP0199	IdleSpeed Adjust
SP0200	Adjust Idle Drive
SP0201	Adjust Idle P-N
SP0202	EGR Pulse Ratio Test
SP0203	Injector Cutoff
SP0204	Exhaust Gas Recirculation Control
SP0205	IAC Control(Idle Air Control)
SP0206	AWD Disabled-by-Malfunction Counter Reset
SP0207	B237D Easy Entry Seat Position Sensor - Driver Learn
SP0208	B237P Easy Entry Seat Position Sensor - Passenger Learn
SP0209	CAN Bus Configuration Learn
SP0210	HO2S Heater Resistance Learned Values Reset
SP0211	HVAC Actuators Learn
SP0212	LED Dimming
SP0213	MOST Bus Diagnostic Starting Point
SP0214	SIM Card Data
SP0215	WLAN Service Set Identifier (SSID) Reset
SP0216	WLAN Password Reset
SP0217	Content Theft Deterrent Trigger History
SP0218	Service Interval Reset
SP0219	Backup Park Lock Actuator Disarming
SP0220	Transmission Range Control Module Range Motor Position Learn

SP0221	Transmission Learn
SP0222	Shift Transmission Into Neutral
SP0223	Gear Selector -N- Position Learn
SP0224	Transmission Adaptive Pressure Reset
SP0225	DPF Regeneration
SP0226	DPF Service Regeneration
SP0227	DPF Pressure Sensor Learn
SP0228	DPF Pressure Sensor Reset
SP0229	DPF Reset
SP0230	Overboost Counter Reset
SP0231	Distance Sensing Cruise Control Module
SP0232	Vehicle Health Data Upload
SP0233	Vehicle Type
SP0234	Vehicle Configuration Reset
SP0235	Vehicle Direction Camera Learn
SP0236	Vehicle Inclination Sensor
SP0237	VIN Digits 10-17 Right Headlamp High Beam Control Module
SP0238	VIN Digits 10-17 Left Headlamp High Beam Control Module
SP0239	Exterior Lighting Short Circuit Protection Reset
SP0240	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0241	Catalyst Reset
SP0242	Proxy Configuration Data
SP0243	Code Index
SP0244	Idle Speed Adjustment
SP0245	Idle Learn
SP0246	Idle Air Control Reset
SP0247	NOx Sensor 1 Reset
SP0248	NOx Sensor 2 Reset
SP0249	NOx Catalyst Reductant Loading Reset
SP0250	NOx Catalyst Reset
SP0251	NOx Adsorber Catalyst Data Reset
SP0252	NOx Adsorber Catalyst Reset

SP0253	Gear Selector -N- Position Learn
SP0254	Backup Park Lock Actuator Arming
SP0255	EV Range Reset
SP0256	Power Steering Softstops Learn
SP0257	Power Steering Softstops Reset
SP0258	Read LIN Bus Device ID Information
SP0259	Learned Values Reset
SP0260	Generator Learned Values Reset
SP0261	Engine Oil Life Reset
SP0262	ECM Reset
SP0263	Engine Serial Number
SP0264	Steering Wheel Angle Sensor Centering
SP0265	Steering Wheel Angle Sensor Learn
SP0266	Steering Wheel Angle Sensor Learn
SP0267	Steering Wheel Angle Sensor Centering
SP0268	Steering Wheel Angle Sensor Reset
SP0269	Deflation Detection System Reset
SP0270	Flywheel Learn
SP0271	Exhaust Flow Control Valve Learn
SP0272	Exhaust Gas Temperature Sensor Reset
SP0273	EGR Valve 1 Learn
SP0274	EGR Valve 2 Learn
SP0275	EGR Valve Learn
SP0276	EGR Cooler Bypass Valve Learn
SP0277	Chime Volume Level Setup
SP0278	Auxiliary Heater Self Learn
SP0279	Steering Wheel Angle Sensor Reset
SP0280	Reset Functions
SP0281	Learned Values Reset
SP0282	Copy and Restore Tire Pressure Monitoring Information
SP0283	Configuration/Reset Functions for this module are located in the Engine
SP0284	High Idle Speed Configuration

SP0285	High Pressure Fuel Pump Learn
SP0286	Change Wheel Size
SP0287	Trailer Hitch Learn
SP0288	Yaw Rate Sensor Learn
SP0289	Lateral Acceleration Sensor Learn
SP0290	Lateral Acceleration Sensor Reset
SP0291	Rear Differential Clutch Service Calibration Setup
SP0292	Rear Camera Alignment Learn
SP0293	Rearview Camera Screen Reverse Path Indicator Line
SP0294	Reductant Pump Learn
SP0295	Reductant Pump Bleed
SP0296	Reductant Fluid Tank Level Reset
SP0297	Reductant Fluid Reservoir Assembly Learn
SP0298	Reductant Heater 2 Learn
SP0299	Reductant Injector Learn
SP0300	Reductant System Data Reset
SP0301	Hybrid/EV Battery Contactor Open Reasons Reset
SP0302	Hybrid/EV Battery Pack Charging Adaptive Learn Reset
SP0303	Hybrid/EV Battery Pack Capacity Learn
SP0304	Hybrid/EV Battery Pack Capacity Reset
SP0305	Hybrid/EV Battery Pack Data Reset
SP0306	Calculated Fuel Economy Setup
SP0307	HVAC Afterblow Configuration
SP0308	HO2S Learn
SP0309	HO2S Learned Values Reset
SP0310	APP Learn
SP0311	Reset High Voltage Disable Request After Crash Event Detected
SP0312	Battery Reconnect Detected Flag Reset
SP0313	Inspection/Maintenance Data
SP0314	Depressurize System
SP0315	Throttle Body Idle Air Flow Compensation Reset
SP0316	Throttle Position Learn

SP0317	Throttle Actuator Reset
SP0318	Intake Air Flow Valve Learn
SP0319	Intake Manifold Runner Control Valve Learn
SP0320	Intake System Learned Values Reset
SP0321	Static Long Range Radar Sensor Module Learn
SP0322	Liftgate Disable History Reset
SP0323	Liftgate Maximum Open Position Learn
SP0324	Neutral Position Sensor Learn
SP0325	Air Conditioning Learn
SP0326	Control Module Reset
SP0327	Control Module Self-Test
SP0328	Clutch Control Module/Rear Drive System Matching Identification Setup
SP0329	Clutch Pedal Position Learn
SP0330	Clutch Position Learn
SP0331	Clutch Position Learn
SP0332	Tire Type/Pressure Selection
SP0333	Tire Pressure Sensors Manual Learn
SP0334	Tire Pressure Sensors Learn
SP0335	Key Fob 1
SP0336	Key Fob 2
SP0337	Key Fob 3
SP0338	Key Fob 4
SP0339	Key Fob 5
SP0340	Key Fob 6
SP0341	Key Fob 7
SP0342	Key Fob 8
SP0343	Hands-Free Liftgate Sensor Control Module Calibration
SP0344	Module Setup
SP0345	Exhaust Aftertreatment Fuel Injector Learn
SP0346	Exhaust Aftertreatment System
SP0347	Configure New Module
SP0348	Injector Flow Rate Programming

SP0349	Crash Event Detection Reset
SP0350	Yaw Rate Sensor Reset
SP0351	Yaw Rate Sensor Learn
SP0352	Manifold Absolute Pressure Sensor Learn
SP0353	Starter Activation Counter Reset
SP0354	Starter Activations Reset
SP0355	Activate Battery Saver Mode
SP0356	Cylinder 1 Injector Flow Identifier
SP0357	Cylinder 1 Fuel Injector Correction Value Reset
SP0358	Cylinder 2 Injector Flow Identifier
SP0359	Cylinder 2 Fuel Injector Correction Value Reset
SP0360	Cylinder 3 Injector Flow Identifier
SP0361	Cylinder 3 Fuel Injector Correction Value Reset
SP0362	Cylinder 4 Injector Flow Identifier
SP0363	Cylinder 4 Fuel Injector Correction Value Reset
SP0364	Cylinder Head Learned Values Reset
SP0365	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0366	Headlamp Leveling Sensor Learn
SP0367	Front Camera Alignment Learn
SP0368	Frontview Camera Learn
SP0369	Frontview Camera Learn
SP0370	Erase/Program All Key Fobs
SP0371	Clear All Vehicle DTCs
SP0372	Clear Passenger Window Learned Values
SP0373	Clear Driver Window Learned Values
SP0374	Erase All Key Fobs
SP0375	Clear Disable History Data
SP0376	Clear Right Rear Window Learned Values
SP0377	Clear Active Pull Compensation Learned Limits
SP0378	Clear Left Rear Window Learned Values
SP0379	Crankshaft Position Variation Learn
SP0380	Crankshaft Position Reluctor Ring Learn

SP0381	Maximum Vehicle Speed for PTO Operation
SP0382	Cancel Camera Learn
SP0383	Misfire Data
SP0384	Fuel-Borne Catalyst Tank Level Reset
SP0385	Fuel Rail Pressure Sensor or Fuel Rail Learn
SP0386	Fuel Trim Reset
SP0387	Fuel Injector Learn
SP0388	Fuel Injection Small Quantity Data Reset
SP0389	Fuel Cut-Off System
SP0390	Fuel Injection Small Quantity Learn
SP0391	Water In Fuel Sensor Learn
SP0392	Fuel Trim Reset
SP0393	Fuel Pressure Regulator Learn
SP0394	Brake Pressure Sensor Calibration
SP0395	Brake Booster Pump Motor Activation Counter Reset
SP0396	Erase Valet Mode Code
SP0397	Initiate Camera Learn Mode
SP0398	Set Time and Date
SP0399	Park Brake Calibration
SP0400	All Cylinders Fuel Injector Correction Value Reset
SP0401	All Cameras Alignment Learn
SP0402	All Tire Pressure Sensors Learn
SP0403	Tire Pressure Sensor Signal Reset
SP0404	Chime Volume Level Setup
SP0405	Deactivate Battery Saver Mode
SP0406	Trailer Hitch Learn
SP0407	Trailer Stability Control
SP0408	Not Connected
SP0409	Temperature Code Index
SP0410	Turbocharger Learn
SP0411	Turbocharger Learned Values Reset
SP0412	Turbocharger Wastegate Learned Values Reset

SP0413	Next Available Slot
SP0414	Info Display/Infotainment Faceplate Reset
SP0415	Battery Sensor Module Learn
SP0416	Battery Sensor Module Learn
SP0417	Battery Learned Values Reset
SP0418	Battery Saver Mode
SP0419	Suspension Position Sensor Trim Height
SP0420	Option Configuration
SP0421	CAN Bus Configuration Learn
SP0422	Transmission Adaptive Values Learn
SP0423	VIN Learn
SP0424	Learn Functions
SP0425	Inlet Solenoid Valves Learn
SP0426	Cruise Control Learn
SP0427	Hydraulic Clutch Bleed
SP0428	Remove/Reset Module
SP0429	Calculated Fuel Economy Setup
SP0430	Connected
SP0431	Audio Code Index
SP0432	Fuel Rail Overpressure Counter Reset
SP0433	Accelerator Pedal Position Sensor Learned Values Reset
SP0434	Right Rear Tire Pressure Sensor Learn
SP0435	Right Rear Brake Caliper Piston Reset
SP0436	Right Front Tire Pressure Sensor Learn
SP0437	Right Camera Alignment Learn
SP0438	Right Park Brake Actuator Reset
SP0439	Remote Vehicle Speed Limiting Reset
SP0440	Long Range Radar Sensor Module Learn
SP0441	Long Range Radar Sensor Module Learn
SP0442	Setup SDM Part Number in BCM
SP0443	Showroom Mode
SP0444	DC Charging Disabled Reset

SP0445	Stop Lamps
SP0446	Brake Pedal Position Sensor Learn
SP0447	Brake Pressure Sensor Reset
SP0448	MAF Sensor Learn
SP0449	Reset Teen Driver Key PIN
SP0450	Parking Assist Sensor Learn
SP0451	Parking Heater Overheat Counter Reset
SP0452	Parking Heater Failed Start Counter Reset
SP0453	Park Brake Calibration
SP0454	Park Brake Reset
SP0455	Assembly Plant Mode
SP0456	Automatic Park Brake Apply Function
SP0457	Adaptive Pressure Control Learn
SP0458	Total Engine Overspeed Time Reset
SP0459	Longitudinal and Lateral Acceleration Sensor Learn
SP0460	Longitudinal Acceleration Sensor Reset
SP0461	Longitudinal Acceleration Sensor Learn
SP0462	Longitudinal Acceleration Sensor Reset
SP0463	Assembly Plant Emission and Fuel Economy Test
SP0464	Maximum Vehicle Speed Setup
SP0465	Left Rear Tire Pressure Sensor Learn
SP0466	Left Rear Brake Caliper Piston Reset
SP0467	Left Front Tire Pressure Sensor Learn
SP0468	Left Camera Alignment Learn
SP0469	Left Park Brake Actuator Reset
SP0470	Calculated Fuel Economy Setup
SP0471	HVAC Actuators Learn
SP0472	CAN Bus Configuration Learn
SP0473	Brake Pedal Position Sensor Learn
SP0474	Clutch Pedal Position Learn
SP0475	Idle Learn
SP0476	Fuel Trim Reset

SP0477	Battery Sensor Module Learn
SP0478	Clear Driver Window Learned Values
SP0479	Clear Passenger Window Learned Values
SP0480	Read LIN Bus Device ID Information
SP0481	Tire Pressure Sensors Learn
SP0482	Tire Type/Pressure Selection
SP0483	Steering Wheel Angle Sensor Reset
SP0484	Longitudinal Acceleration Sensor Reset
SP0485	Deflation Detection System Reset
SP0486	Steering Wheel Angle Sensor Centering
SP0487	Exhaust Flow Control Valve Learn
SP0488	Cylinder Deactivation Exhaust Flow Control Valve Learn
SP0489	Depressurize System
SP0490	Hydraulic Clutch Bleed
SP0491	Clutch Position Learn
SP0492	Park Brake Calibration
SP0493	Headlamp Leveling Sensor Learn
SP0494	Inspection/Maintenance Data
SP0495	Code Index
SP0496	VIN Learn
SP0497	Option Configuration
SP0498	Setup SDM Part Number in BCM
SP0499	Erase All Key Fobs
SP0500	Next Available Slot
SP0501	Key Fob 1
SP0502	Key Fob 2
SP0503	Key Fob 3
SP0504	Key Fob 4
SP0505	Tire Pressure Sensor Signal Reset
SP0506	Vehicle Inclination Sensor
SP0507	Configure New Module
SP0508	Set Time and Date

SP0509	Remove/Reset Module
SP0510	Temperature Code Index
SP0511	Steering Wheel Angle Sensor Learn
SP0512	Clear Disable History Data
SP0513	Yaw Rate Sensor Reset
SP0514	Yaw Rate Sensor Learn
SP0515	Injector Flow Rate Programming
SP0516	Brake Pressure Sensor Calibration
SP0517	Clear Left Rear Window Learned Values
SP0518	Clear Right Rear Window Learned Values
SP0519	Transmission Adaptive Values Learn
SP0520	Erase Valet Mode Code
SP0521	MOST Bus Diagnostic Starting Point
SP0522	Rear Brake Caliper Piston Retract
SP0523	Rear Brake Caliper Piston Extend
SP0524	Control Module Reset
SP0525	Frontview Camera Learn
SP0526	HVAC Afterblow Configuration
SP0527	Liftgate Maximum Open Position Learn
SP0528	B237D Easy Entry Seat Position Sensor - Driver Learn
SP0529	B237P Easy Entry Seat Position Sensor - Passenger Learn
SP0530	Engine Coolant Overtemperature Warning Reset
SP0531	Generator Overtemperature Counter Reset
SP0532	Longitudinal and Lateral Acceleration Sensor Learn
SP0533	Proxy Configuration Data
SP0534	Battery Saver Mode
SP0535	Fuel Cut-Off System
SP0536	Auxiliary Heater Self Learn
SP0537	Module Setup
SP0538	Service Interval Reset
SP0539	Distance Sensing Cruise Control Module
SP0540	Fuel Rail Pressure Sensor or Fuel Rail Learn

SP0541	Ambient Air Temperature Calculation Reset
SP0542	Engine Oil Life Reset
SP0543	Fuel Injection Small Quantity Data Reset
SP0544	Adaptive Pressure Control Learn
SP0545	Transmission Adaptive Pressure Reset
SP0546	Content Theft Deterrent Trigger History
SP0547	Lateral Acceleration Sensor Learn
SP0548	Longitudinal Acceleration Sensor Learn
SP0549	Brake Pressure Sensor Reset
SP0550	Lateral Acceleration Sensor Reset
SP0551	Trailer Brake Control
SP0552	Shift Transmission Into Neutral
SP0553	Auxiliary Heater Overheat Counter Reset
SP0554	Auxiliary Heater Failed Start Counter Reset
SP0555	Exterior Lighting Short Circuit Protection Reset
SP0556	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
SP0557	Hybrid/EV Battery Pack Capacity Learn
SP0558	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
SP0559	Fuel Economy Reset
SP0560	Hybrid/EV Battery Contactor Open Reasons Reset
SP0561	Hybrid/EV Battery Pack Charging Adaptive Learn Reset
SP0562	Hybrid/EV Battery Pack Data Reset
SP0563	HO2S Heater Learn
SP0564	Reset High Voltage Disable Request After Crash Event Detected
SP0565	Electronic Brake Control Module Learn
SP0566	Erase/Program All Key Fobs
SP0567	Key Fob 5
SP0568	Key Fob 6
SP0569	Key Fob 7
SP0570	Key Fob 8
SP0571	Fuel Composition Reset
SP0572	Gear Selector -N- Position Learn

SP0573	Learned Values Reset
SP0574	Driver Seat Easy Entry Position Sensor Learn
SP0575	Passenger Seat Easy Entry Position Sensor Learn
SP0576	Engine Run-in Performance Limitation
SP0577	Overboost Counter Reset
SP0578	Knock Counter Reset
SP0579	Passenger Presence Sensor Learn
SP0580	Preferred Roaming List Update
SP0581	Adjustable Pedals Softstops Learn
SP0582	Clutch Control Module/Rear Drive System Matching Identification Setup
SP0583	Reset
SP0584	Water In Fuel Sensor Reset
SP0585	Mass Air Flow
SP0586	Average Fuel Age Reset
SP0587	Fuel Rail Pressure Relief Valve Learned Values Reset

*XT*TOOL